

KEYENCE

NEW Ultra High-Speed, Flexible Image
Processing System
XG-8000/7000 Series


New function: LumiTrax™

Integration of camera, lighting and inspection algorithm

THE POWER TO TAKE YOU AHEAD



XG-8000 Series Ver. 5.4
XG-7000 Series Ver. 4.3

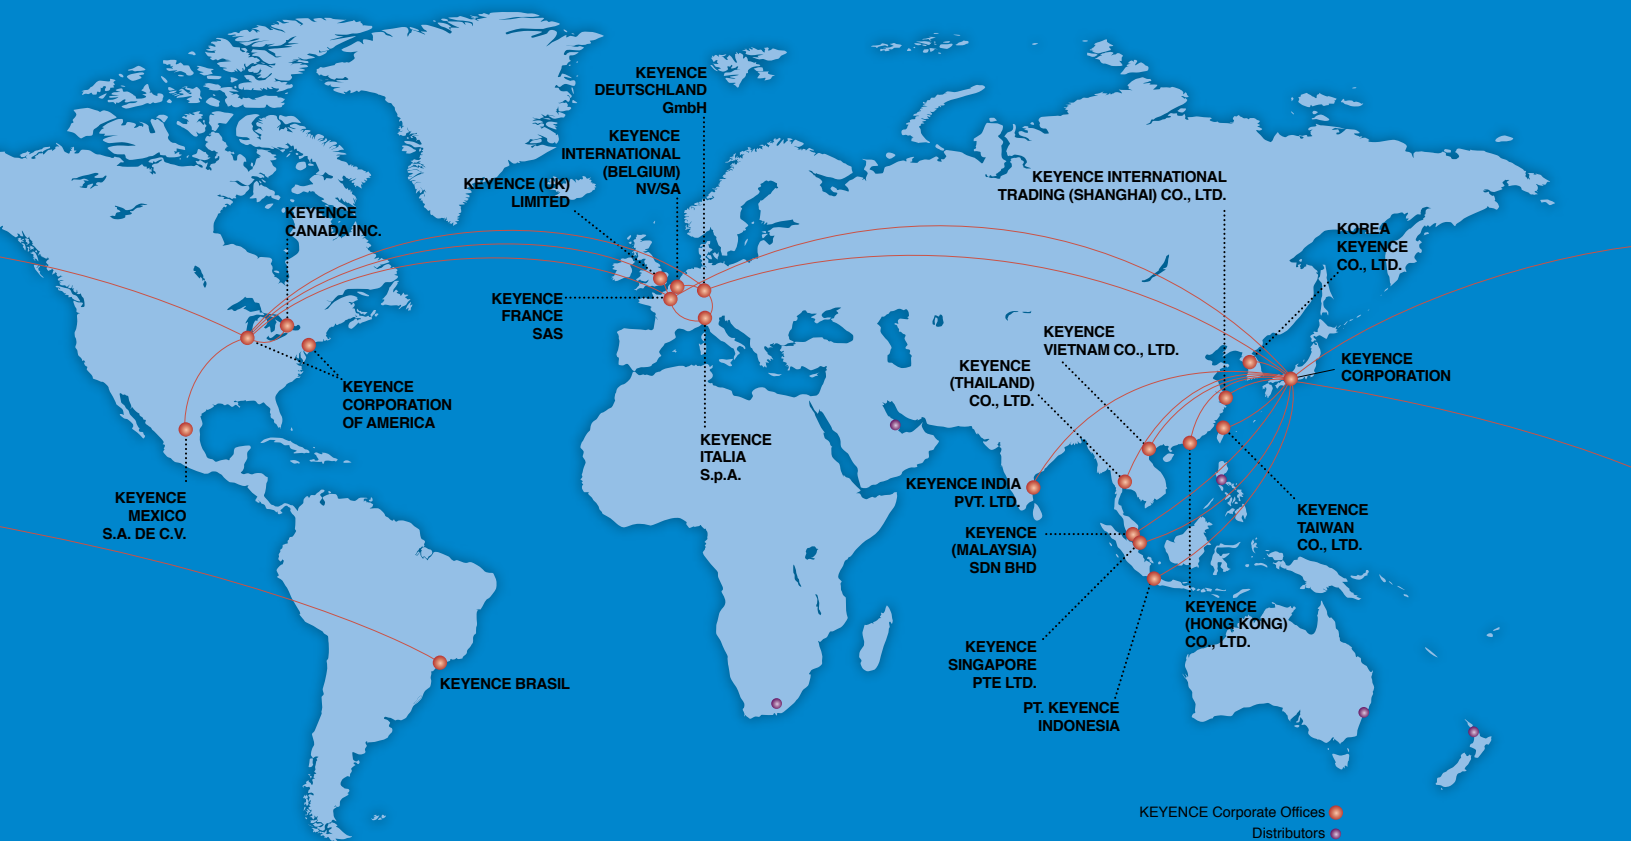

THE EVER-EVOLVING KEYENCE VISION SYSTEMS CONTINUE TO OFFER THE SOLUTIONS AND SUPPORT THAT MEET GLOBAL CUSTOMER NEEDS

Image processing
solutions used by
the professionals

Complete selection
including peripherals
and free trials

Instant delivery
throughout
the world

Direct support
from a highly
trained team

Peripheral Equipment

The majority of the extensive product line up such as cameras, controllers, lighting equipment and peripherals are available for immediate delivery. KEYENCE offers a complete solution and the support for all your image processing needs.



Vision Systems



Illumination



Lenses



Monitors

THE EVOLUTION OF KEYENCE MACHINE VISION SYSTEMS

The first KEYENCE vision system



VX Series



CV-100/300 Series



XV Series



CV-500/700 Series



CV-2100/2600 Series




CV-5000 Series



CV-3000 Series

Progression of KEYENCE Vision Systems

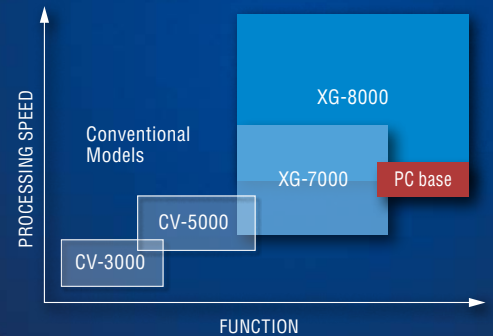

XG-7000/8000 Series

1980s

The VX Series
The first image processing system, is developed for general image processing.

2003s

CV-2100
High-speed general-purpose vision system incorporating twin processors and digital transfer camera is released.

2005 to 2008

CV-3000/CV-5000
Raises the bar for machine vision performance with 4 monochrome/color camera connectivity, unmatched speed, and the industry's most user friendly programming interface.

2010

XG-7000
A new approach to vision with customization and simple operating methods that greatly reduces programming difficulty.

2011

XG-8000
Multi-camera and line scan connectivity with multi-core processing providing even greater application solving capabilities.

WORLD'S MOST POWERFUL VISION SOFTWARE

Scripting

Tracing

Development

Testing

Providing a system where any user can create the ideal vision solution easily and quickly. The XG Series is a breakthrough in vision system technology that provides the flexibility needed to solve any application.

WORLD'S MOST POWERFUL MULTI CAMERA HARDWARE



Touch Panel

Area Camera

Line Scan Camera

Select from a family of cameras ranging from standard VGA to 21 megapixel to line scan cameras. The XG Series has an expandable platform that allows up to 8 camera connections on one controller.

EASY SETUP USING THE TOUCH PANEL DISPLAY



With the addition of CA-MP120T touch panel and VNC server functionality, the XG Series has never been easier to use! The touch panel can be used online to make quick changes to the program and VNC can be used to access the XG over a network through multiple devices.



Touch Panel

4WAY


Controller

SIMPLE SETUP USING THE HANDHELD CONTROLLER



Creation of a program can be done on-line using the handheld controller. After creation, verification and editing can be conducted to increase the inspection accuracy without stopping the line using the 'Online Re-Test' function during operation. This allows the re-testing of stored images even during operation based on images saved to the internal buffer or to an FTP server. Program changes can be tested on-site without influencing the current production.

PC INTERACTION WITH MOUSE CONTROL

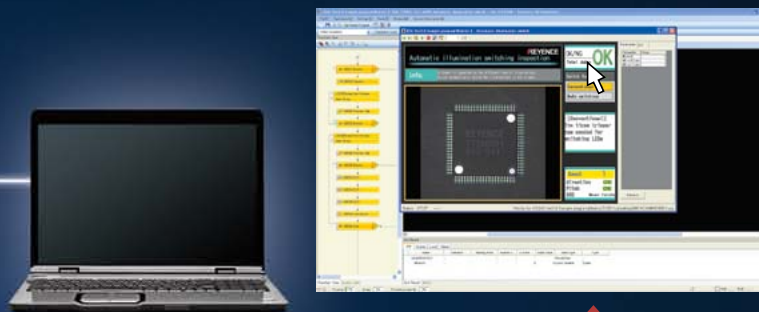

Upload/download settings




Settings can also be verified offline. Using stored images output by the controller during operation, the PC simulator mimics on-site result data of the hardware controller. Even if the equipment cannot be stopped, the statistical analysis function of the simulator conducts the same action as the actual controller. After confirming the optimal settings with the simulator, the program setting can be uploaded to the controller providing seamless and efficient interaction with the controller.

Simulator+


APPROACH

VisionEditor

INTEGRATED DEVELOPMENT ENVIRONMENT

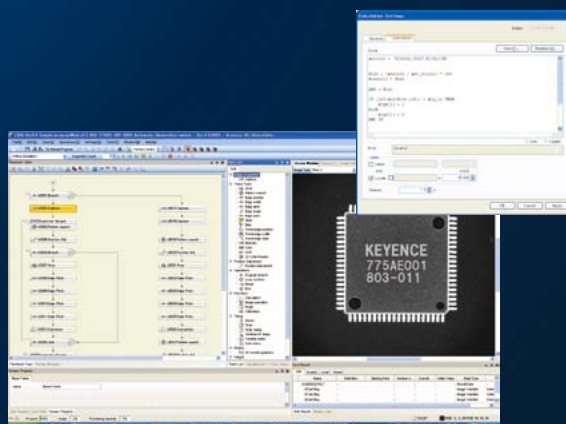

New user-defined image development process using a highly efficient flow chart system, powerful algorithms and C-language Unit.

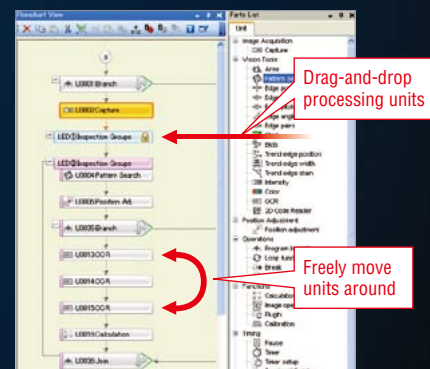

Creation of the image processing flow is made very intuitive with operations such as drag and drop. Extreme flexibility is possible through the combination of flexible calculation processing, abundant vision processing tools, conditional branching and repetitive processing.



XG PERFORMANCE

Flexible hardware
Powerful Inspection Toolset
User friendly interface
Intuitive programming flow
Increasing speed, stability and quality to stay
at the forefront of the vision market



Hardware

Reliable and ultra high-speed
hardware design

- Multi core Processor
- Solid state hard drive
- Integrated lighting controller
- 2K, 4K, 8K line scan camera support
- Touch screen control

CAMERAS

[Page 22](#)

HARDWARE

[Page 28](#)

PRE-PROCESSING

[Page 31](#)

Cameras

Simultaneous use of up to 8 cameras at once.
22 color & monochrome area cameras and
3 line scan camera options.


- High speed(16x) 470k, 2 mega & 5 megapixel
- High-resolution 21 megapixel
- Ultra small 12 mm (0.47")
- 2K, 4K, 8K line scan camera



Pre-Processing

Optimizing the image using
advanced pre-processing functions

- Filters
- Image operation & Image stitching
- Calibration unit
- Color processing
- Automatic HDR image creation

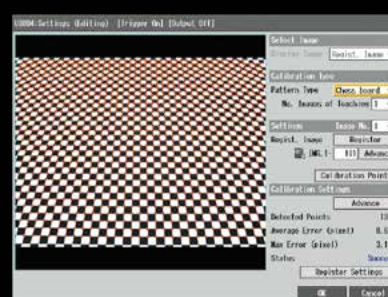


INDUSTRY SPECIFIC FUNCTIONALITY



SEMICONDUCTOR

[Page 10](#)

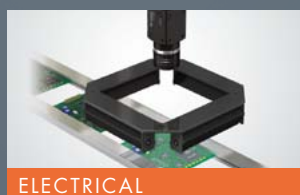

ELECTRICAL

[Page 12](#)



AUTOMOTIVE

[Page 14](#)



Tool Set

Abundant inspection algorithms, variables and calculations.

Stain
Trend edge
Trend edge stain
OCR
1D/2D


Image calibration
Pattern search
Calculation / Scripting
Loop
Branching

TOOL SET

Page 38

INTERFACE OPTIONS

Page 44

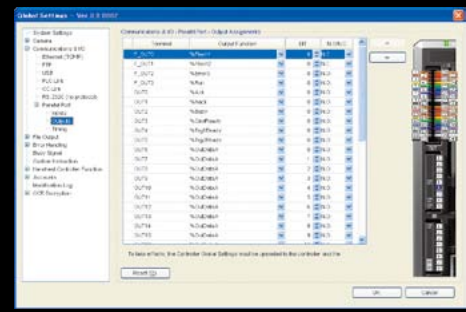

Input/Output

Simpler, customizable control

Discrete I/O
FTP server
EtherNet/IP™
PROFINET
TCP/IP

RS-232C
CC-Link
PLC-Link
USB



INPUT OUTPUT

Page 46

VISION EDITOR

Page 50

GUI Creation


A custom user-interface anybody can use

VisionTerminal
Simulator +
Mouse operation
Simple pendant adjustment

VisionEditor

Development of a complete vision solution

C Plug In
ActiveX Control
Flowchart creation
Debugging
Testing
Customization

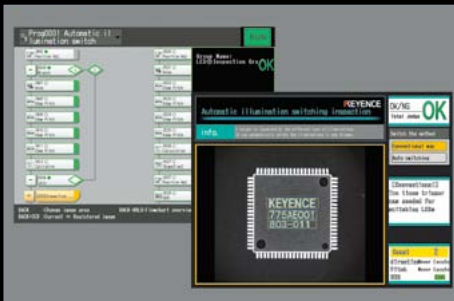

FOOD & PACKAGING

Page 16



MEDICAL & PHARMACEUTICAL


Page 18



AUTOMATION

Page 20

SEMICONDUCTOR

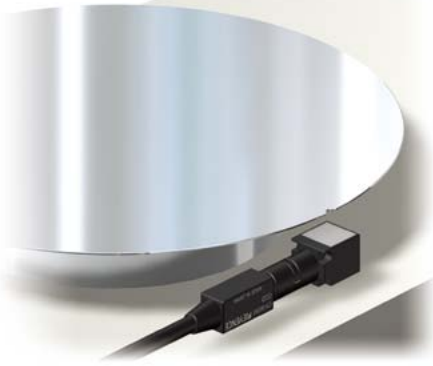

Wafer Alignment



The XG Series machine vision systems allow easy detection of the notch on a wafer for alignment purposes in the fab.

The vision system can detect the notch as the wafer is spun past the camera or find the location of the notch around the circumference when the wafer is presented.

Process Control

Vision systems can be used in a variety of front end and back end process control applications in the semiconductor industry.

Ranging from the checking of FOUPs for mis-fed/double wafers to image analysis of IC's before dicing occurs, multiple or single camera systems can be taken advantage of for automating the process.

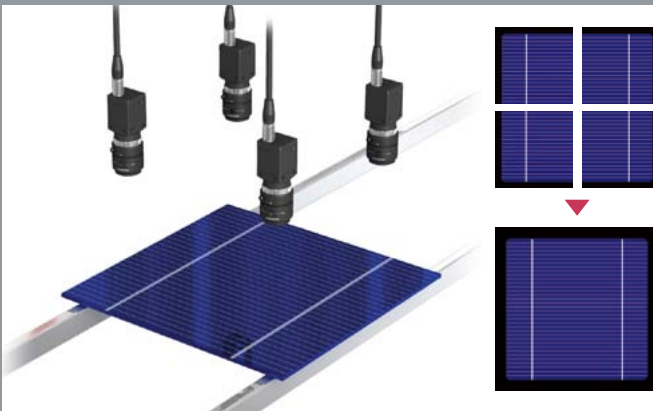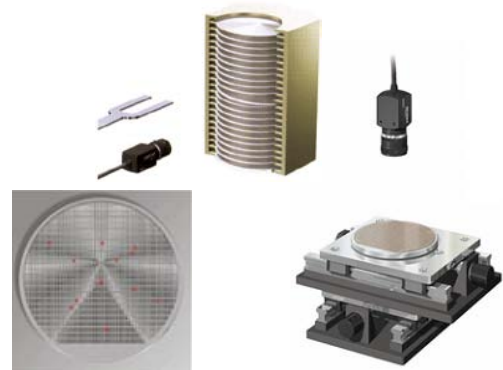

Visual Inspection


Visual inspections of parts for defects (such as flaws, dents, cracks and scratches) can be performed as part of a line production process with a vision system.

The high speed, high-resolution line scan cameras of the XG-8000 Series can ensure minute defects can be quickly and reliably detected.

Powerful Hardware Design

The XG hardware is well suited for the semiconductor clean room environment. Featuring a fanless design, solid state hard drive, pressure sensitive HMI and super small cameras, this system can be confidentially implemented in such an environment.



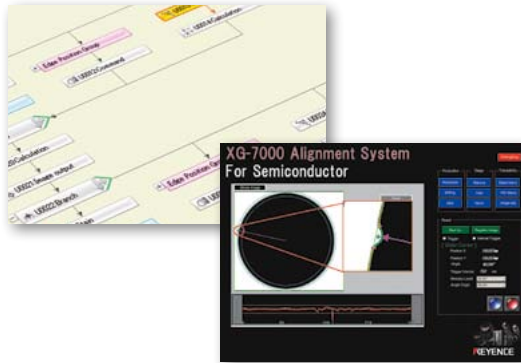



Embedded Functionality

The flowchart programming structure, freely assignable outputs, scripting, custom commands and ActiveX component make it very easy to integrate and embed the XG Series vision system as part of a machine or process.

High End Image Processing

The XG Series wide range of pre-processing filters and image operations make it easy to enhance and manipulate images for stable, reliable performance.

Filters can be set to work in either X, Y or XY directions as well as being combined and freely moved around to create the optimal image required.

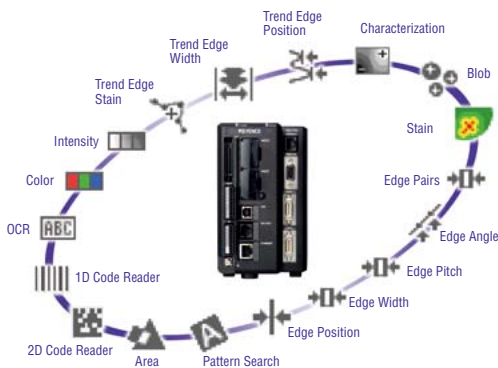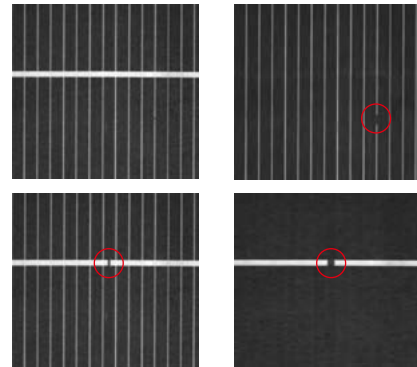


Unique Toolset

Featuring over 18 unique vision tools that can be freely combined in a flowchart structure, the XG can be easily configured to semiconductor orientated applications. Tools like Trend Edge Stain can be used for notch detection at the same time as 2D Code Reader and OCR for wafer identification and traceability.

KEYENCE ADVANTAGE

Global Support

Many companies involved in the manufacturing of semiconductors appreciate the global nature of the industry and KEYENCE is no exception. With offices spread throughout US, Europe and Asia, providing direct high level technical support through local offices is something we pride ourselves on.

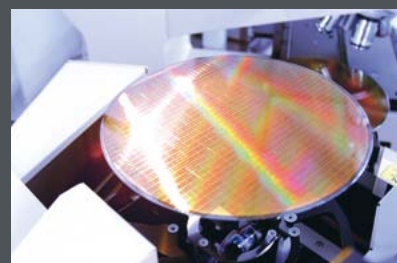

ELECTRICAL




PCB Inspection

The XG Series machine vision system is the perfect machine vision system for verifying all the electrical components on a PCB. Offering a multitude of camera options including 21 megapixel, line scan and 8 area cameras on one controller, PCBs can be automatically inspected to a high detail.

Multiple Feature Inspection

The XG Series comes with a wide range of vision tools that can be adapted for multiple inspections. With an extremely flexible approach to programming, as many tools as required can be combined so all features of a part can be inspected in one step.

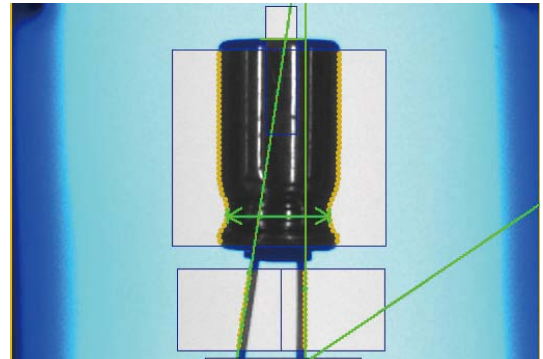


Electronic Housing Inspection

The housing of electronic devices can be inspected using the XG Series. With multiple camera connectivity, individual areas and overall inspections can be made at the same time without the need for multiple inspection stations.

Optimal Hardware Architecture

Realize faster inspection times with the powerful XG Series vision system! The powerful hardware design of the XG Series dedicated to vision processing allows for improved production line performance.

The new multi-core processor of the XG-8000 Series and high speed cameras ensures efficient and optimal handling of inspection processes all the way from image capturing, through processing to generating results and outputs.

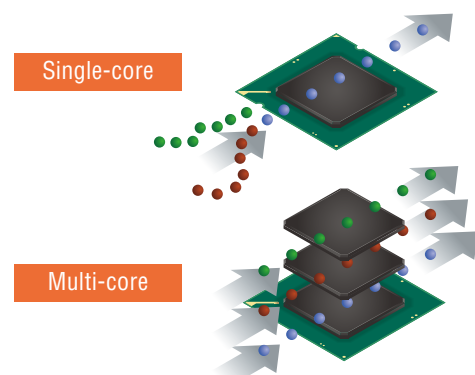





Seamless Integration

Easily integrate industrial robots and PLCs with the XG Series vision system. The XG features EtherNet/IP™, PROFINET, RS-232C, Discrete I/O, ActiveX and more. With a wide range of communication protocols, integrating the XG into your machine, PLC, robot, or controls should be worry-free.

Flexibility & Power

The XG Series has the tools to make the most complicated applications simple. Flowchart programming allows for a step by step approach to developing a solution to be easily realized. With the VisionEditor software, adding another set of inspections is as easy as picking the tools and dragging them into the existing flowchart.

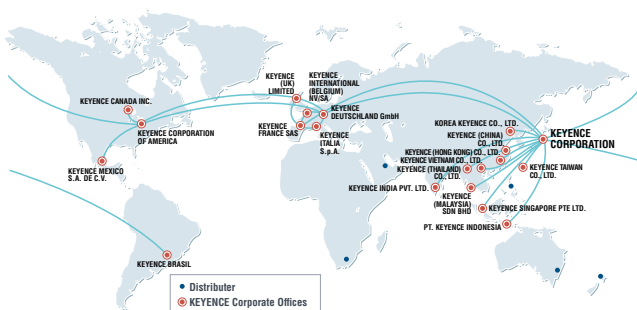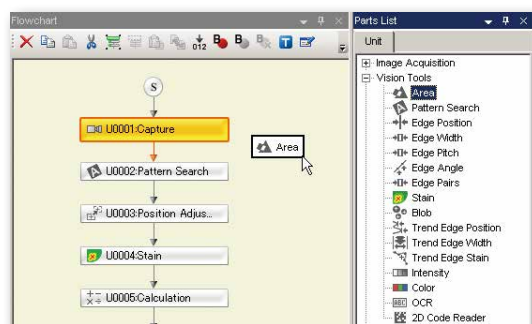

Global Support

KEYENCE understands the global market and the companies that exist in it. With offices located worldwide, support, expertise, and parts are easily within reach.

Local sales support is readily available through our highly trained personnel in person, via the phone, e-mail, or web conference.

KEYENCE ADVANTAGE

Toolset

Perform all of your inspections using the different vision tools the XG Series offers. From measurement to identification to quality inspection, let the powerful toolset of the XG solve your application.





Engine Component Inspection

Inspections on engine components are critical and failing to identify bad parts can be a costly problem. The XG Series allows for 100% inspection of a multitude of different automotive parts such as bad casts, misaligned bores, or cracked gears.

With the ability to store up to 1000 programs, the XG can be quickly switched during a product changeover without the need for any downtime or re-configuration.

VIN Verification

Using the built in 2D code reader and the OCR tool, the 2D code and human readable code can be easily compared. This eliminates the need for two separate devices to be used and integrated together. The XG can simply give a pass/fail signal making VIN checking an easy process.

In addition, the pre-processing tools of the XG can account for a wide range of variations adding to the stability and reliability of the system.



Taillight Inspection


The colors of the tail light, turn signal, and reverse signal can all be inspected with a single color camera and the color tool. Each LED of the taillight and overall brightness can be checked as the taillight is turned on and adjusted as required.

LED brightness and intensity distribution of the taillight can also be stored via FTP for record keeping and traceability.

Character Inspection on Cast Metal

The concave-convex surface features like characters on cast metal parts can be easily extracted with the new LumiTrax function. The target background information is ignored and just the surface features are analyzed for easy OCR or other types of inspections.



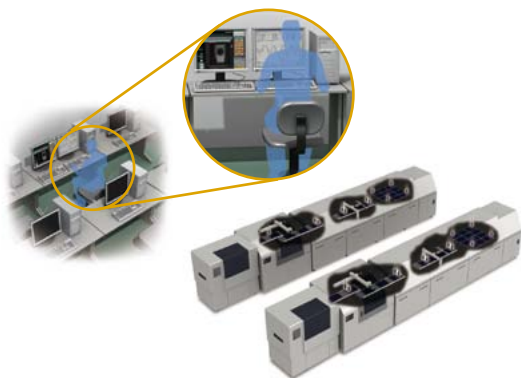

Production Control

The XG Series has the flexibility to be tied into an existing network on a factory floor. The remote desktop and remote connectivity functions of the VisionTerminal software not only allow for data logging but also complete control of the system.



Multiple systems can be displayed and controlled all at once via a LAN or VPN connection. Additionally, this the VNC server function means the systems can be individually controlled through other devices.

All this makes the remote management of systems and generation of production reports very easy to achieve.

Seamless Integration

With many industry standard communication protocol options, integration into an existing setup is rarely an issue. The XG can simultaneously communicate directly to a robot to relay a position via RS-232C, send data via EtherNet/IP™ to the PLC and be controlled on critical or time sensitive signals through discrete I/O all at the same time.

As this functionality is handled by a separate processor so there is no negative effect to the image processing speed and capability of the system.

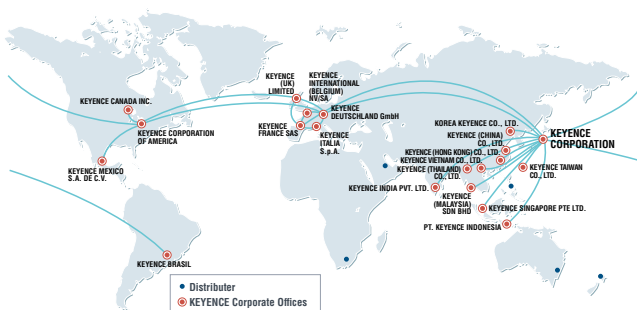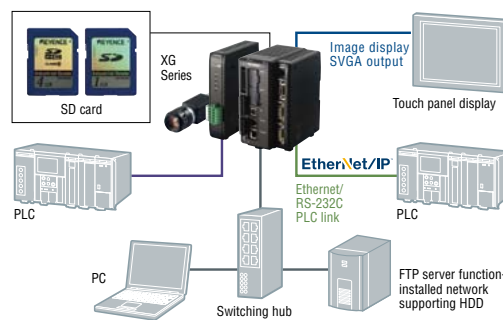

Global Support

KEYENCE understands the global market and the companies that exist in it. With offices located worldwide, support, expertise, and parts are easily within reach.

Local sales support is readily available through our highly trained personnel in person, via the phone, e-mail, or web conference.

KEYENCE ADVANTAGE


Return on Investment

Stopping defects before they reach the market is an essential part of Poka Yoke and KEYENCE's range of machine vision can help make sure no costly returns occur.

Featuring a suite of field-proven defect inspection, classification, statistical, and production monitoring tools, the XG Series can help make sure defects are prevented before they occur.



FOOD & PACKAGING

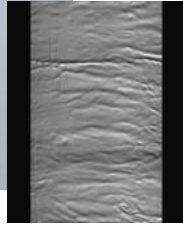

Packaging Web Inspection

By adding line scan technology into the XG Series, film based web inspections can be easily setup. Multiple line scan cameras can be used across the width of the web and encoders wired directly into the controller ensuring complete web inspection.

The stain and characterization tools, along with target classification, also allow for defects to be found, classified and their place on the web recorded for later post processing.

Thread Inspection

With the wide range of tools of the XG Series, multiple aspects of a bottle thread can be inspected all at once. Features such as thread width, pitch, diameter, and trends can all be measured while defects such as marks, short shot, and flash can also be detected. In addition, the geometric calculations allow for positional and angular data to be calculated based on detected points.

All this processing can occur in a matter of milliseconds with the result being combined into a simple pass/fail signal for a reject mechanism to work off of.



Stamped Characters on Packaging


Using the LumiTrax function, the printed patterns of the packaging is ignored while only the stamped lettering is extracted. This allows reliable inspection of date/lot codes on packaging that has a variety of printed backgrounds and colors.

Multi-camera Hardware

Due to the multi-camera connectivity of the XG Series, both line scan and area scan technologies can be taken advantage of for complete product inspection.

A can or bottle can be rotated in front of a line scan camera and under an area camera so that the product can be fully inspected for defects such as holes, short shot and flash. By directly connecting an encoder, product handling and changes in production speeds can be all accounted for with minimal difficulty.



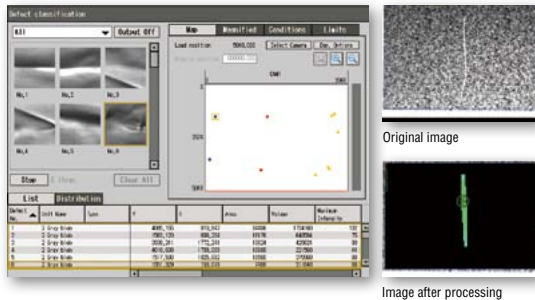

Runtime Utilities


Runtime utilities such as target classification, statistics, retest mode and image archive add an extra dimension of power to the XG during production.

These utilities allow production to be monitored, checked, and settings dialed in as required without affecting the inspection time or incurring downtime on the line.

In addition, the remote networking capability of the system means production can be checked from multiple locations both on and off site.


Image Processing

With an endless list of different materials and designs being used for labeling and packaging, it may be difficult to have the right lighting for every application. With the wide array of pre-processing image filters available on the XG, different filter combinations can be freely used and applied to each inspection to create the best image possible for processing.

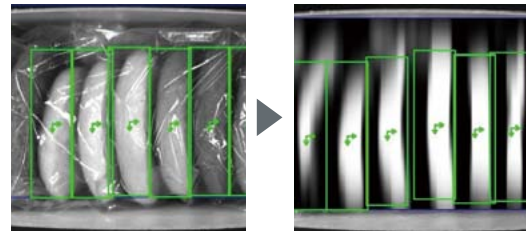

Customized Interfaces

Create custom GUIs and menu buttons for easy control of the program. Buttons can function like shortcut buttons to open statistics, view failed images, or even change tolerances without taking the program offline. The XG Series interface is fully customizable to fit every need.

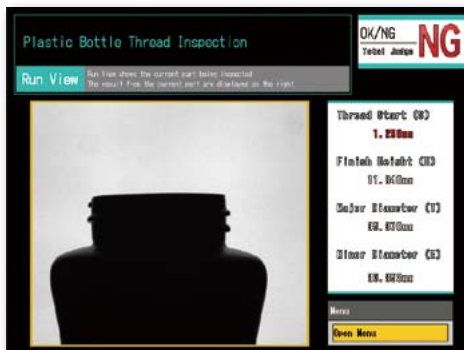

KEYENCE ADVANTAGE

Production Monitoring

Production monitoring is an essential part of the food and packaging industry. No consumer likes to receive bad product and the implications of a tampered product reaching a consumer can be very significant. On the factory floor, the fully customizable user interface can be controlled either with the CA-MP120T touch screen or the handheld controller for on-site changes. The remote connectivity capability of the XG Series controller means the system can be monitored and controlled from a remote PC either on a LAN or VPN connection. In addition, VisionTerminal also allows data logging for the easy creation of production reports.



MEDICAL & PHARMACEUTICAL



Tape Seal Inspection


Even when unexpected specular reflection occurs when the product is tilted, the glare of the packaging can be canceled using the LumiTrax function. Ambient light can also be removed to provide a very stable inspection.

Sorting & Process Control

Machine vision systems can be used as part of process control during medical device and drug manufacturing.

The XG Series can be easily embedded into a system to keep it secure while providing important data to help control or assist with the manufacturing process.

In addition, the information provided from the vision system can be used to produce statistics, production and process reports.

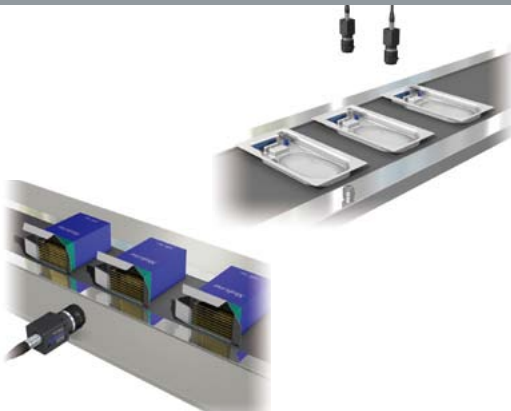

Inspection

A vision system can be used on a production line as a simple checking system to make sure all parts are present inside a medical package.

Unlike a sensor, the vision system can look over an area checking all parts are present based on the characteristics of parts (size, shape, color etc.).

Having space for holding up to 1000 programs, the XG Series allows for the storage and easy calling of different recipes based on production cycles without re-programming.

Production Monitoring

Being able to run reports and obtain data from the production process is an essential function of everyday medical manufacturing. The VisionTerminal software and FTP image/data output functionality of the XG Series make it very easy to create and put such reports together.



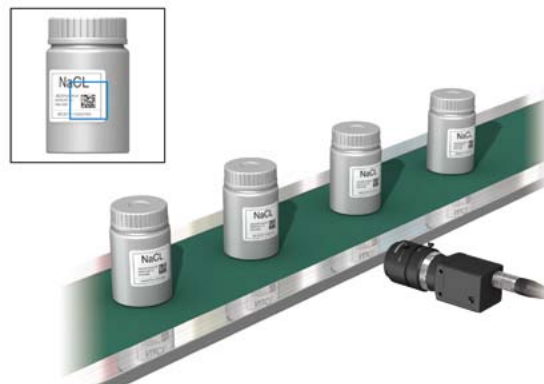


Image Processing

Medical devices are often made from stainless steel or shiny plastic with many contours. For reliable inspection of such targets, the XG Series includes easy to use, yet highly sophisticated image processing functions such as HDR, Shading Correction and Fine Color.

Powerful Toolset

The XG Series toolset includes both quality and traceability vision based tools. The ID and OCR tools can be used to verify products while defect tools (such as stain) can confirm product quality against user determined specifications.



Hardware/Embedded System

The XG Series features an easy to use ActiveX component simplifying the process of embedding it as part of a machine. The stand-alone non-PC hardware platform and option driven setup method also help make system validation as painless as possible.



KEYENCE ADVANTAGE

Traceability

Keeping track and monitoring production in the medical and pharmaceutical industry is very important.

To meet these essential requirements, the XG Series features numerous utilities including custom menus, password driven user access, unit/program locking, modification logging, image archive and statistical reporting.





Multi-Camera Inspection


The XG-8000 Series is the ultimate flexible stand-alone camera system, by allowing for the simultaneous attachment and processing of up to 8 different cameras and light sources at one time. This means the right camera can be selected for the application with the flowchart programming design bring everything together for efficient processing.

The unique hardware and flowchart design also make it quick and easy to add extra cameras at a later date with minimum difficulty and redesign.

Complete System

The XG Series level of flexibility allows for many different applications to be solved with the same system. Whether it be part sorting, process control, measurement & gauging, or traceability, all the tools are there. The wide range of on-board utilities also allow for quick and easy implementation, monitoring, and debugging of a system once deployed.

The accompanying XG PC software suite (VisionEditor, Simulator+ and VisionTerminal) allow for different levels of users to also take advantage of the XG features and benefits.

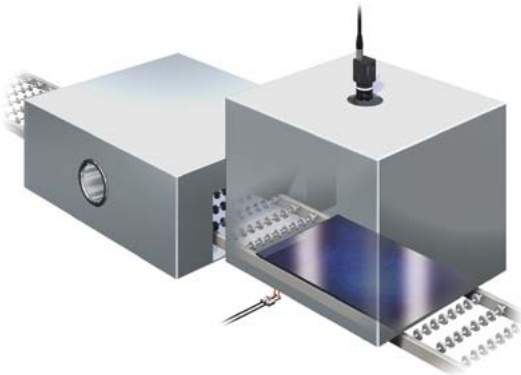


Integrated Vision Inspection


The XG hardware is purposely designed for optimal machine vision performance. The separate controller allows for a small camera footprint and peak performance as a processor does not have to be housed in the same space. This concept also allows for the intelligent design and use of multiple processors together. Each processor in the XG has a set purpose for efficient image processing and machine integration.

Coupled with this, the controller has a wide range of onboard I/O and communication options allowing for easy connectivity to a PLC and other machine controls.

Image Processing

Any heavy machine vision user appreciates the need for a good wealth of powerful yet easy to use image processing functions. The XG has 2 main sets of image processing functions. Image operation allows new images to be created outside of a tool for efficient programming and image enhancement filters can be individually applied per vision tool to ensure stable processing.

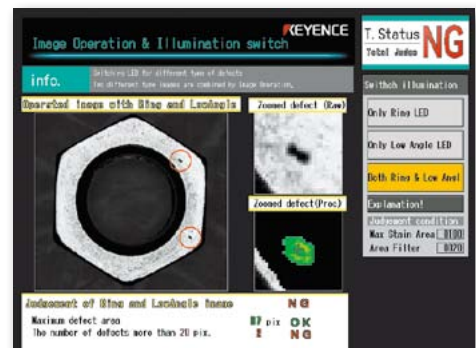

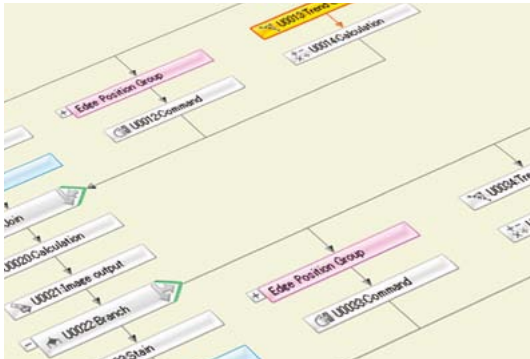

Flexibility

The XG is all about power and flexibility in one simple package. The hardware enables any combination of cameras and lights to come together while the flowchart software platform allows for quick development of a structured solution. The C Plug In unit allows for custom functions to be created while removing the timely engineering processes associated with PC based vision systems.

Development & Debugging


In the development of a machine vision solution, debugging and troubleshooting are essential tools. KEYENCE's XG VisionEditor software comes with a host of debugging tools for testing solutions, tracking operations, analyzing results, finding static/dynamic errors, and version compatibility.

Customization

The XG Series allows for easy customization and styling based on the end users requirements. Logos, screens, menus, and button operations can all be configured as desired. The easy to use ActiveX component also allows for PC software to be configured to interact with the XG for direct monitoring or control as required.

Communication Monitoring & Diagnostics

Analyzing the I/O communications of the XG is made easy using the Monitoring & Diagnostics utilities. The discrete I/O, RS-232C, EtherNet/IP™ & PROFINET communications can be checked and monitored. Inspection times and discrete I/O timing can also be recorded and analyzed in detail using the Trace Log function.

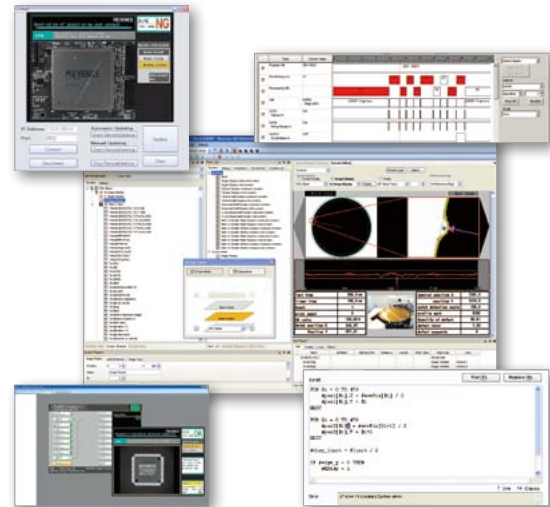

KEYENCE ADVANTAGE

After Sales Support

KEYENCE is well known throughout industry for providing the best customer support and machine vision is no exception. In addition to providing application testing services we offer on-site customer support, technical phone support, programming assistance, and free customer training.

To help already experienced machine vision users get over the initial learning curve and to become familiar with the XG Series, we also offer a free program conversion service*.

Our machine vision experts are well versed in vision systems from many different vendors and will gladly assist your learning by providing an XG version of an existing program you may already have.




* Not all functions from other manufacturers can be guaranteed to be converted.

SELECT THE BEST CAMERA FOR THE APPLICATION WIDEST RANGE

The industry's widest variety of cameras can provide the ideal solutions for applications, such as a 21 megapixel camera for inspections requiring extremely high-resolution, a 16x high-speed camera for the inspection requiring fast processing, and a compact camera for the installation in a tight space.



		Model	Specification	Capture range (pixels)	Image transfer time
21 megapixel camera series	 16x 21MEGA DIGITAL	CA-H2100M CA-H2100C	16x high-speed monochrome 16x high-speed color	5104 × 4092	109.9 ms
5 megapixel camera series	 16x 5MEGA DIGITAL LumiTrax compatible	CA-HX500M CA-HX500C	16x high-speed monochrome 16x high-speed color	2432 × 2040	27.6 ms ^{*1} /50.3 ms ^{*2} 29.0 ms ^{*1} /52.4 ms ^{*2}
	 11x 5MEGA DIGITAL	XG-H500M XG-H500C	11x high-speed monochrome 11x high-speed color	2432 × 2050	61.2 ms 61.2 ms
2 megapixel camera series	 16x 2MEGA DIGITAL LumiTrax compatible	CA-HX200M CA-HX200C	16x high-speed monochrome 16x high-speed color	1600 × 1200	11.6 ms ^{*1} (20.1 ms ^{*2}) 11.6 ms ^{*1} (20.2 ms ^{*2})
	 7x MEGA DIGITAL	XG-H200M XG-H200C	7x high-speed monochrome 7x high-speed color	1600 × 1200	29.2 ms 29.2 ms
	 MEGA DIGITAL	XG-200M XG-200C	Monochrome Color	1600 × 1200	58.5 ms 58.5 ms
	 SUPER-SMALL DIGITAL	XG-S200M XG-S200C	Ultra-compact monochrome Ultra-compact color	1600 × 1200	58.5 ms 58.5 ms
470,000 pixel camera series	 16x HI-SPEED DIGITAL LumiTrax compatible	CA-HX048M	16x high-speed monochrome	784 × 596 512 × 480	2.9 ms ^{*1} /5.2 ms ^{*2} 1.7 ms ^{*1} /2.8 ms ^{*2}
		CA-HX048C	16x high-speed color	784 × 596 512 × 480	2.9 ms ^{*1} /5.3 ms ^{*2} 1.7 ms ^{*1} /2.9 ms ^{*2}
310,000 pixel camera series	 7x HI-SPEED DIGITAL	XG-H035M XG-H035C	7x high-speed monochrome 7x high-speed color	640 × 480	4.7 ms
	 HI-SPEED DIGITAL	XG-035M XG-035C	Monochrome Color	640 × 480	16.0 ms
	 ULTRA-SMALL DIGITAL	XG-S035M XG-S035C	Ultra-compact monochrome Ultra-compact color	640 × 480	16.0 ms

*1. When the CA-EC80HX/EC80L or XG-EC80L camera input unit is used with the XG-8000 Series controller. The transfer speed is 16x.

*2. When used with the XG-7000 Series controller, or when the CA-EC80 or XG-EC80 camera input unit is used with the XG-8000 Series controller. The transfer speed is 11x.

LumiTrax™

NEW

A FUSION OF HIGH-SPEED CAMERAS WITH INTELLIGENT LIGHTING AND AN ADVANCED PROCESSING ALGORITHM

The image of a target is captured with the newly developed ultra high-speed camera and controlled, directional lighting. This is a completely new image capture method that creates shape (concavities/convexities) and texture (pattern) images by analyzing multiple images obtained with lighting from different directions. This eliminates the variation in targets and the influence of surrounding environment that prevent stable inspection. Now any user can easily create images in much less time and without the experience previously required.

Newly developed LumiTrax™ system will solve problems.



Ultra high-speed CMOS image sensor & dedicated control IC
CA-HX Series

+

Ultra high-intensity LED & partial lighting control circuit
CA-DRWxX Series

+

Instantaneous analysis of multiple images for creating shape/texture images
XG-8000 Series


Problems with conventional image creation

■ Variation in the surface condition of targets




Much trial and error is needed to select the optimum lighting solution...

■ Influence of surrounding environments (ambient light)

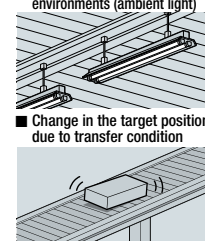


■ Change in the target position due to transfer condition

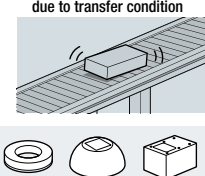

Application 1


Extract shape (concavities/convexities) information only without being affected by surface condition.

■ Inspection of embossed printing

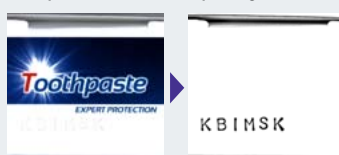


Inspect the concavities and convexities of the embossed printing while ignoring the printing on the package.

■ Inspection of defects on a metal surface

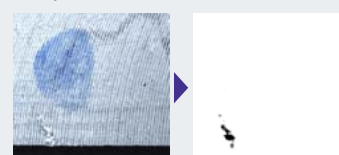

Detect only dents, cracks, and other defects while canceling residual cleaning agent, dirt, and fine hairlines.

■ Inspection of defects in printing

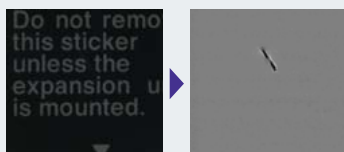


Create an image by extracting defects only without being affected by complex printing in the background.

■ Inspection of marking on a metal casting surface



Enhance the marking that has larger concave/convex information from an irregular casting surface.

■ Inspection of heat sealing width

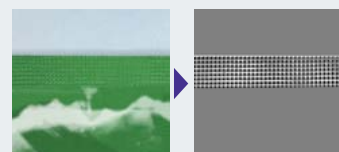


Detect and extract the concave/convex information of sealed section that shows almost no change in color or shading.

Application 2

Extract texture (pattern) information only by suppressing halation and ambient light.


■ Inspection of printing on a film

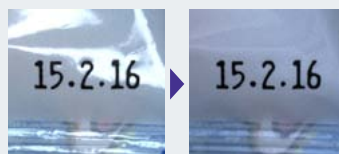


Remove halation and ambient light that affects inspection to ensure stability.

Principle of LumiTrax™ processing

1. Capture images with lighting applied from different directions at ultra high-speed.

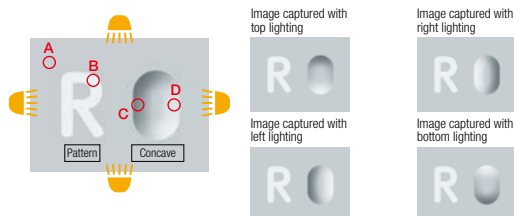

2. Analyze the change in the brightness value of each pixel and create separate images of shape (concavities/convexities) and texture (pattern).

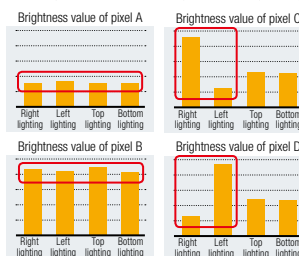

Texture image



Shape image



INDUSTRIES

HARDWARE

IMAGE OPTIMIZATION

PROGRAM CREATION

DEFECT INSPECTION

UTILITIES/ USER INTERFACE

CONNECTIVITY

DEVELOPMENT VISION EDITOR

LENS CHART

SYSTEM CONFIGURATION

PRODUCT LINEUP

DIMENSIONS

SUPPORT




21 MEGA PIXEL CAMERA ENABLES A WIDER RANGE OF INSPECTION AT HIGHER ACCURACY

A 21 megapixel image, with a resolution of 5104 x 4092, can be captured at a rate of 9 FPS (110 ms). This allows minute detection of defects in a wide field-of-view, which was impossible with lower resolution cameras.

High accuracy inspection with a single camera


LCD screen inspection

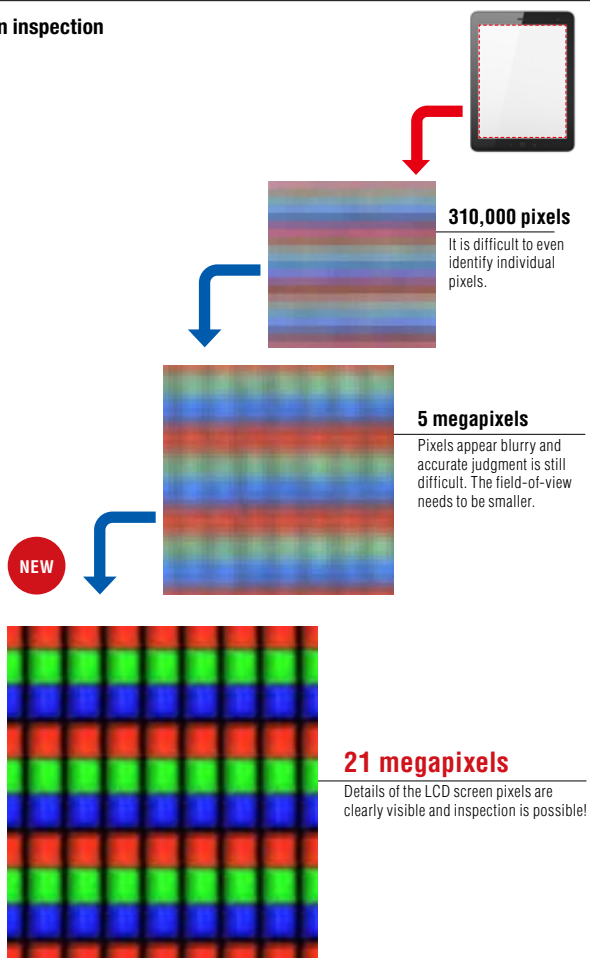

Inspect a larger field-of-view


Inspection of IC printing on a tray

With 21 megapixel image processing, inspection of a large field-of-view can be completed at once while keeping the required resolution.

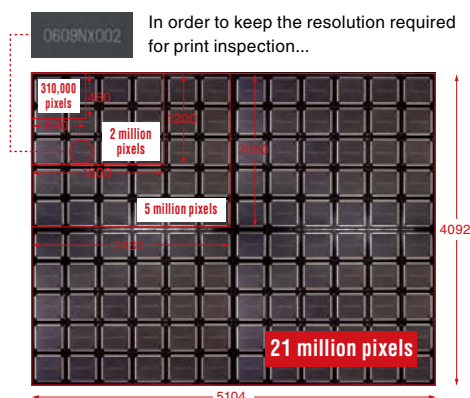

Two-camera connection for processing 42 megapixels at once



Connecting two 21 megapixel cameras allows processing of up to 42 million pixels. The two cameras can capture and transfer images simultaneously.

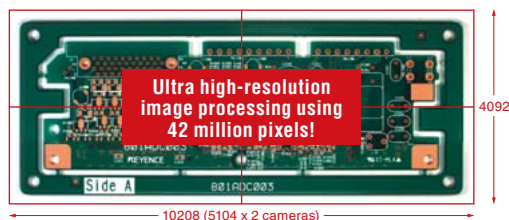

4/3" CMOS SENSOR, C-MOUNT LENS SUPPORT

A high-sensitivity, compact 4/3" CMOS sensor is used in the 21 megapixel camera.

This allows the use of C-mount lenses designed for 4/3" sensors, resulting in a wider range of lens selection. Installation flexibility is greatly improved compared to conventional systems.

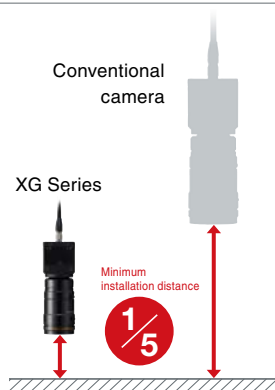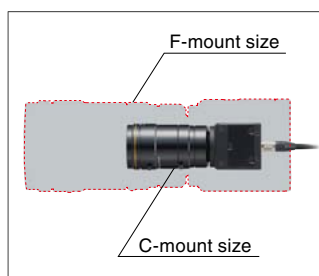

Support for C-mount lenses allows for the use of lenses with short focal lengths. The minimum installation distance is reduced to approximately 1/5.

EXAMPLE

Comparison of the WD required for a field-of-view of 100 mm 3.94"

LINE SCAN CAMERA OPTIONS

The XG-8502L/8702L/8802L vision systems offer line scan camera connectivity giving an extra level of image processing to the XG Series. The XG-8000 Series removes the complexities of compiling an image with a line scan camera through the easy connectivity and option driven interface. This enables line scan technology to be taken full advantage of, while driving down the time, effort and difficulty required to implement.



Model	XG-HL02M
Applicable lens	1 in. C-mount
Number of pixels	2048
Max. expanded image size	2048 × 16384
Scan speed	24 μS/line
Pixel clock	100 MHz (8x transfer)



Model	XG-HL04M
Applicable lens	1 in. C-mount
Number of pixels	4096
Max. expanded image size	4096 × 16384
Scan speed	24 μS/line
Pixel clock	200 MHz (16x transfer)



Model	XG-HL08M
Applicable lens	2 in. (M40 P0.75)lens*
Number of pixels	8192
Max. expanded image size	8192 × 8192
Scan speed	45 μS/line
Pixel clock	200 MHz (16x transfer)

*Supports F-mount conversion adapter

HIGHLY FLEXIBLE IMAGE PROCESSING SYSTEM WITH SIMPLE SETUP & USAGE

The XG-8000 Series makes using or incorporating a line scan camera into an existing setup very easy. The XG method eliminates the need for conventional, complex, and specialized PC based line scan systems that require multiple parts from different vendors. In addition, the interchangeable camera module makes combining technologies onto one platform very simple and hassle free.


XG LINE SCAN SYSTEM



XG SERIES FEATURES

- Compatibility issues are eliminated since all the hardware is from the same manufacturer.
- Simple connection of the camera to the controller allowing the user to obtain images quickly.
- Robust solid state hardware design.
- Minimal programming knowledge required.

CONVENTIONAL LINE SCAN SYSTEM

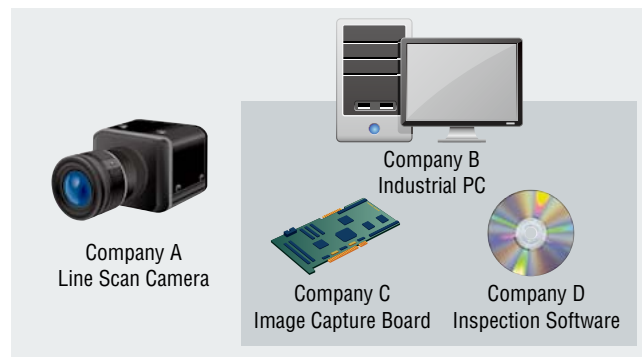

CONVENTIONAL PROBLEMS


- Compatibility issues arise due to connecting multiple devices from different manufacturers.
- A great amount of time and effort is needed in order to capture good images.
- Concerns with freezing or crashes due to the PC-based design.
- Specialized programming knowledge is typically necessary.

EASY SETUP CONFIRMATION WITH LED INDICATORS FOR BRIGHTNESS & SHARPNESS INDUSTRY FIRST

The typically difficult task of obtaining the correct camera mounting is made easy using visual LED indicators right on the camera that show the level of light intensity and sharpness being received. This drastically reduces the amount of time needed for line scan camera installation.




LED indicators on the back of the camera display the focus and intensity information of the image currently being captured using a 3-level indicator. The individual threshold levels can be user specified in order to obtain the best results under the specific application conditions.

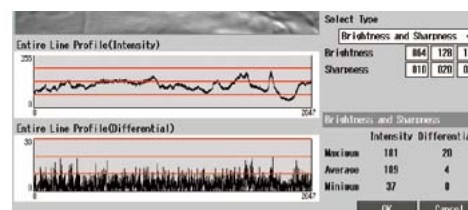

INDEPENDENT IMAGE CAPTURE

Capture images out of sync based on physical machine processes and device interaction

The XG Series is capable of independent image capturing so that it captures images during the flow of operation rather than at the beginning of the sequence. Images can be captured in sync with device movements and with no dependence on the current image processing being conducted. Conventional systems have to wait for the return of a program to the beginning of its cycle for a new image to be obtained. This function captures images and places them in the buffer if the XG controller is currently processing another image. Up to 1013 images can be stored in the buffer helping enable a zero image processing delay period to maintain a high throughput during processing. PC simulations can also be efficiently conducted with the XG software suite by directly saving the individual camera images to individual folders.

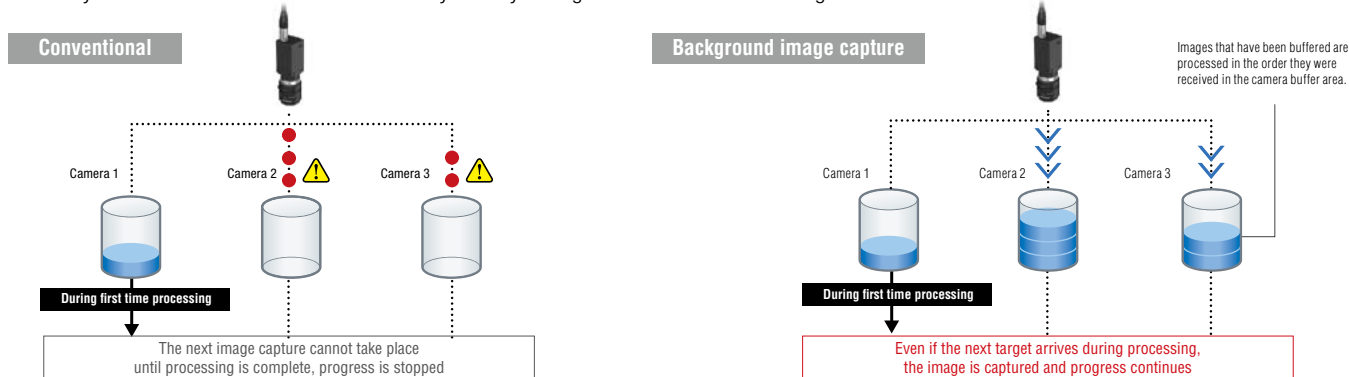

EXAMPLE

Non-synchronous image capture for high-speed pick & place processing

As it is possible to send a trigger input from the machine to the XG controller in sequence with the index and transfer operation so the cycle time can be dramatically improved.



CONVENTIONAL MODEL

The operation timing has to be synchronized by lengthening the stop time of the index, or two separate controllers needed to be used.

INDEPENDENT IMAGE CAPTURE


There is no need to stop the index cycle as the single controller can capture both images with no waiting period.

UNSURPASSED MULTI-IMAGE CAPTURE

Optimization of a single inspection cycle.

Conventional systems rely on the completion of the process before acquiring the next image

In conventional image processing, one inspection cycle consists of "image capture → inspection → output". If multiple inspection is required on the same target but under different lighting conditions, this cycle would have to be repeated multiple times. However, in the XG Series, a secondary image capture can be performed straight away (after the first and before any processing starts), the lost time associated with the additional unnecessary trigger inputs, and outputs can be eliminated.

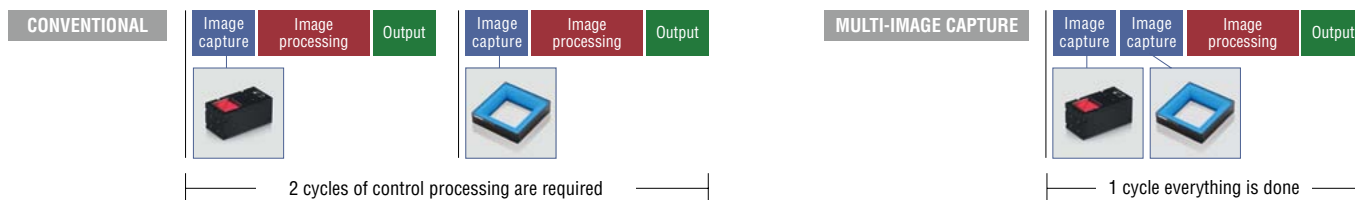

EXAMPLE

Defect inspection with multiple lighting

Using the XG multi-image capture capability allows the detection of defects and quality control that is not possible with conventional image processing.



Halation elimination due to multiple image capture

Using multiple light sources and the image calculation function means the perfect image can be obtained in one cycle, even if different lighting combinations need to be put together. In a conventional system 3 or more cycles would need to be performed to get all of the images severely impacting on the machines cycle time. Even then the system may not be able to process the images and inspection correctly.



Multiple image capture increasing light intensity

Composite image via image calculation function




Resultant image used for inspection with no over or under exposure.

OPTIMAL IMAGE PROCESSING

PERFORM INSPECTIONS WHILE ALSO CAPTURING IMAGES AT HIGH SPEED IDEAL FOR COMPLETE INSPECTION OF A SINGLE PART WITHOUT COMPROMISING PRODUCT HANDLING

Images can be captured at high speeds and stored in the buffer while previously captured images are simultaneously processed in the flowchart for optimal processing performance. This reduces the time for which a workpiece has to be stationary as well as product handling concerns that until now would have to be addressed due to the alternation between image capture and processing.

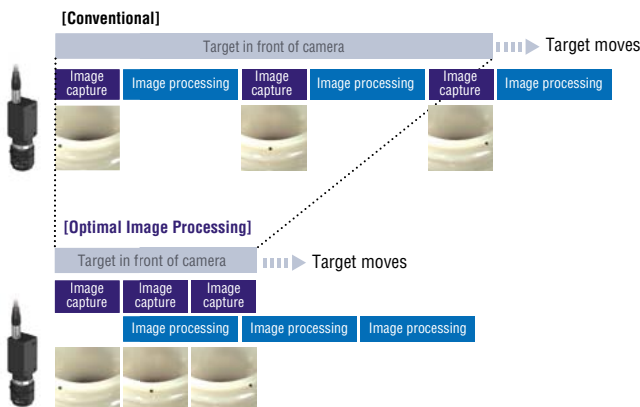

APPLICATION

Inspecting the full circumference of the mouth of a PET bottle

The application requires for the total circumference to be inspected when rotating at high speeds. The XG Series image buffer and processing design allows for buffered images to be processed even after the target has moved on.

CONVENTIONAL


The inspection consists of repeating "image capture → inspection → output", which takes significant time for a complete inspection. As a result the full inspection can only be performed at low rotation speeds.

OPTIMAL IMAGE PROCESSING

As image capture is continually happening at the fastest speed, the inspection can be performed without lowering the rotation speed. When using a high-speed (16x) camera even greater than anticipated performance can also be achieved.


Optimal performance is achievable by buffering up to **1024** images at a transfer time of **1.7** ms.

OPTIMIZING IMAGE CAPTURE



Partial image capture

Capturing only the necessary image data makes it possible to significantly reduce image transfer time.



Sensitivity adjustment function

The sensitivity of the camera CCD can be adjusted through 81 levels enabling good quality images to be captured at high shutter speeds.



RGB span/shift function

To enhance shade differences on low contrasting targets, the individual RGB levels can be shifted for stable performance.

HDR NEW


AUTOMATIC HDR IMAGE CREATION

Shiny metal parts and unevenly lit targets can make inspections difficult and unreliable. With High Dynamic Range (HDR), these problems can be eliminated. HDR images better represent what your eyes see to emphasize details that lighting and lensing techniques cannot achieve alone. Subsequently, HDR makes it easy to capture a high quality image for unsurpassed inspection performance.


HDR Process (automatic adjustment of the shutter speed for multi-image capture)



Individual dynamic range



Features can only be detected in the images specific dynamic range

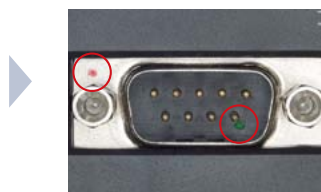

HDR image dynamic range

Stable extraction of features without black or white saturation.

Halation canceling

[Conventional]



[HDR image]



Light fluctuation

[Conventional]



[HDR image]



CONTROLLER ARCHITECTURE

Dedicated hardware with parallel processing ensures unbeatable performance and reliability

STABLE, RELIABLE PERFORMANCE

KEYENCE has continued to place an importance on stand-alone type image processing systems with incredible reliability. The hardware of KEYENCE vision systems regularly offer high-performance even under harsh environments. The final product is an extremely stable machine vision system that can be used with peace of mind.

THE CONCEPT OF THE XG SERIES HARDWARE



Tough hardware that can endure continuous operation

Mechanical components such as HDDs and cooling fans have been eliminated to minimize internal failures.

Quick restoration

Each key component of the system can be easily replaced. Even the programs are stored on an SD card, so in the event of a controller breakdown the SD card and program can be swapped out to a new controller in minutes.

Plug and play compatibility

All components including peripherals for the XG Series offer full compatibility at the highest performance.


Parallel processing offers higher performance

The 3+1 and multi-core processor performs simultaneous parallel processing of image processing, display, and communication.

TAKING FULL ADVANTAGE OF THE MULTI-CORE CONFIGURATION TO ACHIEVE THE FASTEST PROCESSING INDEPENDENT OF CONDITIONS

XG-8000 Series upgraded for even faster processing

The triple-core main DSP has been upgraded to achieve even faster processing. With typical multi-core image processing, parallel processing was restricted by various conditions. With the XG-8000 Series, each processing unit is capable of distributed parallel operation, resulting in faster processing independent of conditions. Such ultimate high-speed performance enables high-load processing using a high-pixel camera as well as operation that requires fast cycle times.

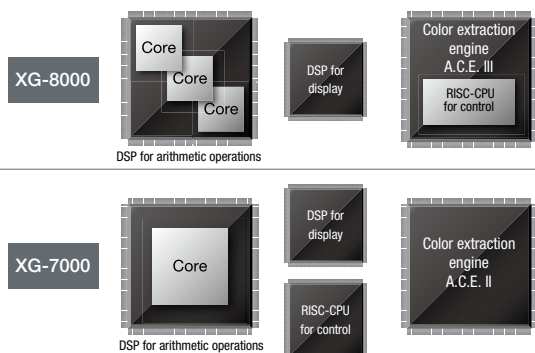


Typical multi-core image sensor



Parallel processing could be used for speeding up inspection, but it could not be used for operations such as position correction based on multiple edges. The advantage of the multi-core configuration was not used effectively.

XG-8000 Series

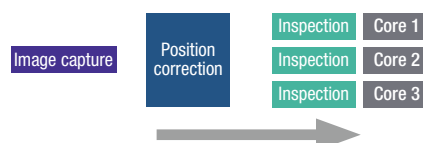

Parallel operation can be performed in each processing unit. The advantage of the multi-core configuration can be used most effectively both before and after position correction, ensuring high-speed processing.

The XG-8000 Series also distributes display and image saving operations to other cores, offering stable, fast processing regardless of image saving or other loads.

HIGHLY RELIABLE FAN-LESS/HDD-LESS DESIGN

Fans and conventional HDDs have moving components that will eventually wear out. By not having moving components, long-term continuous reliable operation is possible. The XG Series has sophisticated heat dissipation technology allowing for a fan-less design even while putting heavy loads on processors running at high speeds. In addition, this design is particle emission-free and therefore suitable for use in clean-room environments.












Fan-less



Conventional HDD

CONTROLLER OPTIONS



From the single-core XG-7000 to the triple-core, 8 camera XG-8802L, the wide range of flexibility and same easy to use interface of the XG Series means there is a controller for every application.

		AREA CAMERA MODEL						LINE SCAN CAMERA MODEL			
		XG-7000 Series			XG-8000 Series						
											
Model		XG-7002(A)	XG-7502	XG-7702	XG-8002	XG-8502	XG-8702	XG-8802	XG-8502L	XG-8702L	XG-8802L
DSP		Single-core 	Single-core (High-speed type) 		Multi-core 	Multi-core (High-speed type) 					
Supported cameras	XG-(H)035x XG-S035x	✓	✓	✓	✓	✓	✓	✓*1	✓	✓	✓*1
	XG-(H)200x XG-S200x	—	✓	✓	—	✓	✓	✓*1	✓	✓	✓*1
	XG-H500x	—	—	✓	—	—	✓	✓*1	—	✓	✓*1
	CA-HX048x	✓*2	✓*2	✓*2	✓	✓	✓	—	✓	✓	—
	CA-HX200x	—	✓*2	✓*2	—	✓	✓	—	✓	✓	—
	CA-HX500x	—	—	✓*2	—	—	✓*2	—	—	✓	—
	CA-H2100x	—	—	—	—	—	—	—	—	✓	—
	XG-HL02M	—	—	—	—	—	—	—	✓	✓	✓*1
	XG-HL04M XG-HL08M	—	—	—	—	—	—	—	—	✓	—
Display/ Touch panel	Dedicated touch panel (RS-232C)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Output resolution				 or 						

*1 Check the specifications sheet at the end for information on camera types or connection conditions that support the XG-8802 (L). *2 The LumiTrax function is not supported.

EXPANDABLE PLATFORM **INDUSTRY FIRST**

By connecting additional modules to the side of the controller, the optimum system can be setup as well as allowing future expansion when needed.

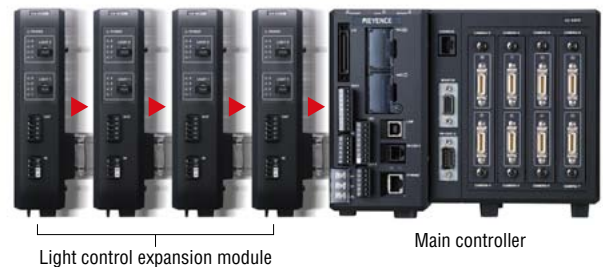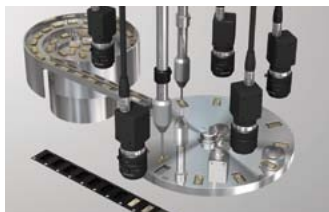


MULTI-CAMERA, SIMULTANEOUS ACQUISITION SYSTEM

The XG-8000 Series offers the choice of up to 22 types of area cameras and 3 types of line scan cameras.* This allows the same XG programming interface to be used no matter which camera is connected and provides the flexibility to easily adapt to changes that may occur with the inspection criteria.

*Some combination may not be possible. Contact us for details.


MULTI-CAMERA SYSTEM EXAMPLE: XG-8702L

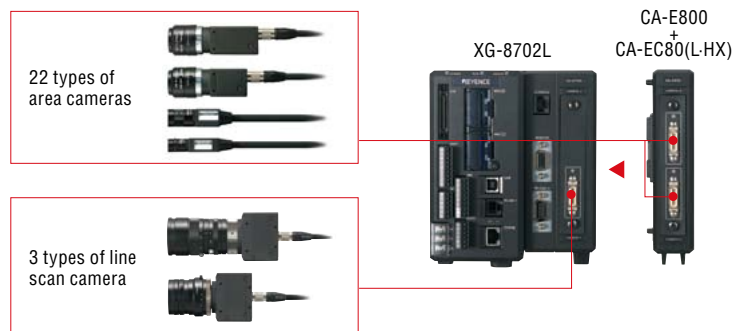

*The 5MP area type camera is compatible with the XG-8702L controller only. (Used with XG-EC80 camera input unit connected)

*The XG-HL04M/08M are compatible with the XG-8702L controller only. (Used with the XG-EC80L camera input unit connected)

DIFFERENT CAMERA COMBINATION EXAMPLE

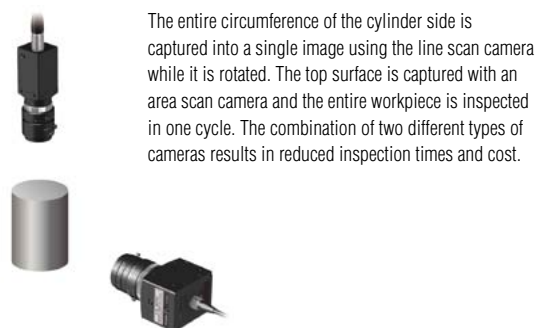


LED LIGHT CONTROL EXPANSION UNIT Easily control dedicated lighting without any extra wiring **WORLD'S FIRST**

Up to 4 lighting expansion modules can be connected to the main controller. Each unit has 2 lighting connections (connector and terminal style) so up to eight 12 or 24 VDC lights can be connected.


Light settings

Lighting can be easily controlled as part of the image processing flowchart by setting the lighting conditions in the light settings tab within the image capture unit. By using multiple image capture units with different lighting patterns or intensities within a single processing flowchart, multiple image capture and advanced light sequencing is made easy. In addition, as the light intensity value is a variable that can be referenced, dynamic changes can be made to a program after an inspection has been processed.

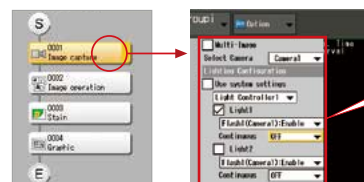

The ON/OFF status, strobing and intensity of 8 lights is possible in each image capture unit.

Conventional methods require PLC control with large numbers of I/O.

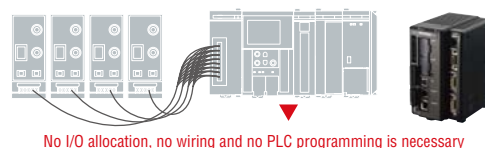


No I/O allocation, no wiring and no PLC programming is necessary


TOUCH SCREEN GESTURES



The touch panel display allows for intuitive multi-touch operations on site. Areas of interest (such as a defect) can be scrolled to and magnified on the display with the touch of a finger.

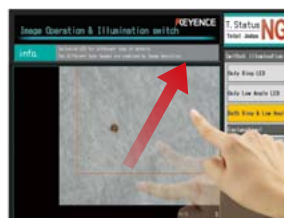

Using a single finger the image can be scrolled about the screen.

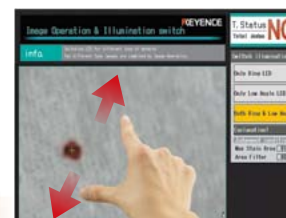

The image displayed can be magnified by pinching in or out with two fingers.

PREPROCESSING FILTERS

HIGHLIGHT AND IMPROVE FEATURES THAT PREVIOUSLY COULD NOT BE SEEN. REMOVE FEATURES AND ASPECTS OF AN IMAGE FOR STABLE INSPECTION.

The XG Series includes 24 types of preprocessing image enhancement filters that can dramatically improve the raw camera image based on changes that are caused from differences in the target or the targets environment. In using these original KEYENCE filters correctly, an optimal image for processing can be created resulting in an improvement in inspection stability and performance. This can help reduce mis-detection and inspection errors and give a high level of confidence to using machine vision.


■ Shading Correction (Real Time)

Shading correction is a real time filter that evens out any large random shadows or glare on a target surface, leaving behind smaller defined points which are often associated to being flaws or defects. As this is a gray scale processing filter, it dynamically changes the processed image based on the input image rather than being based on a fixed binary setting level. This ensures consistency with target variation and changes in the raw image.

■ Surface quality on a metal roller




Original image

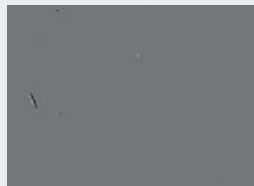


After preprocessing

Shading correction can be used to extract just bright, dark or both bright and dark defects depending on the nature of the surface and image needing to be created.

■ Stain detection on the bottom of a can

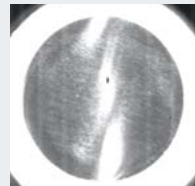

Original image

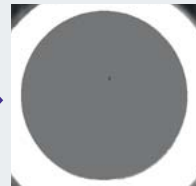

After preprocessing

By cancelling out the hot-spots caused by changes in the target surface a uniform background with the stain present can be created.

■ Scratch Defect Extraction

NEW

Eliminates noise information within the inspection region and only highlights linear information. This filter is particularly effective for linear defect inspection for workpieces having rough surface conditions.

■ Linear stain on a metal component



Original image



After preprocessing


Only linear stains are extracted by ignoring background noise.

■ Contrast Expansion


NEW

Expands the intensity distribution within the inspection region to increase the contrast of an image. This filter stabilizes inspection when gradation necessary for image processing cannot be obtained due to the reflectance of workpieces.

■ Various circuit board pattern inspections

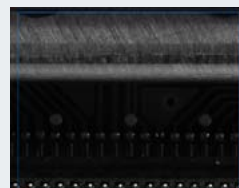

Original image

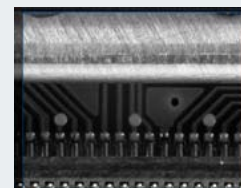

After preprocessing

The circuit board pattern can be recognized clearly. Because the filter determines the expansion width from the intensity distribution within the inspection region, images without overexposure and underexposure can be captured.

■ Noise Isolation


NEW

Eliminates or extracts noise having a specified area or smaller. This filter is effective when a rough background hinders image processing or to detect subtle stains.

■ Recognition of characters printed on cardboard



Original image

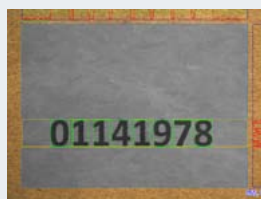

After preprocessing

Only bright and dark noise are removed and the printing condition remains unaffected.

■ Stain inspection for a plastic mold



Original image



After preprocessing

Only black stains smaller than the specified area are extracted.


IMAGE OPTIMIZATION

■ Bidirectional Smoothing (Blur)

Has an effect that removes a significant amount of fine background patterns or noise.

This filter can be set to have an effect that performs smoothing in individual directions (X/Y), thus making it applicable for a wide range of applications, including counting individual items.

■ Foreign particle detection on a striped pattern

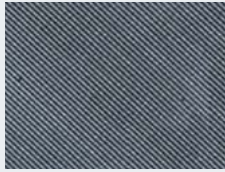


Original image




After preprocessing

By eliminating the striped texture to the target, foreign particles can be detected.

■ Width inspection for a welded pipe section

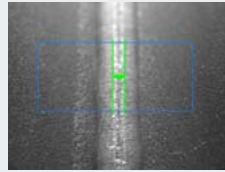

Original image

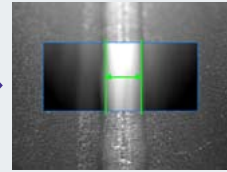


After preprocessing

The blur filter allows a stable width measurement by eliminating unnecessary featured points other than the welded section.


■ Subtraction

Produces the difference from two images by subtracting the input image from the master (registered image).


■ Lead frame chip inspection

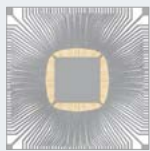

Registered image (good part)

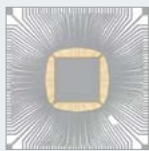

Input image (defect)

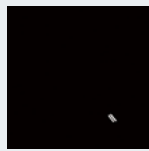


Differential image

As a true subtraction is performed even complex targets with defects can be easily processed as the difference is left over on a uniform background.


■ Real-time Image Extraction

As this filter processes in real time on the acquired image only, the part movement doesn't affect the image used for defect inspection. The filter extracts the small areas of change (such as stains and defects) in the image, whereas the larger and uniform areas (such as the edge lines and background) are removed. Leaving a stable image for stain detection.

■ Foreign particle inspection inside a cup

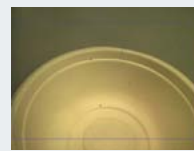

Original image

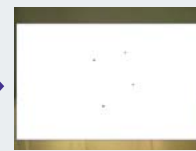

After preprocessing

As part position is not always repeatable so stable defect detection is still possible as the edge line, border and background are removed from the initial raw acquired image.

Individual filter processing direction


NEW

The versatility in being able to choose a filter's processing direction realized with the blur filter is now available in the shading correction, image extraction, expand, and shrink filters. Being able to choose the processing direction helps make the most of applying the image enhancement filter according to how a target or feature appears.

■ Individual filter processing direction



Original image

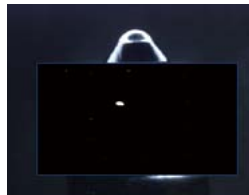

After preprocessing

[Filter used: Shading correction] Processing direction: X

The defective area is isolated by removing the directional shading on the thread.

■ Foreign material detection on a lattice pattern



Original image




After preprocessing

[Filter used: Image extraction]


Processing direction: X -> Processing direction: Y

The background lattice pattern is removed by applying the filter multiple times while changing the processing direction.

■ Inspection of grid lines on a solar cell

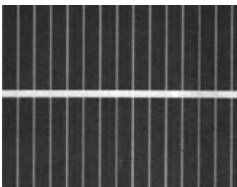

Original image

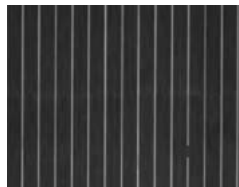


After preprocessing


[Filter used: Shrink] Processing direction: Y

The break is enhanced while the width of the grid lines remain and the bus bar is removed for stable inspection.

■ Inspection of bus bars on a solar cell

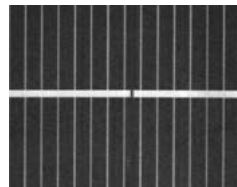

Original image

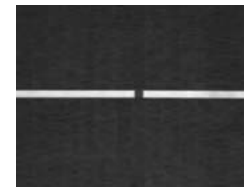

After preprocessing

[Filter used: Shrink] Processing direction: X


The grid lines on the background are removed by shrinking the image in the X direction broadening the break in the bus bar.

INDUSTRY FIRST
BLOB FILTER

Blob filtering of certain grouped image elements based on attributes (surface area, shape size etc.), enables only the desired areas to be processed.

Width measurement of a welded section

Measuring the width of a weld after cancelling shadows, dents and removing spatter & excess from the weld section.

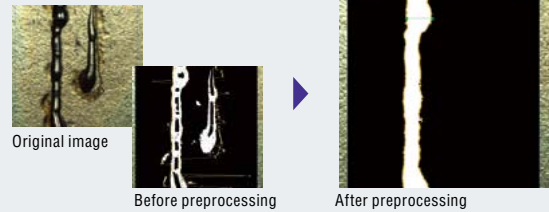


CONTRAST CONVERSION

The Contrast Conversion filter helps enhance contrast by emphasizing or reducing ranges of gray scale without causing shadows or overexposure. This helps increase edge strength, unify levels of gray or reduce noise on an image.

Defining PCB components and connections


By increasing the difference between the board and mounted components the areas for inspection are easily highlighted.

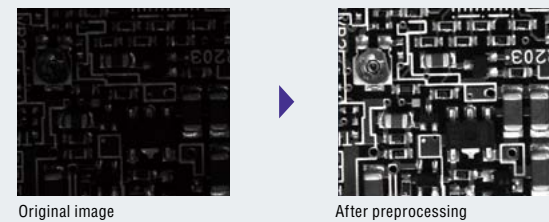

PRESERVE INTENSITY
Illumination compensation

The Preserve Intensity filter automatically corrects for any intensity changes in the image due to light deterioration or external lighting fluctuations. The level of intensity in the captured image is compared to a pre-determined standard on a reference image and the difference is applied before processing.

Screw position inspection

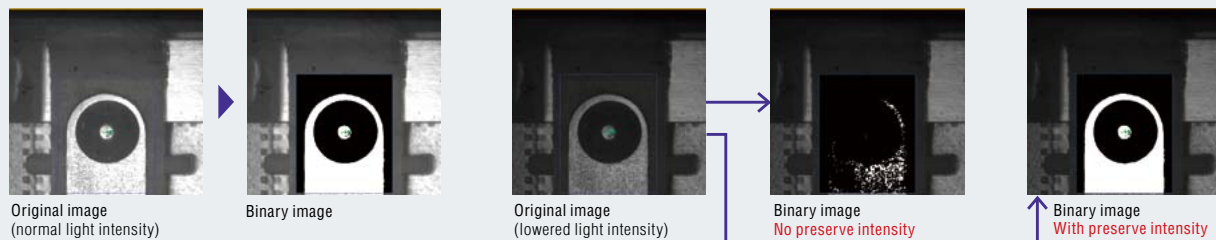

For each inspection unit, you can combine filters creating optimal images for an inspection

Multiple processing

A total of 24 types of preprocessing filters can be set and each filter can be processed up to 13 times per unit. For each unit, filters can be combined together in the optimal combination for that single inspection.


Filter order and sequencing

The preprocessing sequence can be easily changed by moving filters up and down the list.



On-screen effects and results

Preprocessing results are displayed in real-time on the screen. Making it quick and easy to see and set the optimal combination in the minimal time.

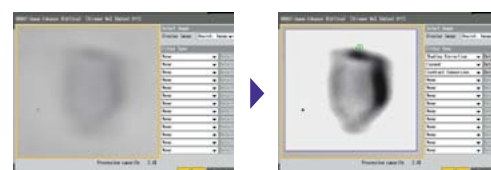

COLOR PROCESSING


Optimal color processing for stable inspections using the new color extraction engine A.C.E.II

The XG Series is equipped with a new color extraction engine. The A.C.E.II is based on the HSB color model (closest color model to the human sensory system) to attain high color extraction performance that stabilizes previously unstable color processing schemes. The XG Series also feature fine color processing to extract full color information exactly the way the camera captures it. This technology significantly broadens the range of color processing applications previously accomplished by machine vision systems.

COLOR TO GRAY PROCESSING


Color to Gray processing can optimize the shade gradation using hue, saturation, and brightness. This makes it possible to convert images with low contrast into images with defined shade differences. Unlike conventional full color processing, which picks up all tone changes and makes distinction difficult, color shade processing can optimize the shade difference between a user-specified color and the background.

Extraction of copper foil on printed circuit boards

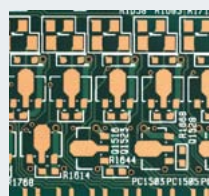

Original image


Standard color processing...

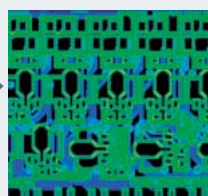

Shade differential display


Conventional processing captures all tone changes, rendering any distinction of the copper foil and its surrounding components impossible.

If using color shade processing

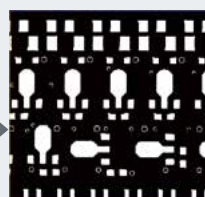

Color to Gray display

A.C.E.II selects the copper color and blackens the area around it

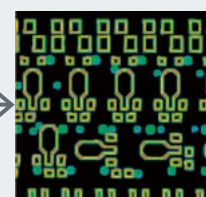


Shade differential display

A.C.E.II accurately extracts only the copper foil portions.

KEYENCE's original color shade processing


Standard color shade processing

This process converts all colors to a certain level of gray. Making similar or close colors hard to differentiate between, as well as not accounting for saturation and brightness levels and potential changes.

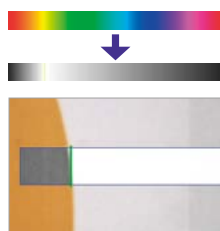

KEYENCE color to gray processing

Unlike conventional color extraction where small color changes are hard to distinguish and saturation & brightness are not accounted for, the KEYENCE color extraction works with all three aspects. As Hue, Saturation & Brightness are all adjustable, small changes in color or shade can be adjusted for and reliable stable processing is ensured.

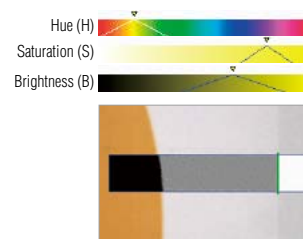

The edge required for detection

FINE COLOR PROCESSING

Fine color processing directly processes full color information exactly as the color camera captures it. This is ideal for detecting stains on sheets, films and non-woven cloths where the stain can appear in any color with respect to the background. No setup is required for color extraction, allowing users to complete the inspection with one simple operation.

Foreign particle detection on a non-woven cloth



Original image



Shade differential stable detection of all colors.



Even if the background is darkened...



Reliably extracts all colors.


Overcoming the weaknesses of full color processing

Intensity cancellation function (glare removal)

The newly added intensity cancellation function solves a common problem of detecting all the changes when using full color processing on color images. This function delivers stable detection performance by ignoring glare and lighting variations on the target background, and detecting only the area where hue and saturation differences exist.



Even in targets with varying lighting conditions

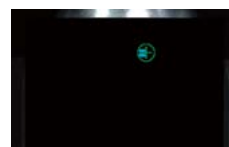

Detects only the defect

IMAGE OPERATION FUNCTION

Create a single image from multiple images through a host of advanced image combining functions

The XG Series has a multitude of image operation functions, including mathematical (addition, subtraction, multiplication, division), logical operations, bit calculations, rotating/parallel translations, zoom, trapezoidal correction and pixel number conversion. Being able to combine multiple images into one resolves a number of issues that have made some conventional inspections difficult.

IMAGE CALCULATION EXAMPLE 1

MULTI-LIGHTING & IMAGE COMPOSITION

Even with defects on the same target, optimal lighting can differ for different cases of flaws (projections/depressions) and stains (shade intensity). Although two image captures and two different lighting techniques are used for individual defect inspection of the target. The combination of the two images and defects can be put together to be processed and displayed together.

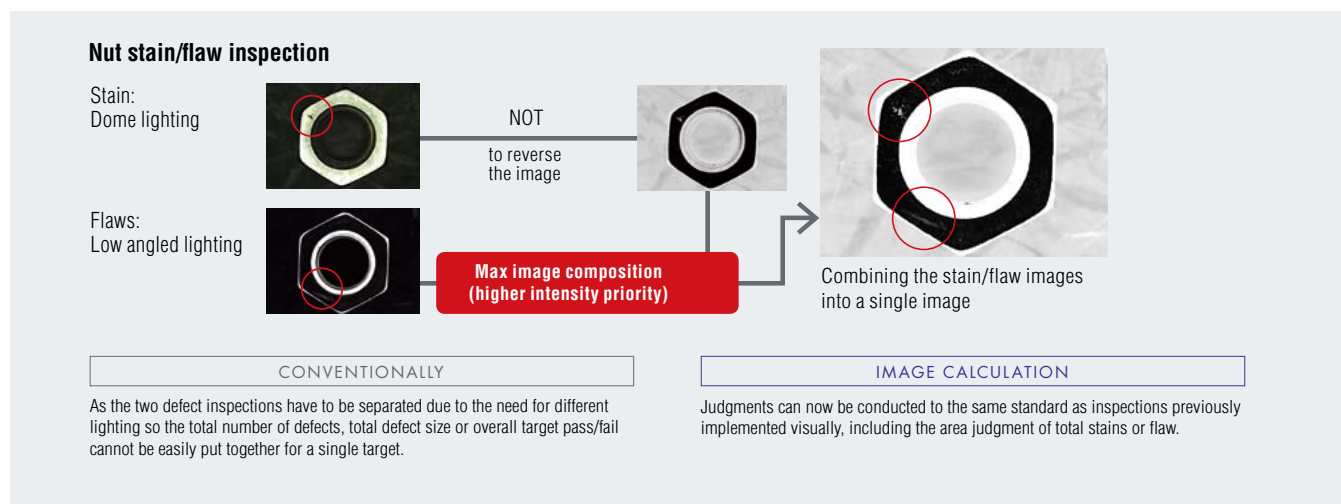


IMAGE CALCULATION EXAMPLE 2

CHANGING LIGHT INTENSITY & IMAGE COMPOSITION

Targets can often have different types of defects requiring different lighting methods for stable detection eg (scratches/burrs and surface stains). The flexibility of the XG means multiple lighting patterns can be cycled through and tools applied ensuring correct inspection of the part. At the same time the image operation function enables composite images to be created so all the detected defects can be shown on screen and processed at once per inspection.

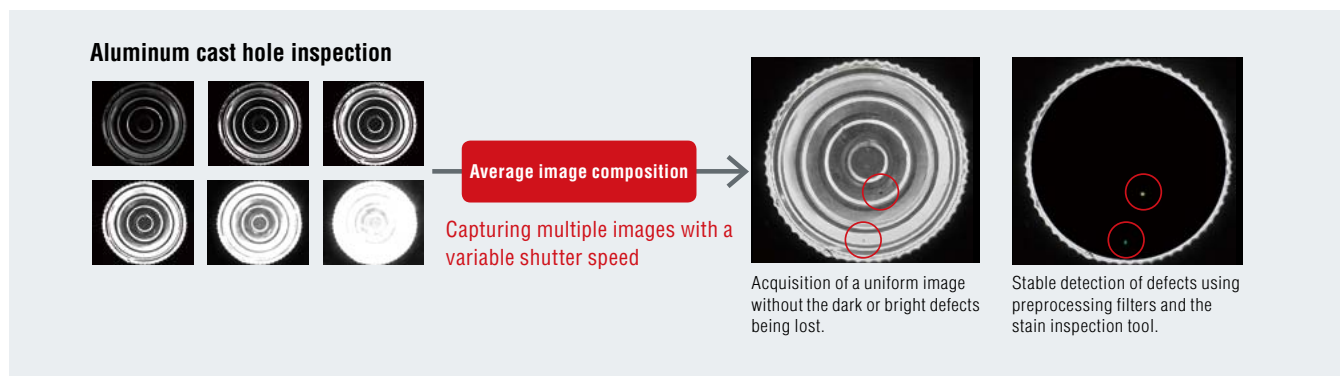


IMAGE OPTIMIZATION

PROCESSED IMAGE REGION FUNCTION FIRST IN ITS CLASS

Map the inspection region to the ever changing target image or setup complex fixed inspection regions

The XG gives a wide range of image inspection region options. Simple (rectangle, circles, arcs etc.) and complex shapes (multi-node, multi-region) can be easily drawn on the image. Additionally, a region can be designated and mapped to the binary boundaries of an image for ever changing target shape and size inspections. The vision inspection region can adjust for geometric shapes like circles and straight lines or more complex contours such as ovals or free-form curves.



Stain detection on a plastic mold

Automatic inspection region adjustment on complex shapes based on their binary image. Enabling stable detection on any target even without position adjustment.



CALIBRATION FUNCTION

Image calibration including tilt, and lens distortion correction

The XG removes conventional image processing problems caused by camera mounting angle and lens distortion. The camera can be calibrated precisely, orientated about its axis and have its origin offset from its location for true measurement, scaling and position processing.



TILT CORRECTION

The calibration function corrects for the camera angle that occurs during mounting. Unlike trapezoidal correction, this accurately corrects the entire image by making use of numerous calibration patterns across its field-of-view. This resultant normalized image is also effective for image processing when forced to mount the camera at an angle due to space restrictions.

LENS DISTORTION CORRECTION

The calibration function also corrects for lens distortion. A uniform image can be acquired on the entire screen, allowing for accurate dimensional measurements, positioning and part inspection to be achieved.

Location and inspection of disk marks

Resolves the problem of differing target shapes and orientations during part/feature searches.




Original image

Calibrated image

Width measurement of a solar battery cell

Resolves the problem of differing measurement results at the center and edges of the image area due to lens distortion.

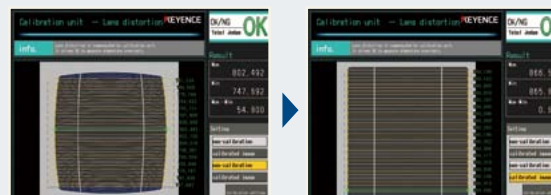

Original image

Calibrated image

IMAGE STITCHING

JOINS MULTIPLE CAPTURED IMAGES AND PERFORMS HIGH-RESOLUTION INSPECTION A STABLE INSPECTION WITH IMAGES OF GREATER ACCURACY

XG-8000 Series

Up to 4 images are joined together to generate a single stitched image*. By performing an inspection with stitched images, it is possible to achieve an inspection of greater accuracy and in a wider area. This is also effective in situations where one target is used in the images taken from multiple cameras.


IMAGE STITCHING EXAMPLES

Image stitching using captured images from multiple cameras

By performing image stitching with images that have been captured with multiple cameras, it is possible to generate an image that appears to have been captured with a single camera. An inspection can then be performed on this single image. By stitching together 4 images that have been captured with four 5 megapixel cameras, it is possible to inspect images that have a resolution of up to 20 megapixels.

*Included with the XG-8700/XG-8700L only. It should be noted that this cannot be used with other controllers.

High-resolution inspection with 4x 5 megapixel camera units

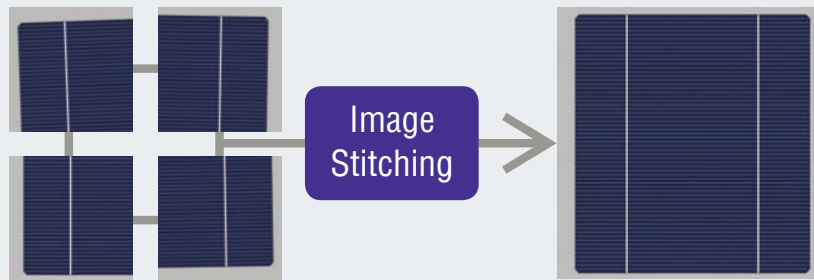

CONVENTIONALLY

The areas around the boundaries of the camera are exempt from inspection or the inspection is performed after using multiple cameras and overlapping multiple images.

IMAGE CALCULATION

By performing an inspection with a single image, it is possible to perform high-resolution inspection that is seamless and without overlap

VISION TOOLSET

The XG Series contains a wide range of vision tools for a variety of applications. From defect detection to barcode reading, the extensive vision toolset gives the XG Series the power to solve any application.

Area

The Area tool uses binary processing to detect either white or black pixels in a specified area. It will then count the pixels in this area and can use this measurement to perform presence/absence type applications.

Pattern Search

The Pattern Search tool looks for a specified target on the captured image. This can be used with other tools to find the pattern and adjust the position of those tools based on the pattern position. Limits can also be set based on count, position, and match percentage.

Edge Position

The Edge Position tool will find the location of edges within an inspection region. In this tool, the scan direction, edge direction, and maximum number of edges to count can be specified. This tool can count up to 3600 edges.

Edge Width

The Edge Width tool can find the distance between two edges using the same method of detection as the Edge Position tool. This tool has the ability to detect inner/outer gaps, or user specified gaps, and allows the user to set limits based on the distance between the two edges.

Edge Pitch

The Edge Pitch tool finds the maximum, minimum, and average distances between pairs of edges. It is able to measure the width of the gaps or the distances between the centers of the gaps. This tool is used to inspect for equal sizing or equal spacing over a range of parts.

Edge Angle

The Edge Angle tool can scan an image in a specified direction to locate two edges and find the angle formed by connecting the two edges. Once the angle is found, limits can be set and different parameters can be outputted, such as the edge positions and edge angle.

Edge Pairs

The Edge Pairs tool is essentially an advanced edge pitch tool. Unlike the Edge Pitch tool, the Edge Pairs tool can scan a target twice in a user specified direction. The double scan allows for a more stable inspection.

Stain

The Stain tool is a great tool for defect detection. It works by comparing adjacent groups of pixels to each other to look for relative contrast changes. When the contrast change is large enough, the tool will visualize it from a range of blue to red, where red is the greatest change in contrast.

Blob

The Blob tool uses binary processing to count groups of white or black pixels. An extensive Aspect Filter can be set to specify what kind of pixel groups you want to consider as Blobs. Limits can be set on the remaining blobs to perform a variety of inspections.

Trend Edge Position

The Trend Edge Position tool can locate the maximum and minimum positions across a length of an edge. This tool finds the profile of an edge across many points and outputs different positioning data. Not only can it find a point of a straight line, it can be used to find a circle center.

Trend Edge Width

The Trend Edge Width tool can measure the edge width across a length of an edge. Just like the Trend Edge Position tool, it locates the profile of an edge across many points to locate positions like the minimum and maximum edge width.

Trend Edge Stain

The Trend Edge Stain tool also extracts the profile of an edge across many points. Unlike the other Trend Edge tools, Trend Edge Stain looks for any deviations along the found edge. It is a powerful tool for locating imperfections like burrs, chips, flash, or shortshots.

Intensity

The Intensity tool reports the grayscale intensity of a specified region of the image. It can be used for simple presence/absence applications or for the Preserve Intensity filter, which stabilizes the image brightness.

Color

The Color tool looks at a specified region of the image then reports back color information about that region. The color values can be reported as RGB (red, green, blue) or HSB (hue, saturation, brightness).

OCR

The Optical Character Recognition tool will readout and analyze character strings in the inspection region. This can be used for applications like lot code inspection and serial number checking. The internal calendar can be referenced for limits and character encryption tables can be used.

2D Code Reader

A 2D barcode can be detected and analyzed. The result data can be split into 8 sections for easy management of the decoded information. Sorting type applications can be performed by matching the detected code to a string reference table. (QR, MicroQR, Datamatrix, Rectangular Datamatrix can be read.) It is also possible to verify the quality of printed information.

1D Code Reader


A 1D barcode can be detected and analyzed. The result data can be split into 8 sections for easy management of the decoded information. Sorting type applications can be performed by matching the detected code to a string reference table. (Code 39, Code 128, UPC/EAN/JAN, GS1 Databar, ITF, Codabar(NW7), PharmaCode can be read.)

Characterization

Defect or target detection can be performed by comparing the detected intensity levels of groups of pixels to that of a base intensity. Light and dark targets can be differentiated as well as be categorized based off properties like area, volume, axis ratio, perimeter, and roundness.


CONTROLLER FLOWCHART EDITING GIVES THE USER COMPLETE CONTROL NEW

The controller supports direct interaction with the image processing flowchart without a PC. Enabling editing, addition, movement and configuration of different vision units with the handheld console. With the easy to navigate GUI, the time taken to make adjustments is kept to a minimum.

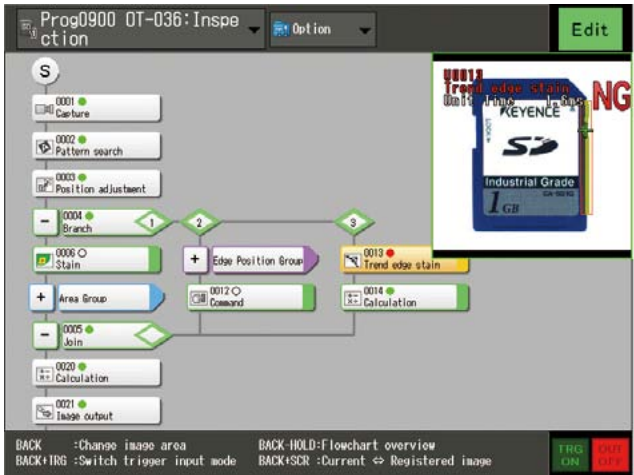

OVERALL FLOW CHART DISPLAY

The full flowchart can be displayed on screen for a full view of the operation. Navigation on large scale flowcharts is quick, easy and stress free as the area needing to be viewed can be selected from the map with the display cursor.

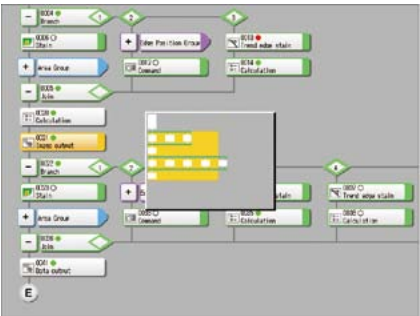

UNIT OPERATION & JUDGMENT DISPLAY


Each unit on the flowchart has an indicator to show whether it is being processed and its pass/fail status (OK/NG). This enables current state of the image processing flow to be easily checked at a glance.



- [Mark display]**
- Unit processed, judgment - pass (OK)
 - Unit processed, judgment - fail (NG)
 - Unit not processed



UNIT DIRECT VIEW

The detailed results and settings of a unit can be verified simply by placing the cursor over the relevant unit on the flowchart. Display unit results, show calculation terms, and the individual unit processing time

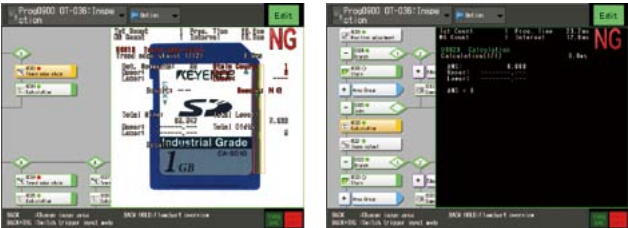

CONDITIONAL BRANCHING

The conditional branching used in an image processing flowchart can also be configured and displayed. Branches can be displayed in different colors and minimized to help with effective programming.

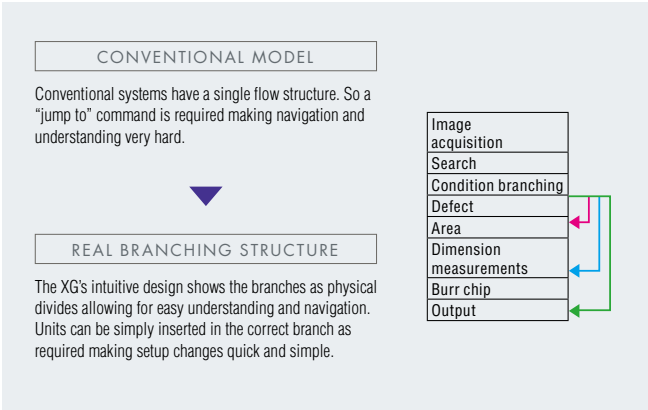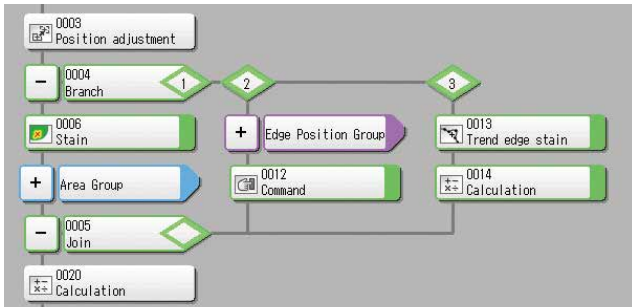

INDUSTRIES

HARDWARE

IMAGE OPTIMIZATION

PROGRAM CREATION

DEFECT INSPECTION

UTILITIES/ USER INTERFACE

CONNECTIVITY

DEVELOPMENT VISION EDITOR

LENS CHART

SYSTEM CONFIGURATION

PRODUCT LINEUP

DIMENSIONS

SUPPORT

STAIN INSPECTION TOOL

A wide array of setting parameters and strong visualization tools makes this the industry standard in surface defect inspection.

The stain inspection tool finds defects such as stains and flaws by comparing the intensity of a user defined pixel grouping to that of its surroundings. For stable reliable inspections, stains can be grouped and filtered based on size, shape and contrast level. In addition the contrast view enables real time visualization on the performance of the tool to a user both during run and setup modes. Helping enable easy setup whilst maintaining consistent performance allowing for quick easy on machine tuning.

Foreign particle detection on the inside of a container

Conventional binary processing would not be able to detect the foreign particles as there is very little contrast between the particles and the dark portions of the container, however, stain inspection mode can compare the differences with the surroundings, allowing reliable detection of only the foreign particles.




CONTRAST VIEW DISPLAY

Using the colors blue, light blue, green, yellow and red, the contrast view display assigns a color to defects according to the intensity difference between them and the surrounding area. The contrast view display updates in real time so you are able to see the defect position and intensity differences, allowing visual and intuitive confirmation of the differences between the defect you want to detect in comparison with the background or noise.

Bad mark detection on PCBs (Contrast view)


The contrast view can be used not only during setup, but also during operation. Leading to practical uses including the highlighting of potential areas of false detection and the verification of the current settings.

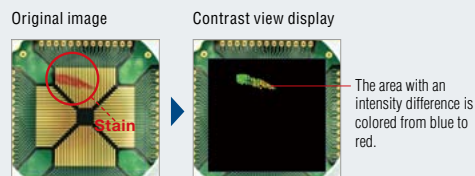

The relationship between contrast view colors and the stain level (guideline)



Dent detection on a metal shaft surface

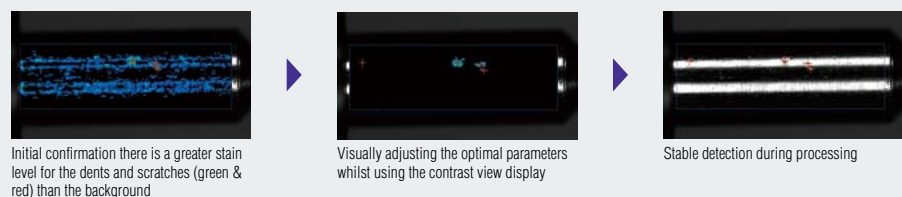


INDUSTRY FIRST GROUPING FILTER

Various group filter settings are also available for the stain tool to enable processing and sorting of stains and defects. Filters include basic fill and area based functions as well as degree of circularity, major axes length, aspect ratios and axis ratios. Such settings support the filtering of defects for more efficient pass/fail and sorting applications based on defect size and shape.


Crack detection of a tablet (before grouping filter)

The stain tool also picks out the granules and other changes that are of a similar stain level.

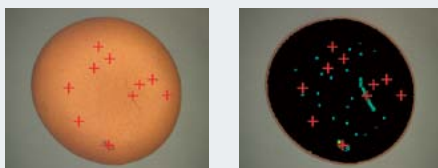

Crack detection of a tablet (after grouping filter)

Filtering of defects down to long thin cracks only using area and axis ratio.

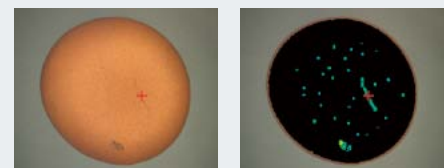

TREND EDGE STAIN INSPECTION TOOL

Optimized multi-point profile inspection for burr/chip applications

This tool extracts the profile from the edge of a target and uses it to recognize slight differences such as burrs and chips. In addition to simple geometric shapes such as circles and straight lines the tool can also be used on complex contours such as ovals, and continually adjusting free form curves.


Loose Cable Winding Inspection

Even if the standard target shape changes from target to target during a process the free curve will still map the normal profile of the target. At the same time lots of individual edge points are detected ensuring the projection is recognized as well.



EXTENSIVE PARAMETER SETTINGS SUPPORT VARIOUS DEFECTS

Due to the wide range of parameters, it is possible to filter out defects based on inspection criteria. Optimal settings can be chosen based on aspects such as +/- defects (burr/chips), defect level, width and area.

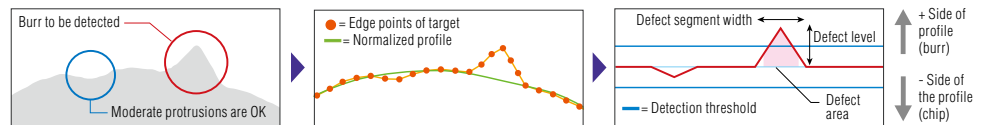

CHARACTERIZATION TOOL **NEW** **INDUSTRY FIRST**

EASILY DETECT & CLASSIFY TARGETS BASED ON GRAYSCALE INFORMATION

XG-8000 Series


The characterization tool allows for targets to be identified and classified based on grayscale rather than binary data. This enables true characterization and filtering of detected targets based on true image data. Additional information for classifying and identifying defects that cannot be obtained through binarization such as volume and level of change is also possible with this new tool.

■ Differentiation of a variety of defects on a condenser

• Light & dark defects




Sorting bright and dark defects.

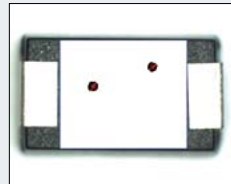


Blob (binary)

After binary conversion, both defects look alike.

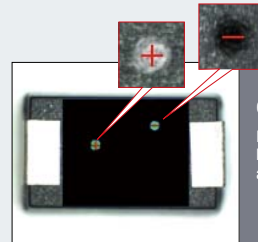

Characterization
Divides defects into bright (displayed as +) and dark (displayed as -).

• Shallow and deep defects

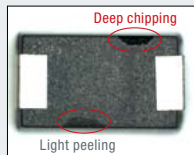

Differentiating between deep chipping and light peeling.



Blob (binary): Area measurement


With area there is no noticeable difference.



Characterization: Volume measurement

Differentiation is achieved by measuring the volume for each shade.


■ Sorting defects

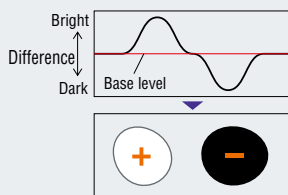

The characterization tool uses a base reference value and the contrast of the defect to sort targets into bright and dark types.


■ Calculating volume

By detecting the different levels of contrast in the target and the area they cover, the volume of the target can be calculated. This makes it possible to differentiate targets based on volume.

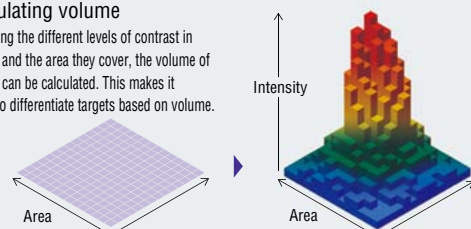


ONLINE OK/NG BATCH ANALYSIS

While the system is processing parts online, the batch results from a series of images (taken from the main memory, an SD card or the FTP server) can be displayed. This allows for the easy confirmation of changes in settings without affecting inspection performance. In addition to the batch testing, Master OK (pass) and NG (fail) images can also be used for comparison purposes. The batch analysis function makes it very easy for a user to fully understand a system's performance at any time without having to collect data or take the system offline.

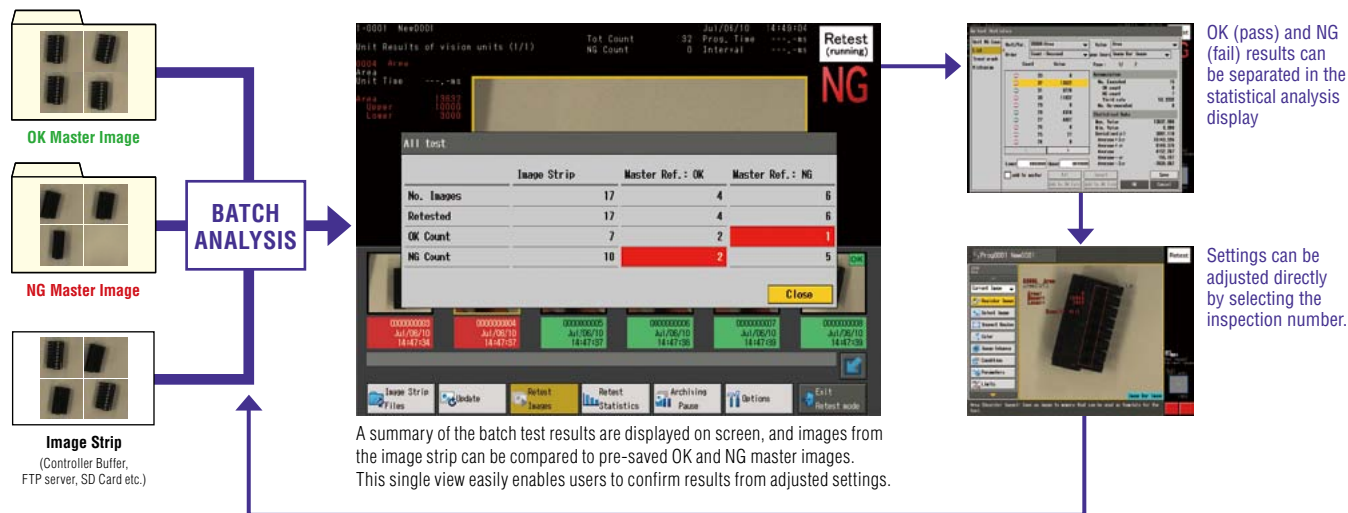


Conventional performance analysis

When initially dialling in a system or making modifications to existing settings, it becomes very easy to lose sight of the original requirements of the inspection. OK images become NG and vice versa and it becomes harder and harder to meet the desired standard.

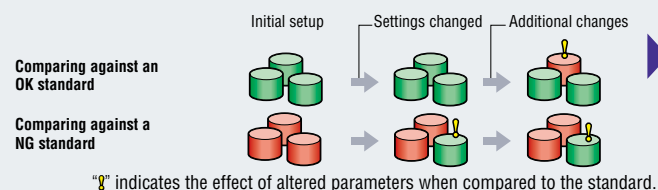


Batch Testing

By retesting images against master images, it is easy to confirm whether there are any changes in the inspection standards compared to the initial standard. If changes have occurred having master OK and NG images to work with makes it simple to compare and adjust settings without affecting the original intent of the inspection.

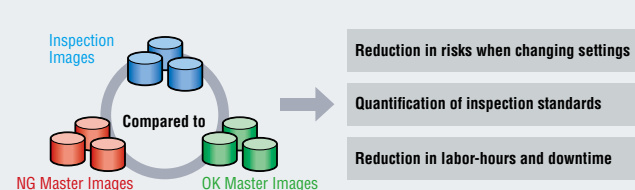


CUSTOMIZED SCREENS & INTERFACES

The XG Series supports the creation of custom screens directly on the controller. A fully customized screen can be easily created to display a wide range of results, images or graphics as required. Multiple intuitive screens can be designed for different views of the image processing results

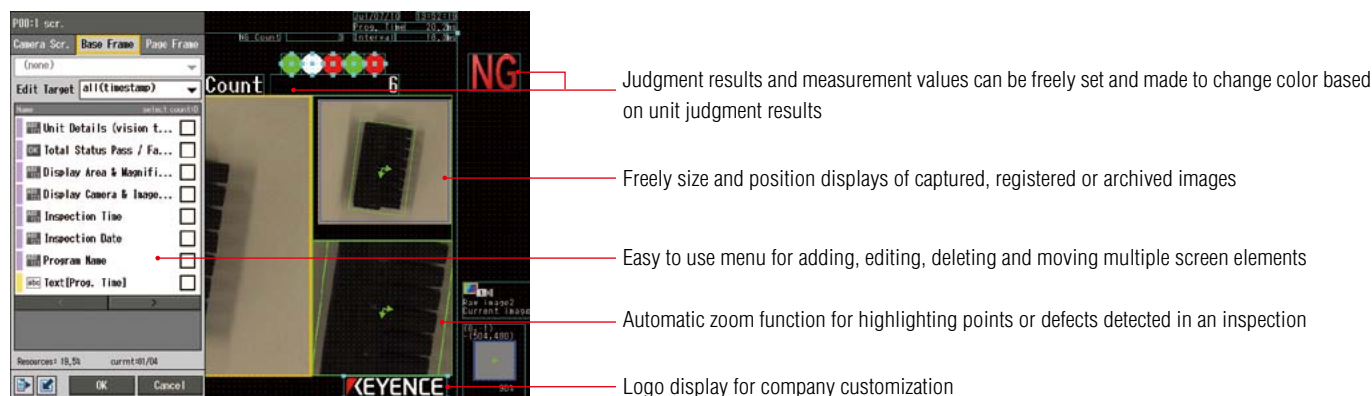

ONLINE RE-TESTING & FLOWCHART EDITING

The Retest function of the XG Series allows images stored from inspections to be selected, retested, and edits to be made while the controller still fully processes other inspections online. This allows the user to make program adjustments in order to optimize the settings without effecting the current inspection process or causing any downtime on the machine.

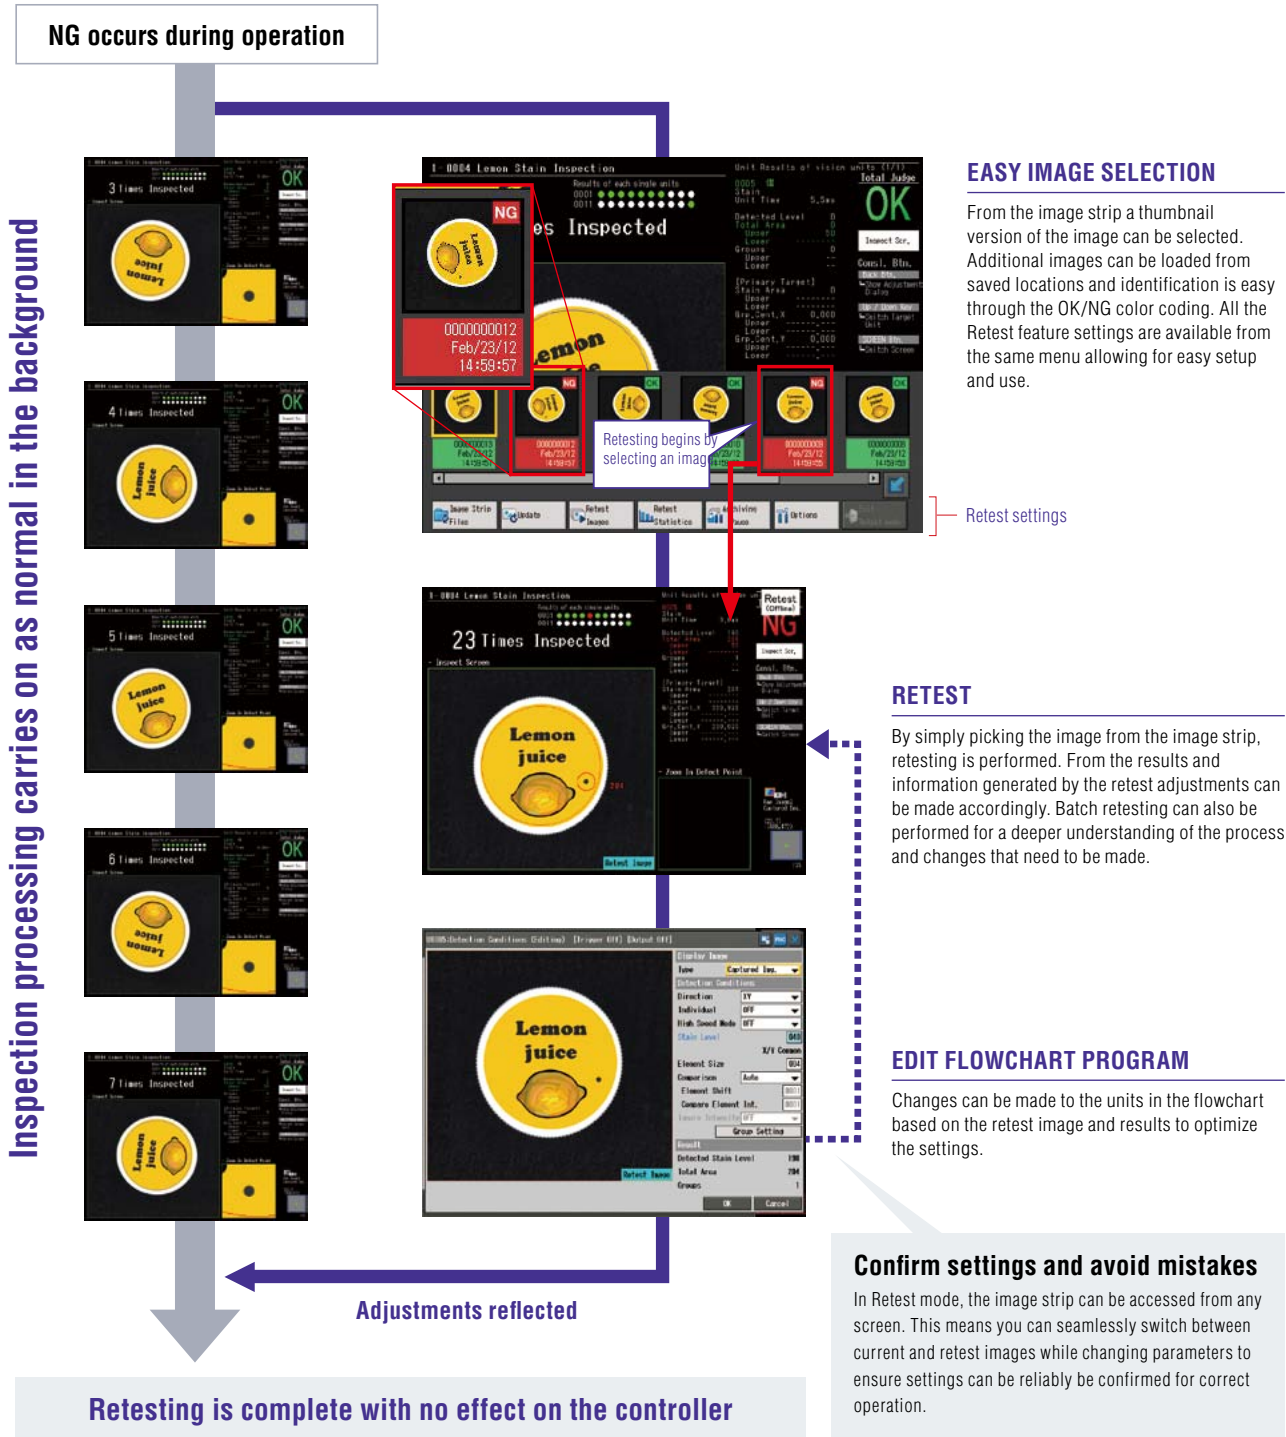

SCREEN EDITOR

Easy creation of the controller display screen and operating interface


A unique display screen configured to your needs and desires can be easily created by dragging, dropping and re sizing different components from the parts list. By being able to use and configure many components such as BMP images, graphics, text, measurement value and camera images the screen can be designed with the operator in mind. Up to 100 different screens can be created per program for full customization to any process. Screens and components can be easily displayed and switched between, not only via external inputs, but also based on image processing results or settings.

INDUSTRY FIRST

Settings for dialogs or display items can be easily found and navigated to with the tree-view hierarchal screen browser.

Screen positioning is completed by dragging-and-dropping required components, such as camera images and display components, from the parts list.


The layered display view helps allow for easy intuitive design of the screen overlays, components and dialogs that would have been typically complex to achieve.

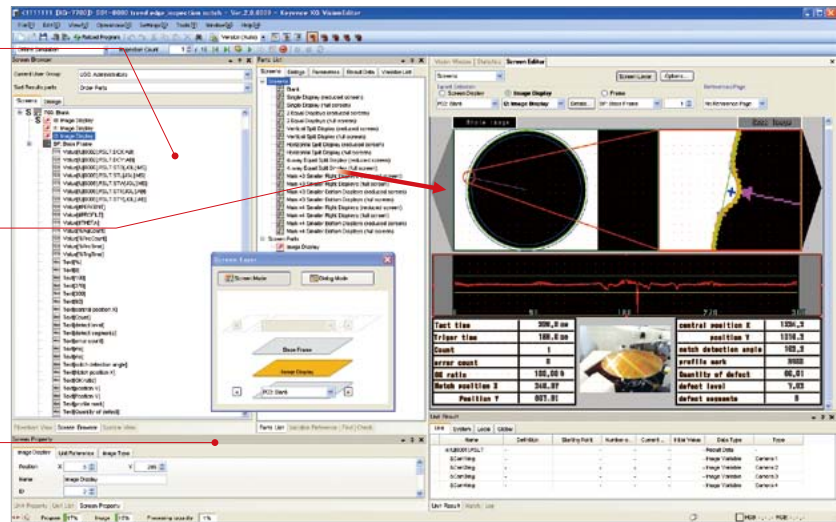


CUSTOM MENU CREATION INDUSTRY FIRST

Create and customize operator menus and interfaces for easy operation

For run-time user interaction with the XG Series, up to 900 unique custom menus can be created per program. Menus can be linked to create cascading walk throughs or choices based on a users input. Menus can also be tied into the timing and operation of the image processing flowchart so that they appear when necessary for a users action and input to be taken. The menus can also be configured and displayed based on the user account logged into the system.

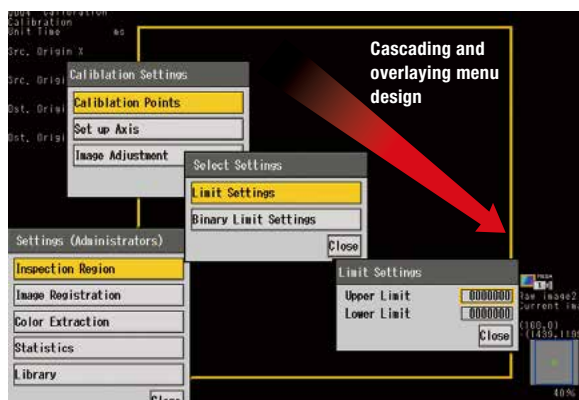

Dialog parts list

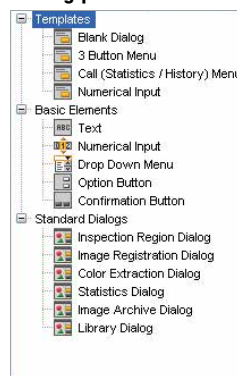

Components


These are the fundamental parts for the creation of a custom menu. Drag and drop from the list the components that suit your needs for your menu.

Built-in menus

Frequently used operations, such as statistics, image archive and library registration. Have already been prepared to be incorporated right away.


User account based menus

By changing the display/non-display parameter for each menu based on user accounts, different menus and levels of operation can be created for administrators and operators.

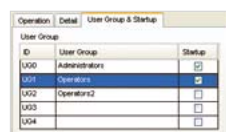

Detailed dialog display and interaction settings

Detailed settings for each menu are possible, including parameters for position, when to display/remove on screen as well as handheld console button interaction.

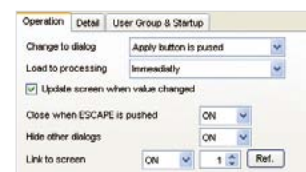

Example of custom menu use: Step by step configuration

Step by step procedure changes such as product change over or shift adjustments.

Model Selection

Select the model for inspection

Select the model no.

Model no.

Next, the image will be recorded

Register Image Cancel

Register Image

Record the sensor target

Capture the sensor image in the center of the screen and press the Record button

Record

Next, set the Area Setting

To Area Setting To Back

Area Setting

The inspection region will be set

Specify the inspection region from the Area Setup below

Area Setting

Next, set the Judgment Tolerance

To Judgment Tolerance Setting To Back

Judgment Tolerance

The judgment tolerance will be set

Select the inspection that will set the judgment tolerance

Set the upper and lower limits

Upper limit

Lower limit

Save and Finish No Back

By creating menus for a step by step process (such as calibration) there are no reasons why adjustments shouldn't be made or settings being incomplete and steps missed.

CONVENTIONAL SYSTEMS

Due to different adjustment methods and different personnel making changes, cases often emerge where the setting is incorrect or varies between operators. With conventional systems complex parameter driven menus may need to be understood. It takes time and resources for operators to be trained and sometimes due to the complex menu interface the ability to operate the machine is limited to a few people.

CUSTOM MENUS

Necessary steps and required settings can be put together to match up with the process. Menus can also be attributed to the relevant aspects of the image processing flowchart. This helps make sure that any operator of any level can easily be guided through the process required on the machine.


ActiveX CONTROL

Fully customizable PC interfacing


The XG controller can be incorporated and become an integral part of a machine through the use of the ActiveX control. A PC interface can be designed that not only interacts with the XG Series, but also other aspects of the machine and its operation. In addition to being able to create a PC control interface, measurement data, result information, historical data and file management are also possible through the ActiveX control. Multiple connections can also easily be established and configured for bringing together multiple controllers or machines. All this allows for the collective management of multiple systems into one interface and the development of a full production management system.

This is an example of a PC interface bringing together camera images and operational buttons for the XG Series vision system as well as other machine functions required for wafer alignment and process control within the semi-conductor industry. The operator only needs to use one interface for both vision and machine control.

- ActiveX is a registered trademark of Microsoft Corporation, U.S.A.

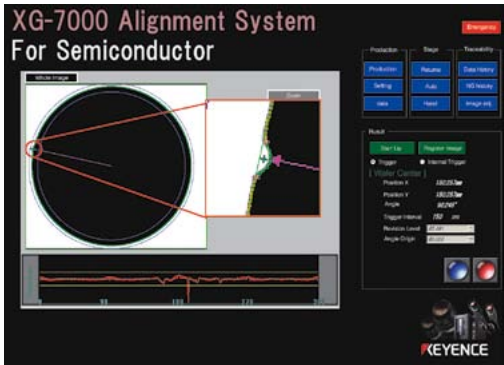

Machine control and structure with ActiveX

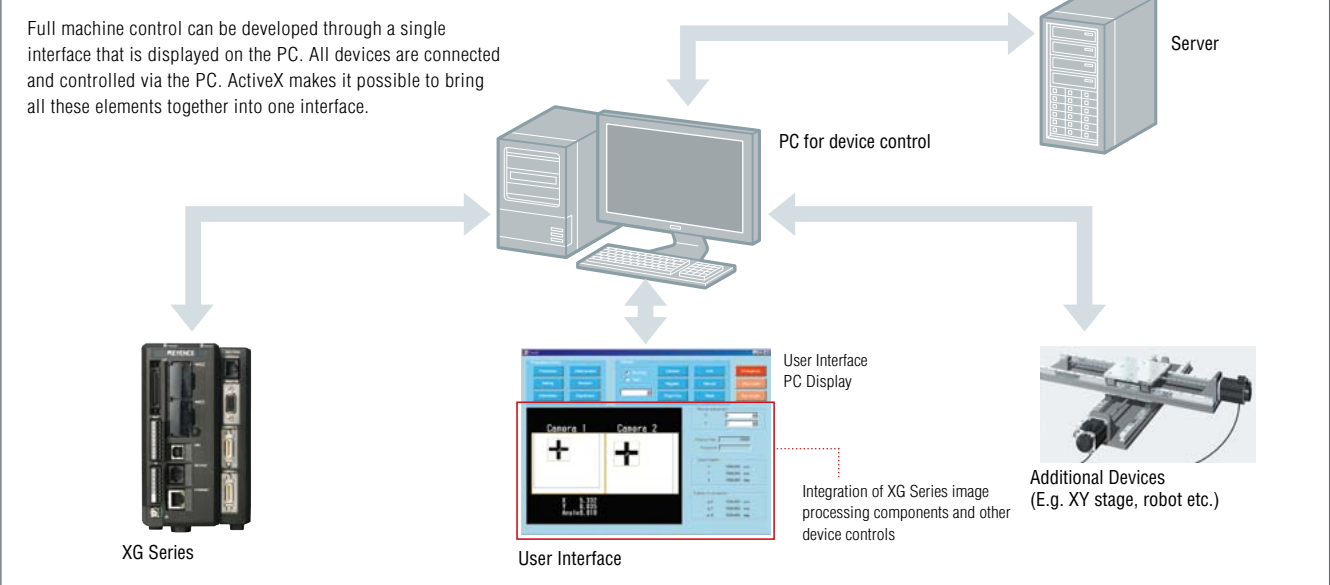


STORAGE, COLLECTION & SIMULATION

Save only the desired images for analysis and simulation

The image output buffer enables images to be streamed to a variety of external devices (such as an FTP server) making it easy to test and analyze with the simulator software and statistical functions of the XG Series. Being able to define how and what images are stored where significantly helps with the separation, analysis and retesting of failed inspections. Using the simulator and statistical tools together makes the correction and the optimization of settings very easy.

[Setting optimization using the XG Series]

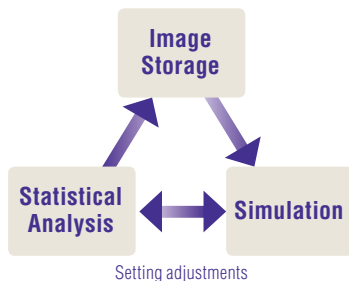


Required items for setting optimization

Image Storage	<ul style="list-style-type: none"> Save a large volume of images Specify locations based on conditions
Simulation	<ul style="list-style-type: none"> Work with the XG Series controller environment for testing on a PC Re-test and simulate results with stored images
Statistical Analysis	<ul style="list-style-type: none"> Superior analysis and understanding of processed items Automatic generation of statistical results including maximum, minimum, yield and standard deviation.

FTP IMAGES DIRECT TO A NETWORK OR HDD DRIVE

Images cannot only be saved directly to the SD card used in the controller, but also transferred directly to NAS* (Network Attached Storage) through a LAN connection. Long-term image storage can also be conducted by connecting an easily sourced large capacity (10Gb, 100Gb, 1Tb etc.) external HDD. In addition, by using the image output buffering option, continuous NG images will not be lost.

* NAS refers to a storage device that is designed for use on networks and contains file server software. Unlike USB based external drives that can be only connected point to point and need to be configured, a NAS device becomes immediately part of the network when it is connected, making it available for all other devices to use. Thus simplifying data browsing and file sharing.

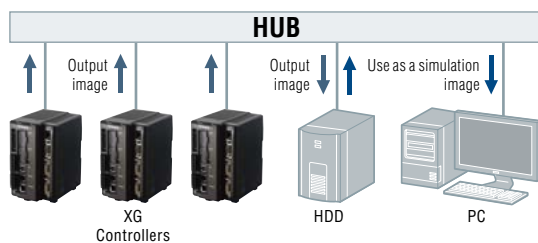

Multiple PC Software simulations can be easily managed and run from the images transferred by FTP. By defining a folder the XG controller can directly output the images to the correct location on the PC for the individual simulator to reference.



PC SIMULATION & REMOTE SUPPORT VIA A PC & MOUSE


Interact directly with the XG Series GUI via your PC and mouse. Existing settings can be tested and simulated with saved images via the PC simulator. Furthermore, the XG VisionTerminal software offers remote connectivity and data logging capability

Fully interact with the system with a mouse
Process up to 50000 images with Simulator+



STATISTICAL ANALYSIS FUNCTION


Any measurement data or variable value can be displayed as a trend graph or histogram. The result data includes information on yield rates as well as standard statistical data (such as max., min., average, SD and 6σ values). Up to 100,000 data points can be plotted and saved, allowing for processes to be tracked and optimal settings to be set and recorded.

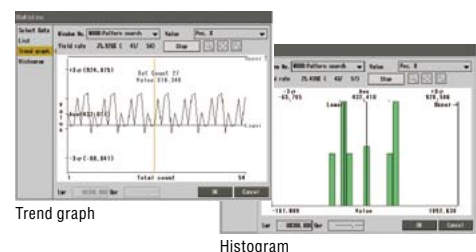

COMMUNICATION INTERFACE


A diverse selection of integration options and utilities for use in any facility

The XG Series supports a wide range of interfaces, protocols and I/O devices. Ranging from CC-Link, PLC-Link, EtherNet/IP™, PROFINET, USB, RS-232C, discrete I/O and SD cards. All these combined give the XG Series the ultimate flexibility for easy integration. Coupled with easy to use monitoring tools, integration man hours and costs can be easily reduced.

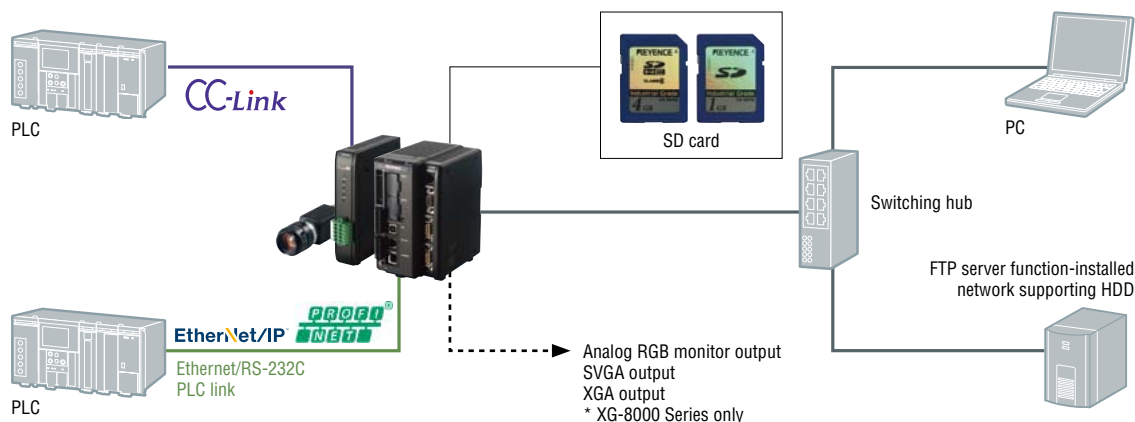


COMMUNICATION MONITORING TOOLS


An I/O monitor, RS-232C monitor, EtherNet/IP™ memory monitor, PROFINET memory monitor, PLC-link memory monitor, CC-Link memory monitor, and Ethernet monitor have been loaded on to the XG controller and are extremely beneficial in the verification of communication and I/O terminal wiring, ensuring smooth verification during the startup process.

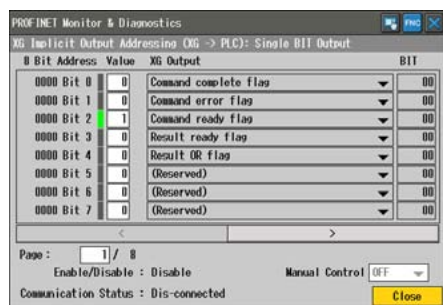

EtherNet/IP™ memory monitor, PROFINET memory monitor

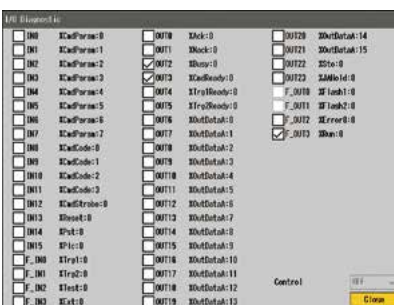

I/O monitor

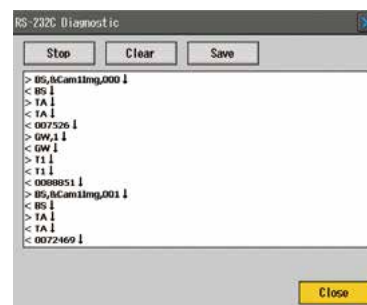

RS-232C monitor

EtherNet/IP™ SUPPORT

EtherNet/IP™

To enable easy integration into many existing facilities across many industries the XG Series fully supports EtherNet/IP™ communication. Connectivity can be established with any PLC supporting EtherNet/IP™ via a standard LAN network.

PROFINET COMPATIBLE

**PROFI
NET**

PROFINET is an open industrial Ethernet standard that has been equipped with high flexibility and high speed for automation control in a variety of industries and it has been included as part of the communication functions for the XG-8000/7000 Series. If a compatible device is present, it is possible to communicate via the LAN port on the main unit regardless of vendor.


SUPPORTS VNC NEW

VIRTUAL NETWORK COMPUTING

The XG controller has been equipped with a VNC server function. If a PC that has had VNC client software installed on it is available, then it is possible to perform monitor screen display and remote operation via network. Also, monitor screen display is possible even with a verified industrial touch panel that supports VNC client functions.

Easily achieve what you want, without the stress

Integrated image processing development software: XG VisionEditor

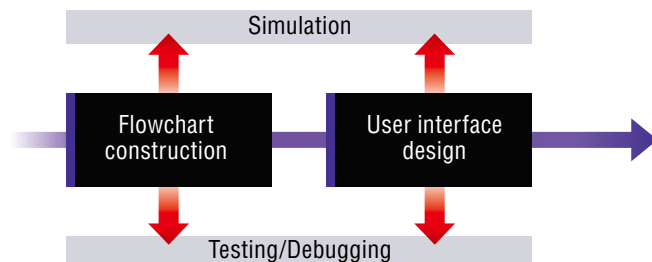


During application testing and solving, simulations and debugging can be quickly conducted at any time, allowing for efficient design.

SEAMLESS DEVELOPMENT, ENABLING FAST POWERFUL YET EFFICIENT APPLICATION SOLUTIONS

The XG VisionEditor is specialized PC software that can conduct everything from the construction of image processing solutions and the creation of user interfaces to debugging and simulations all at once. The PC software does not use programming language, and instead all operations are conducted in an easy to understand GUI environment. Here drag-and-drop dominates, enabling complex processing to be easily developed in minimal time. Due to the incorporation of debugging tools that simultaneously discover errors (both static and dynamic) that occur during development, man-hours dedicated to debugging have been dramatically reduced. All in all the overall time between construction and deployment have been substantially reduced. By focusing on the optimization of the tools required for providing a solution (the core of image processing inspections) KEYENCE has given the opportunity for significant improvements in machine vision development efficiency.

Flowchart view

By dragging-and-dropping processing units from the parts list into this section, you can easily construct an image processing flowchart. Debugging is easy as errors are highlighted and the usage of variables can be easily seen.

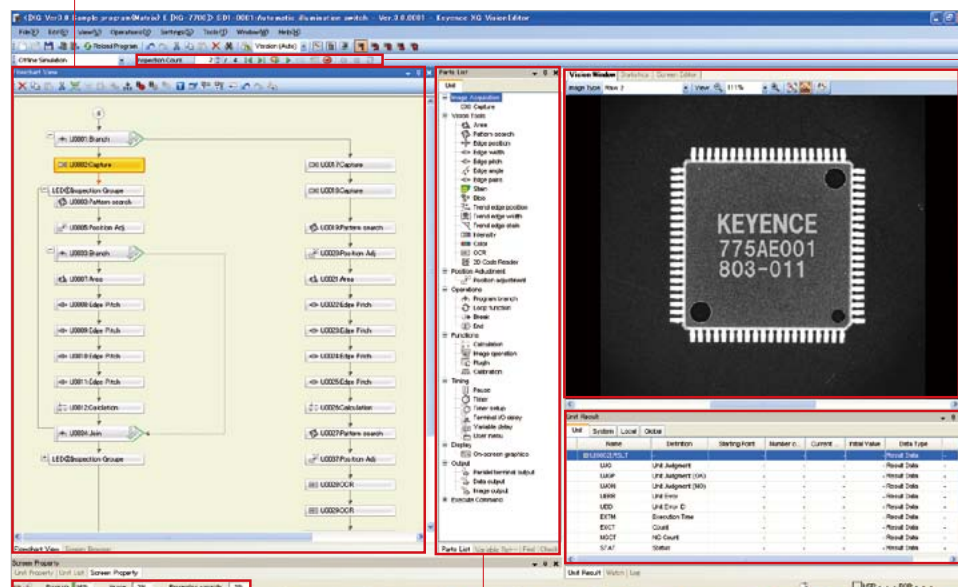

Simulation tool bar

Simulations can be run from images taken from a connected controller, held on a PC or across a network. Options for continuous program operation, step by step or a single iteration are possible too.

Vision window

In addition to displaying captured images and setting up GUI, you can confirm in real-time the processing results of filters or inspections tools

Unit results

All aspects of result and measurement data from units and variables can be viewed here. The unit results section is also equipped with a watch view allowing the display of only the variables or measurement values you wish to see. Helping allow for easy confirmation and analysis of results. In the unit results you can also conduct editing of the variables making dialing in and changes very easy.

Resource display

Shows the resources used in different areas of the controller from the settings made.

Parts list

Lists everything all the way from inspection tools such as edge detection and pattern matching, to control processing such as condition branching timers and loops. By dragging-and-dropping items from this list to the flowchart, the image processing flowchart can be easily constructed.

EASY CONSTRUCTION OF THE IMAGE PROCESSING FLOWCHART THROUGH THE CLICK OF A MOUSE


The basic structure is created through the intuitive Windows based drag-and-drop method. The desired items are simply dragged from the list on the right onto the flowchart to create the structure. The processing units themselves can also be picked up and moved around the flowchart as desired.

You can even drag-and-drop a variable from the list straight into the unit parameter. Typing is also an option, and input is made easy through the auto-complete functionality. Possible options are shown as the string is built up helping to ensure the right information is entered without errors.



EASILY UNDERSTAND THE EFFECTS OF CHANGES

The XG Series allows you to confirm current/initial settings against any changes ranging from image preprocessing combinations, variable values, through to measurement result differences from parameter changes. By being able to confirm the effect of changes and easily test options quickly, optimal settings can be reached in minimal time.

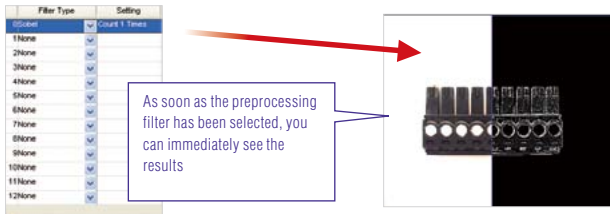

The image shows a "Unit Result" window with a table of results. The table has columns: Name, Definition, Starting Point, Number of, Current, Initial Value, Data Type, and Type. The table contains data for various units including U0000, U0001, U0002, U0003, U0004, U0005, U0006, U0007, U0008, U0009, U0010, U0011, U0012, U0013, U0014, U0015, U0016, U0017, U0018, U0019, U0020, U0021, U0022, U0023, U0024, U0025, U0026, U0027, U0028, U0029, U0030, U0031, U0032, U0033, U0034, U0035, U0036, U0037, U0038, U0039, U0040, U0041, U0042, U0043, U0044, U0045, U0046, U0047, U0048, U0049, U0050, U0051, U0052, U0053, U0054, U0055, U0056, U0057, U0058, U0059, U0060, U0061, U0062, U0063, U0064, U0065, U0066, U0067, U0068, U0069, U0070, U0071, U0072, U0073, U0074, U0075, U0076, U0077, U0078, U0079, U0080, U0081, U0082, U0083, U0084, U0085, U0086, U0087, U0088, U0089, U0090, U0091, U0092, U0093, U0094, U0095, U0096, U0097, U0098, U0099, U0100, U0101, U0102, U0103, U0104, U0105, U0106, U0107, U0108, U0109, U0110, U0111, U0112, U0113, U0114, U0115, U0116, U0117, U0118, U0119, U0120, U0121, U0122, U0123, U0124, U0125, U0126, U0127, U0128, U0129, U0130, U0131, U0132, U0133, U0134, U0135, U0136, U0137, U0138, U0139, U0140, U0141, U0142, U0143, U0144, U0145, U0146, U0147, U0148, U0149, U0150, U0151, U0152, U0153, U0154, U0155, U0156, U0157, U0158, U0159, U0160, U0161, U0162, U0163, U0164, U0165, U0166, U0167, U0168, U0169, U0170, U0171, U0172, U0173, U0174, U0175, U0176, U0177, U0178, U0179, U0180, U0181, U0182, U0183, U0184, U0185, U0186, U0187, U0188, U0189, U0190, U0191, U0192, U0193, U0194, U0195, U0196, U0197, U0198, U0199, U0200, U0201, U0202, U0203, U0204, U0205, U0206, U0207, U0208, U0209, U0210, U0211, U0212, U0213, U0214, U0215, U0216, U0217, U0218, U0219, U0220, U0221, U0222, U0223, U0224, U0225, U0226, U0227, U0228, U0229, U0230, U0231, U0232, U0233, U0234, U0235, U0236, U0237, U0238, U0239, U0240, U0241, U0242, U0243, U0244, U0245, U0246, U0247, U0248, U0249, U0250, U0251, U0252, U0253, U0254, U0255, U0256, U0257, U0258, U0259, U0260, U0261, U0262, U0263, U0264, U0265, U0266, U0267, U0268, U0269, U0270, U0271, U0272, U0273, U0274, U0275, U0276, U0277, U0278, U0279, U0280, U0281, U0282, U0283, U0284, U0285, U0286, U0287, U0288, U0289, U0290, U0291, U0292, U0293, U0294, U0295, U0296, U0297, U0298, U0299, U0300, U0301, U0302, U0303, U0304, U0305, U0306, U0307, U0308, U0309, U0310, U0311, U0312, U0313, U0314, U0315, U0316, U0317, U0318, U0319, U0320, U0321, U0322, U0323, U0324, U0325, U0326, U0327, U0328, U0329, U0330, U0331, U0332, U0333, U0334, U0335, U0336, U0337, U0338, U0339, U0340, U0341, U0342, U0343, U0344, U0345, U0346, U0347, U0348, U0349, U0350, U0351, U0352, U0353, U0354, U0355, U0356, U0357, U0358, U0359, U0360, U0361, U0362, U0363, U0364, U0365, U0366, U0367, U0368, U0369, U0370, U0371, U0372, U0373, U0374, U0375, U0376, U0377, U0378, U0379, U0380, U0381, U0382, U0383, U0384, U0385, U0386, U0387, U0388, U0389, U0390, U0391, U0392, U0393, U0394, U0395, U0396, U0397, U0398, U0399, U0400, U0401, U0402, U0403, U0404, U0405, U0406, U0407, U0408, U0409, U0410, U0411, U0412, U0413, U0414, U0415, U0416, U0417, U0418, U0419, U0420, U0421, U0422, U0423, U0424, U0425, U0426, U0427, U0428, U0429, U0430, U0431, U0432, U0433, U0434, U0435, U0436, U0437, U0438, U0439, U0440, U0441, U0442, U0443, U0444, U0445, U0446, U0447, U0448, U0449, U0450, U0451, U0452, U0453, U0454, U0455, U0456, U0457, U0458, U0459, U0460, U0461, U0462, U0463, U0464, U0465, U0466, U0467, U0468, U0469, U0470, U0471, U0472, U0473, U0474, U0475, U0476, U0477, U0478, U0479, U0480, U0481, U0482, U0483, U0484, U0485, U0486, U0487, U0488, U0489, U0490, U0491, U0492, U0493, U0494, U0495, U0496, U0497, U0498, U0499, U0500, U0501, U0502, U0503, U0504, U0505, U0506, U0507, U0508, U0509, U0510, U0511, U0512, U0513, U0514, U0515, U0516, U0517, U0518, U0519, U0520, U0521, U0522, U0523, U0524, U0525, U0526, U0527, U0528, U0529, U0530, U0531, U0532, U0533, U0534, U0535, U0536, U0537, U0538, U0539, U0540, U0541, U0542, U0543, U0544, U0545, U0546, U0547, U0548, U0549, U0550, U0551, U0552, U0553, U0554, U0555, U0556, U0557, U0558, U0559, U0560, U0561, U0562, U0563, U0564, U0565, U0566, U0567, U0568, U0569, U0570, U0571, U0572, U0573, U0574, U0575, U0576, U0577, U0578, U0579, U0580, U0581, U0582, U0583, U0584, U0585, U0586, U0587, U0588, U0589, U0590, U0591, U0592, U0593, U0594, U0595, U0596, U0597, U0598, U0599, U0600, U0601, U0602, U0603, U0604, U0605, U0606, U0607, U0608, U0609, U0610, U0611, U0612, U0613, U0614, U0615, U0616, U0617, U0618, U0619, U0620, U0621, U0622, U0623, U0624, U0625, U0626, U0627, U0628, U0629, U0630, U0631, U0632, U0633, U0634, U0635, U0636, U0637, U0638, U0639, U0640, U0641, U0642, U0643, U0644, U0645, U0646, U0647, U0648, U0649, U0650, U0651, U0652, U0653, U0654, U0655, U0656, U0657, U0658, U0659, U0660, U0661, U0662, U0663, U0664, U0665, U0666, U0667, U0668, U0669, U0670, U0671, U0672, U0673, U0674, U0675, U0676, U0677, U0678, U0679, U0680, U0681, U0682, U0683, U0684, U0685, U0686, U0687, U0688, U0689, U0690, U0691, U0692, U0693, U0694, U0695, U0696, U0697, U0698, U0699, U0700, U0701, U0702, U0703, U0704, U0705, U0706, U0707, U0708, U0709, U0710, U0711, U0712, U0713, U0714, U0715, U0716, U0717, U0718, U0719, U0720, U0721, U0722, U0723, U0724, U0725, U0726, U0727, U0728, U0729, U0730, U0731, U0732, U0733, U0734, U0735, U0736, U0737, U0738, U0739, U0740, U0741, U0742, U0743, U0744, U0745, U0746, U0747, U0748, U0749, U0750, U0751, U0752, U0753, U0754, U0755, U0756, U0757, U0758, U0759, U0760, U0761, U0762, U0763, U0764, U0765, U0766, U0767, U0768, U0769, U0770, U0771, U0772, U0773, U0774, U0775, U0776, U0777, U0778, U0779, U0780, U0781, U0782, U0783, U0784, U0785, U0786, U0787, U0788, U0789, U0790, U0791, U0792, U0793, U0794, U0795, U0796, U0797, U0798, U0799, U0800, U0801, U0802, U0803, U0804, U0805, U0806, U0807, U0808, U0809, U0810, U0811, U0812, U0813, U0814, U0815, U0816, U0817, U0818, U0819, U0820, U0821, U0822, U0823, U0824, U0825, U0826, U0827, U0828, U0829, U0830, U0831, U0832, U0833, U0834, U0835, U0836, U0837, U0838, U0839, U0840, U0841, U0842, U0843, U0844, U0845, U0846, U0847, U0848, U0849, U0850, U0851, U0852, U0853, U0854, U0855, U0856, U0857, U0858, U0859, U0860, U0861, U0862, U0863, U0864, U0865, U0866, U0867, U0868, U0869, U0870, U0871, U0872, U0873, U0874, U0875, U0876, U0877, U0878, U0879, U0880, U0881, U0882, U0883, U0884, U0885, U0886, U0887, U0888, U0889, U0890, U0891, U0892, U0893, U0894, U0895, U0896, U0897, U0898, U0899, U0900, U0901, U0902, U0903, U0904, U0905, U0906, U0907, U0908, U0909, U0910, U0911, U0912, U0913, U0914, U0915, U0916, U0917, U0918, U0919, U0920, U0921, U0922, U0923, U0924, U0925, U0926, U0927, U0928, U0929, U0930, U0931, U0932, U0933, U0934, U0935, U0936, U0937, U0938, U0939, U0940, U0941, U0942, U0943, U0944, U0945, U0946, U0947, U0948, U0949, U0950, U0951, U0952, U0953, U0954, U0955, U0956, U0957, U0958, U0959, U0960, U0961, U0962, U0963, U0964, U0965, U0966, U0967, U0968, U0969, U0970, U0971, U0972, U0973, U0974, U0975, U0976, U0977, U0978, U0979, U0980, U0981, U0982, U0983, U0984, U0985, U0986, U0987, U0988, U0989, U0990, U0991, U0992, U0993, U0994, U0995, U0996, U0997, U0998, U0999, U1000, U1001, U1002, U1003, U1004, U1005, U1006, U1007, U1008, U1009, U1010, U1011, U1012, U1013, U1014, U1015, U1016, U1017, U1018, U1019, U1020, U1021, U1022, U1023, U1024, U1025, U1026, U1027, U1028, U1029, U1030, U1031, U1032, U1033, U1034, U1035, U1036, U1037, U1038, U1039, U1040, U1041, U1042, U1043, U1044, U1045, U1046, U1047, U1048, U1049, U1050, U1051, U1052, U1053, U1054, U1055, U1056, U1057, U1058, U1059, U1060, U1061, U1062, U1063, U1064, U1065, U1066, U1067, U1068, U1069, U1070, U1071, U1072, U1073, U1074, U1075, U1076, U1077, U1078, U1079, U1080, U1081, U1082, U1083, U1084, U1085, U1086, U1087, U1088, U1089, U1090, U1091, U1092, U1093, U1094, U1095, U1096, U1097, U1098, U1099, U1100, U1101, U1102, U1103, U1104, U1105, U1106, U1107, U1108, U1109, U1110, U1111, U1112, U1113, U1114, U1115, U1116, U1117, U1118, U1119, U1120, U1121, U1122, U1123, U1124, U1125, U1126, U1127, U1128, U1129, U1130, U1131, U1132, U1133, U1134, U1135, U1136, U1137, U1138, U1139, U1140, U1141, U1142, U1143, U1144, U1145, U1146, U1147, U1148, U1149, U1150, U1151, U1152, U1153, U1154, U1155, U1156, U1157, U1158, U1159, U1160, U1161, U1162, U1163, U1164, U1165, U1166, U1167, U1168, U1169, U1170, U1171, U1172, U1173, U1174, U1175, U1176, U1177, U1178, U1179, U1180, U1181, U1182, U1183, U1184, U1185, U1186, U1187, U1188, U1189, U1190, U1191, U1192, U1193, U1194, U1195, U1196, U1197, U1198, U1199, U1200, U1201, U1202, U1203, U1204, U1205, U1206, U1207, U1208, U1209, U1210, U1211, U1212, U1213, U1214, U1215, U1216, U1217, U1218, U1219, U1220, U1221, U1222, U1223, U1224, U1225, U1226, U1227, U1228, U1229, U1230, U1231, U1232, U1233, U1234, U1235, U1236, U1237, U1238, U1239, U1240, U1241, U1242, U1243, U1244, U1245, U1246, U1247, U1248, U1249, U1250, U1251, U1252, U1253, U1254, U1255, U1256, U1257, U1258, U1259, U1260, U1261, U1262, U1263, U1264, U1265, U1266, U1267, U1268, U1269, U1270, U1271, U1272, U1273, U1274, U1275, U1276, U1277, U1278, U1279, U1280, U1281, U1282, U1283, U1284, U1285, U1286, U1287, U1288, U1289, U1290, U1291, U1292, U1293, U1294, U1295, U1296, U1297, U1298, U1299, U1300, U1301, U1302, U1303, U1304, U1305, U1306, U1307, U1308, U1309, U1310, U1311, U1312, U1313, U1314, U1315, U1316, U1317, U1318, U1319, U1320, U1321, U1322, U1323, U1324, U1325, U1326, U1327, U1328, U1329, U1330, U1331, U1332, U1333, U1334, U1335, U1336, U1337, U1338, U1339, U1340, U1341, U1342, U1343, U1344, U1345, U1346, U1347, U1348, U1349, U1350, U1351, U1352, U1353, U1354, U1355, U1356, U1357, U1358, U1359, U1360, U1361, U1362, U1363, U1364, U1365, U1366, U1367, U1368, U1369, U1370, U1371, U1372, U1373, U1374, U1375, U1376, U1377, U1378, U1379, U1380, U1381, U1382, U1383, U1384, U1385, U1386, U1387, U1388, U1389, U1390, U1391, U1392, U1393, U1394, U1395, U1396, U1397, U1398, U1399, U1400, U1401, U1402, U1403, U1404, U1405, U1406, U1407, U1408, U1409, U1410, U1411, U1412, U1413, U1414, U1415, U1416, U1417, U1418, U1419, U1420, U1421, U1422, U1423, U1424, U1425, U1426, U1427, U1428, U1429, U1430, U1431, U1432, U1433, U1434, U1435, U1436, U1437, U1438, U1439, U1440, U1441, U1442, U1443, U1444, U1445, U1446, U1447, U1448, U1449, U1450, U1451, U1452, U1453, U1454, U1455, U1456, U1457, U1458, U1459, U1460, U1461, U1462, U1463, U1464, U1465, U1466, U1467, U1468, U1469, U1470, U1471, U1472, U1473, U1474, U1475, U1476, U1477, U1478, U1479, U1480, U1481, U1482, U1483, U1484, U1485, U1486, U1487, U1488, U1489, U1490, U1491, U1492, U1493, U1494, U1495, U1496, U1497, U1498, U1499, U1500, U1501, U1502, U1503, U1504, U1505, U1506, U1507, U1508, U1509, U1510, U1511, U1512, U1513, U1514, U1515, U1516, U1517, U1518, U1519, U1520, U1521, U1522, U1523, U1524, U1525, U1526, U1527, U1528, U1529, U1530, U1531, U1532, U1533, U1534, U1535, U1536, U1537, U1538, U1539, U1540, U1541, U1542, U1543, U1544, U1545, U1546, U1547, U1548, U1549, U1550, U1551, U1552, U1553, U1554, U1555, U1556, U1557, U1558, U1559, U1560, U1561, U1562, U1563, U1564, U1565, U1566, U1567, U1568, U1569, U1570, U1571, U1572, U1573, U1574, U1575, U1576, U1577, U1578, U1579, U1580, U1581, U1582, U1583, U1584, U1585, U1586, U1587, U1588, U1589, U1590, U1591, U1592, U1593, U1594, U1595, U1596, U1597, U1598, U1599, U1600, U1601, U1602, U1603, U1604, U1605, U1606, U1607, U1608, U1609, U1610, U1611, U1612, U1613, U1614, U1615, U1616, U1617, U1618, U1619, U1620, U1621, U1622, U1623, U1624, U1625, U1626, U1627, U1628, U1629, U1630, U1631, U1632, U1633, U1634, U1635, U1636, U1637, U1638, U1639, U1640, U1641, U1642, U1643, U1644, U1645, U1646, U1647, U1648, U1649, U1650, U1651, U1652, U1653, U1654, U1655, U1656, U1657, U1658, U1659, U1660, U1661, U1662, U1663, U1664, U1665, U1666, U1667, U1668, U1669, U1670, U1671, U1672, U1673, U1674, U1675, U1676, U1677, U1678, U1679, U1680, U1681, U1682, U1683, U1684, U1685, U1686, U1687, U1688, U1689, U1690, U1691, U1692, U1693, U1694, U1695, U1696, U1697, U1698, U1699, U1700, U1701, U1702, U1703, U1704, U1705, U1706, U1707, U1708, U1709, U1710, U1711, U1712, U1713, U1714, U1715, U1716, U1717, U1718, U1719, U1720, U1721, U1722, U1723, U1724, U1725, U1726, U1727, U1728, U1729, U1730, U1731, U1732, U1733, U1734, U1735, U1736, U1737, U1738, U1739, U1740, U1741, U1742, U1743, U1744, U1745, U1746, U1747, U1748, U1749, U1750, U1751, U1752, U1753, U1754, U1755, U1756, U1757, U1758, U1759, U1760, U1761, U1762, U1763, U1764, U1765, U1766, U1767, U1768, U1769, U1770, U1771, U1772, U1773, U1774, U1775, U1776, U1777, U1778, U1779, U1780, U1781, U1782, U1783, U1784, U1785, U1786, U1787, U1788, U1789, U1790, U1791, U1792, U1793, U1794, U1795, U1796, U1797, U1798, U1799, U1800, U1801, U1802, U1803, U1804, U1805, U1806, U1807, U1808, U1809, U1810, U1811, U1812, U1813, U1814, U1815, U1816, U1817, U1818, U1819, U1820, U1821, U1822, U1823, U1824, U1825, U1826, U1827, U1828, U1829, U1830, U1831, U1832, U1833, U1834, U1835, U1836, U1837, U1838, U1839, U1840, U1841, U1842, U1843, U1844, U1845, U1846, U1847, U1848, U1849, U1850, U1851, U1852, U1853, U1854, U1855, U1856, U1857, U1858, U1859, U1860, U1861, U1862, U1863, U1864, U1865, U1866, U1867, U1868, U1869, U1870, U1871, U1872, U1873, U1874, U1875, U1876, U1877, U1878, U1879, U1880, U1881, U1882, U1883, U1884, U1885, U1886, U1887, U1888, U1889, U1890, U1891, U1892, U1893, U1894, U1895, U1896, U1897, U1898, U1899, U1900, U1901, U1902, U1903, U1904, U1905, U1906, U1907, U1908, U1909, U1910, U1911, U1912, U1913, U1914, U1915, U1916, U1917, U1918, U1919, U1920, U1921, U1922

VARIABLE PROCESSING


A wide range of variables are able to be defined, including image, positional, linear, scalar and array based. Variables are not limited to a single program and can be set for local, system or global use. The re-writing and initialization of each variable can be individually set depending on its intended operation. By using the variable setting utilities, even such tasks as the batch substitution of an allocated variable name or searching for a specific variable is made easy.

Variable comment function

Each variable can be assigned comments indispensable to debugging and program review. So as the flowchart becomes large and complicated, variable selection becomes simple.

```
FOR @i = 0
  #pos2[@i].X = #avePix[@i+1] / 2
  #pos2[@i].Y = #avePix 3Current plot
NEXT
#disp_limit = #limit / 2
```

Comments displayed when the cursor hovers over the variable

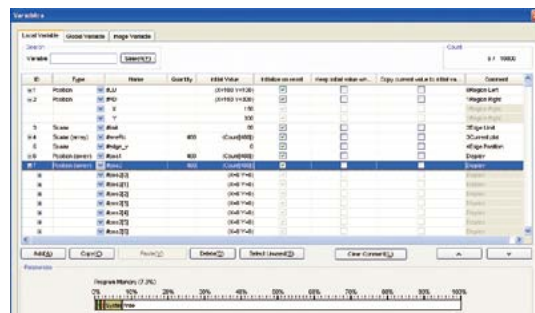

Variable setting screen

CONTROL PROCESSING

The XG Series provides control processing including conditional branching and looping essential to program flexibility and customization. This allows for flexible image processing enabling switching and processing based on changing conditions. Timing controls such as processing delays or waiting on terminal/operator interaction are also available. As the vision flowchart can be created to interact with different machine and control processes so the XG Series can easily become an embedded part of the overall machine and system.

Control processing definitions

Branch - Join	Based on input value branch flowchart accordingly (up to 64 points)
Loop	Repeat unit operation until end or break condition
Loop End	Stop loop
Break	Break loop and exit


Timing control definitions

Pause	Pause for a specified time
Timer	User specified timer
Timer setup	Pause until specified user time finishes
Terminal I/O Delay	Pause until changes in specified I/O occur
Variable Delay	Pause according to the results from selected variable compared with a selected reference value
Wait dialog	Pause until changes made by an operator

FLEXIBLE CALCULATION & SCRIPT BASED PROCESSING

Calculations are also essential in customization and the XG Series allows for over 100 different functions and commands to be used. Calculations and script can be quickly created by dragging and dropping in functions from the parts list. Direct typing, cut, copy and paste are also supported, along with an auto-complete function to help minimize input errors. Script based design is also possible making complex calculations easy to break out and understand.

Up to 5000 characters per single calculation

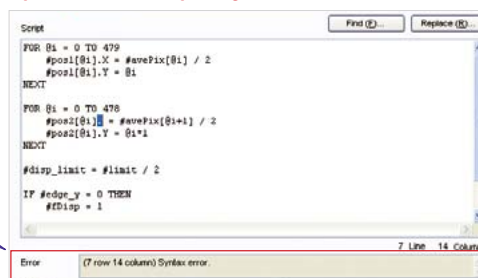


Automatic call out error checking function

AUTOMATIC & INTERACTIVE COMMAND PROCESSING

Commands like program switching, image capture, reset, start/stop operation log, and so on, typically require external control. However such commands can now be automated and made an integral part of the image processing flowchart. The command set is of such a power that the controller can be made to control itself. Machine functionality at higher levels than the image processing alone is also possible with the in-built commands. For instance changing to a different displayed image, zooming in on a defect based on an inspection result or saving image data for a certain part failure are all possible, as are many things due to the wide range of commands available. KEYENCE has also provided the ability to create custom commands which allow the user to combine specified built-in commands into a single command making macro based simple operation possible.

Examples of built-in commands


System control (73 types)	Common commands include: program switching, image save, trigger input enable/disable, mode switching (run/stop), reset, write variables, clear history data, export history data, image capture, start/stop operation log
User interaction (22 types)	Common commands include: open/close dialog boxes, image switching, image zoom, image scroll, change password, switch user accounts

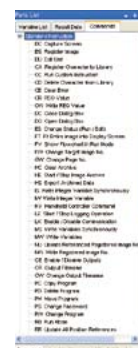

Command list

THE USER-DEFINED C-LANGUAGE UNIT CAN BE FREELY INTEGRATED INTO THE PROCESSING FLOW

Source code constructed by the user in C can be integrated into the XG process flow. The essential sections of image processing, communication output settings and the creation of displays are developed efficiently and without complex programming, allowing for concentration of resources toward the development of core processing sections. The source code can be compiled with a single click, and can be debugged during simulation by coordinating with the C-language development environment.

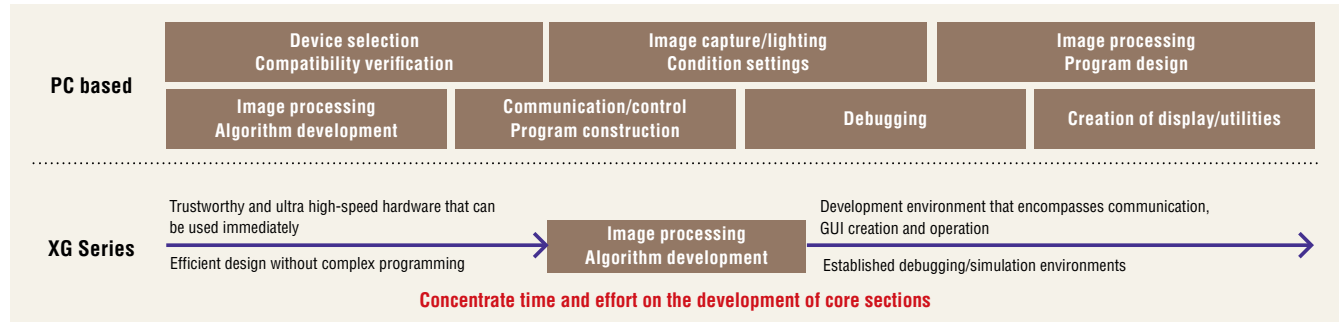


Examples of C-language Unit uses

Pixel-unit access to the image data

- Unique filter development
- Unique algorithm development
- Appropriation of company assets

Calculations, scripting and variable processing

- Condense large calculations into one unit of operation
- Process large more complex calculations
- Increase the processing speed of large computational calculations

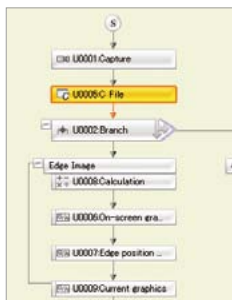

Insert the C Plug In Unit into the flow in order to reflect the independent algorithm

```


#include <Plugin.h>
int plugin_main(PIN_IMAGE* pPinImg, PIN_IMAGE*
{
    //VARIABLES/
    int i,j;
    int pix;
    PIN_POINT LU, RD;
    double limit;
    double avePix;
    double edge_y;
    int override = 0;
    int width,height;

    //XG VisionEditor POINT OF SETTINGS/
    LU = getPointPtr(0);
    RD = getPointPtr(1);
    limit = getScalarPtr(2);
    avePix = getScalarPtr(3);
    edge_y = getScalarPtr(4);

    //START VARIABLE/
    width = pSrcImg->width;
    height = pSrcImg->height;

    for(i = 0; i < height; i++){
        for(j = 0; j < width; j++){
            pDstImg->pixels[i*width+j] = pSrcImg->pixels[i*width+j];
            avePix[i] = 0; //avePixSTART
        }
        for(i = LU->y; i <= RD->y; i++){
    
```

Compile the source code constructed using C-language with the touch of a single button

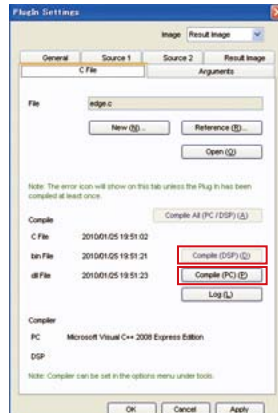

The compilers for the PC and XG controller environments maximize the ease of use by using DSP native commands rather than scripts or an intermediary language.

SIMPLE, YET SOPHISTICATED EXTERNAL CONTROL VIA PLC LINK OPTION & CUSTOM COMMAND CONFIGURATION

The PLC link option helps make connectivity to different manufacturers PLC's easy without the need for complex wiring. Both RS-232C and Ethernet connectivity is supported, enabling a maximum of 128 custom commands to be easily configured with the allocation of pre-configured commands directly to data memories.

By allocating the XG Series command to a specific address of the PLC the command can be easily executed by the PLC. By being able to make custom commands in the XG program, the PLC operation is further simplified by the calling of a single command as opposed to processing many in sequence.



Select the command for use in the data memory (E.g. DM200)


No.	Name	Actions
0.C000		ISS
4.C004		4.C004

The commands entered in the actions column will automatically be issued when executed.

SEAMLESS SIMULATION & DEBUGGING

Highly efficient program development


The XG suite of software gives the opportunity for simulations, whether it be for image processing flow, GUI construction or I/O and control to be run at any point during development. Having this capability at anytime means debugging can be performed whenever desired helping maintain development efficiency all the way to deployment.

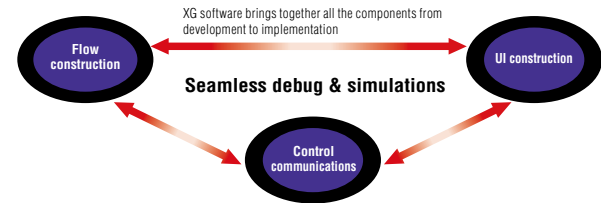

ERROR CHECKING FUNCTION INDUSTRY FIRST

Instantly see and go to the source of an error

This function enables you to check for the presence of errors within the inspection settings simply by pushing the check button. This automatically creates a list for any errors found and reports back on the error type and their location. In units that have calculations, functions and expressions definitive information is not only displayed on the type of error, but also the row and location of the error.

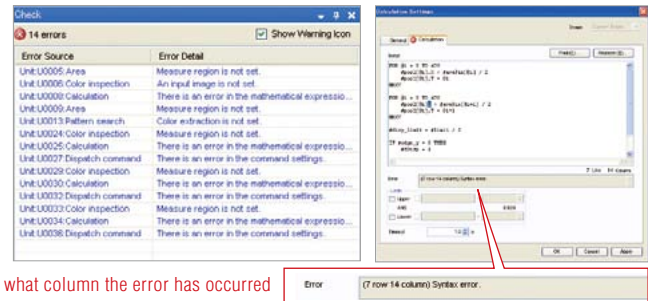


Checks down to exactly what row, what column the error has occurred

AUTOMATIC LOGGING FUNCTION INDUSTRY FIRST

Trace dynamic errors

Errors that occur under specific conditions are relatively difficult to find. In the XG VisionEditor software, all processing results and errors from simulations, are displayed in a continual log format. Debugging and error checking can be quickly performed as dynamic errors can be easily found, checked and resolved.

Dynamic errors, such as those that occur when variables occur outside the reference range, are also included in the display.

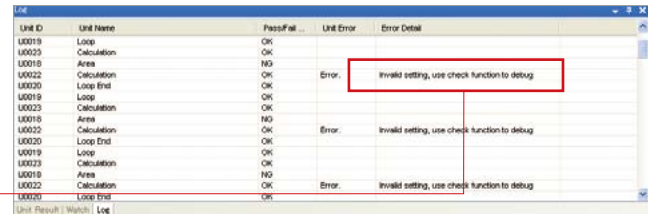


VARIABLE REFERENCE LIST INDICATOR INDUSTRY FIRST

Quickly see and locate where variables are used

The XG VisionEditor software also incorporates a variable reference list that allows the quick verification of exactly which variables are being used, and where. In addition to the unit ID being show next to the variable, the unit can be made to flash in the flow view by simply clicking on the variable. This makes it very easy to see all the locations where a variable is referenced and used.

By selecting a variable, all reference destination units on the flow view will flash.

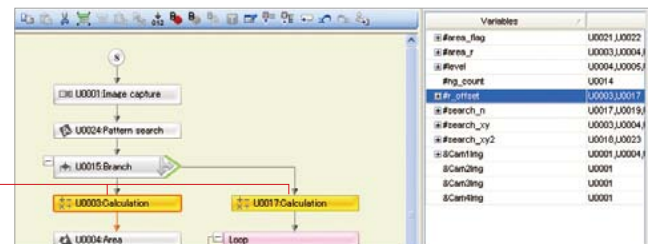


Variable list

FLOWCHART BREAK FUNCTION INDUSTRY FIRST

Step by step debugging

Multiple break points (pauses) can be used anywhere on the flowchart. These cause the running program to pause during simulation. When a break point is reached all processes, including variables can be checked for efficient debugging. This debugging function can also be enhanced by using multiple break points so a step by step running process can be setup.

Each unit can be independently processed and stepped through. By pushing the re-open button when a breakpoint is reached the image processing flow will continue to run until the next breakpoint is reached. By using the step button only the current unit will be processed.



UNIT RESULT & VARIABLE INFORMATION LIST

Quickly understand unit and variable operation

All units used in the flowchart and associated variables can be viewed and confirmed in a tree based list view. This is beneficial for seeing and confirming all the results and data that is being processed. Sorting and filtering is also possible so only the desired unit result data and variables are shown. To allow for easy setting, click on any unit or variable. The properties open and parameters can be changed directly then and there.

[illegible]

FULL PC SIMULATOR FUNCTION

Supporting up to 50,000 images

The inspection settings developed in the XG VisionEditor can be automatically run directly in the XG Vision Simulator from the VisionEditor software. Up to 50,000 images can be used and processed to mimic on a PC the exact operation of the XG controller. The simulator displays the configured GUI along with dialogs and supports output data (CSV format) while allowing for simulated I/O control and external input.





Measurement results, variables and I/O can be all shown at the same time

GUI used during operation displayed complete with dialog menus.

STATISTICAL ANALYSIS FUNCTION

Obtain optimal settings in minimal time


Any measurement data or variable value can be displayed as a trend graph or histogram. In the trend graphs, up to 4 graphs of any value type can be simultaneously displayed. Optimal settings can be easily configured by lining up different graphs for multiple results based on changes in the processing conditions. The result data includes information on yield rates as well as standard statistical data (such as max., min., average, SD and 6 σ values).

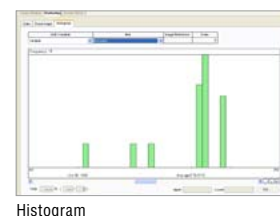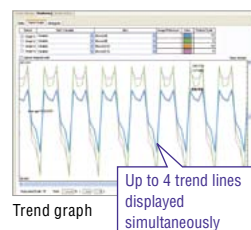

TRACE LOG FUNCTION INDUSTRY FIRST


Easily troubleshoot I/O and signal processing

The trace log function is a great tool to help with processing and I/O troubleshooting. Giving integrators and developers the capability for checking and monitoring the sequencing of units being processed, I/O signals and commands. The results display can be split and the processing time for each unit along with other information can be easily displayed. The trace log can also be saved and be used at a later date as a reference guide.

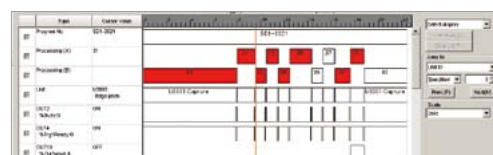

REMOTE DATA LOGGING & MONITORING SOFTWARE: XG VisionTerminal

The XG VisionTerminal software enables the remote monitoring, logging and support of any XG Series controller connected to a PC via a standard network. Maintenance man-hours, down-time and business trips can be significantly reduced as problems can be resolved remotely with the transfer of setting files and image data.

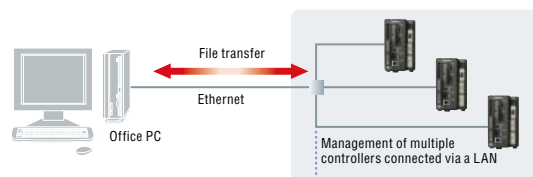

Main functions	Remote desktop function ...	Enables the verification and remote operation of a connected controller, without extra data being sent and interfering with controller processing.
	Logging function	Enables the display, logging of measurement results and storage of image data to a PC folder from an inspection with any connected controller. This function also supports the accumulation output buffer of the controller to ensure complete data collection.
	File acquisition function ...	Enables the transferring of setting data files and image data files between the XG Series controller and a PC.

USEFUL UTILITIES FOR DESIGNERS


PC Image Settings

With a thumbnail filmstrip view, captured images can be easily managed inside the XG VisionEditor software. The collection of live images from a connected controller or the image archive with historical measurement data can be done with the couple of clicks of the mouse.



Multiple region distribution and alignment


Setting up multiple inspection regions that need to be equal distance from each other can be a mundane, time consuming task. The multiple region distribution function allows for quick distribution of multiple unit inspection regions in a circle, arc or straight line.

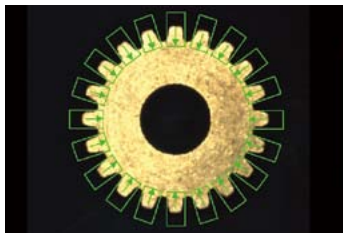

An example of using multiple edge position regions equidistant from each other to check teeth and overall circumference of a cog.

I/O MONITOR FOR SMOOTH INTEGRATION

The I/O and RS-232C monitor function can be displayed on screen via the XG Series controller and is extremely beneficial for the verification of RS-232C communication I/O terminal wiring during initial integration.

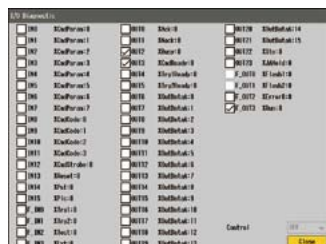

I/O monitor




RS-232C monitor

CONFIRMATION OF HISTORICAL INSPECTION RESULTS DURING OPERATION

NG images and measurement results saved to the controller can be easily verified on the controller screen without any influence on processing during operation.

Windows Clipboard output for setting details and flowchart

Detailed settings and the image processing flowchart can be copied into the Windows Clipboard with a single click. Having parameters formatted to be used with Excel means information can be easily saved for later reference or the creation of a settings manual and other documentation.

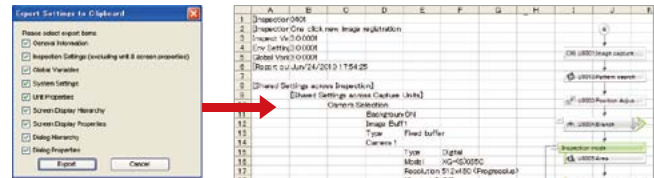


Clipboard output items

Excel is a registered trademark of Microsoft Corporation, U.S.A.

Repeat, partial copy and paste

Normal copy and paste functionality is enhanced with the repeat and partial paste option. Repeat paste allows for multiple units to be constructed all at once with one operation, saving countless repetitive operations. Partial paste allows for user selected parameters to be pasted across multiple units, which becomes very useful when one modified setting needs to be applied to many units.

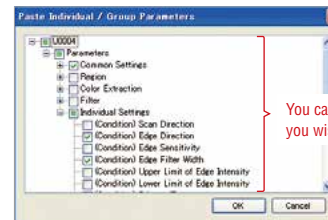

You can select any item you wish to paste to another unit.

SIMPLE MULTI-CONTROLLER SETUP WITH REMOVABLE SD CARD

Multiple and replacement controllers can be easily setup with the external SD card. Settings files can be easily copied across and a controller is ready to go in the matter of minutes.

HANDHELD CONSOLE

On-site changes can be made where a mouse and PC are not permitted with the disconnectable handheld controller.



IMAGE OUTPUT BUFFER (ensuring complete image output)

The external image output function (SD card, PC application, FTP servers etc.) works with the same image bank as used for image capture. As the inspection and output result only occur after the image is saved, the image is always available for output allocation. Even if the output transfer process is backed up due to uncontrollable protocol demands, the image output has its own dedicated buffer. This ensures all images are accounted for and output (within the buffer capacity), even if delayed.

SECURITY RELATED FUNCTIONS

User account and grouping management

Up to 100 different user accounts with individual passwords can be registered. At the same time there are also 5 user groups that user accounts can be allocated to. For each group different ranges of permissions and access levels can be set including editing, menu operation, and screen displays. Different interfaces, dialogs and button control can also be customized based on the needs of different operators, technicians, QA staff and administrators.

Operation log

The operation log when used keeps and stores a date & time stamped log of all the button presses and settings changed by a user. This information can then be accessed as a CSV file for machine process security and management.

Intellectual property protection


To help with intellectual property protection various passwords and features are available as standard. A password can be set that protects the opening and editing of inspection setting files in XG VisionEditor, so the inspection setting file cannot be opened unless the correct password is used. In addition the unique controller ID can be referenced in the inspection setting file. Preventing the copying and running of inspection files on another controller. This helps maintain ownership for any image processing development while preventing the stealing of intellectual property.

Controller password lock setting

A password lock can be placed in order to prevent operator errors by ensuring that inspection units (from within the flow constructed in XG VisionEditor) cannot be edited through the controller.


FREE I/O TERMINAL ALLOCATION

The XG Series supports free assignment and allocation of all I/O terminals. This allows for inputs and outputs to be easily distributed based on terminal configuration and switching state (normally open/closed) in accordance with the machine/PLC requirements.

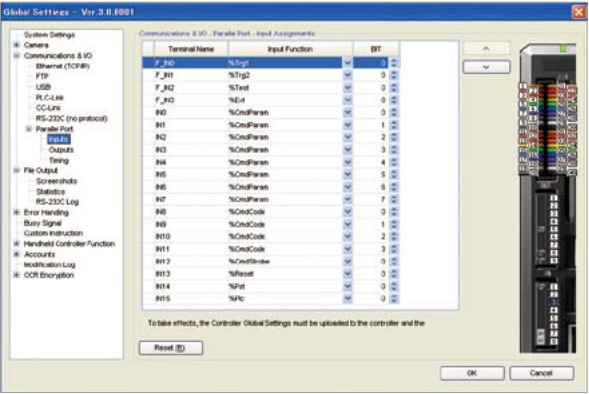

USER GROUP FUNCTION MENU ACCESS

The function menu is the heart of conducting and managing the flowchart and operations directly on the XG Series controller. Operator error can be prevented by enabling the display/or non-display of different options depending on the access needed for the 5 user groups.

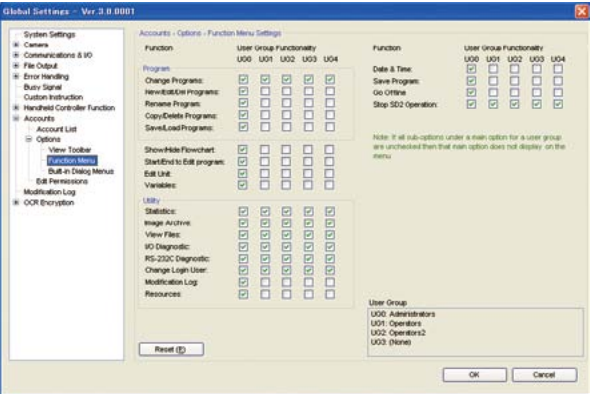

CUSTOM MACHINE MANUFACTURING

The KEYENCE XG Series allows for OEM customization to enable full incorporation into a custom machine

Customizing the startup screen

Display of BMP data such as a company logo or machine model is possible on the startup display screen.

Camera logos

The KEYENCE logo and model numbers used on the camera body are all stickers and can be removed as required.

Blank handheld console


For on-machine changes with the handheld console a blank version (OP-84236) is available for customization.

3 levels of intellectual property protection

- 1. "Controller password lock setting" prevents the editing of flowcharts that have been locked in the XG VisionEditor software.
- 2. "VisionEditor password setting" allows for the protection of inspection setting files used in the PC XG VisionEditor software.
- 3. "Controller ID matching function" allows for only the matching XG Series controller to run the inspection setting files.


LENS CHARTS

■ **CA-H2100C/M** (When the CA-LHE Series is attached)

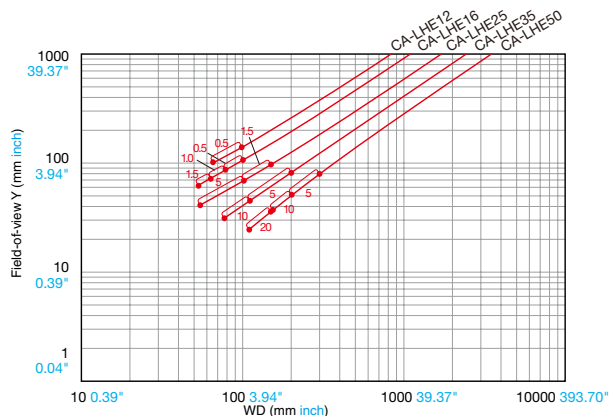


4/3" image sensor size: 5104 × 4092

■ **CA-HX500C/M** (When the CA-LHE Series is attached)

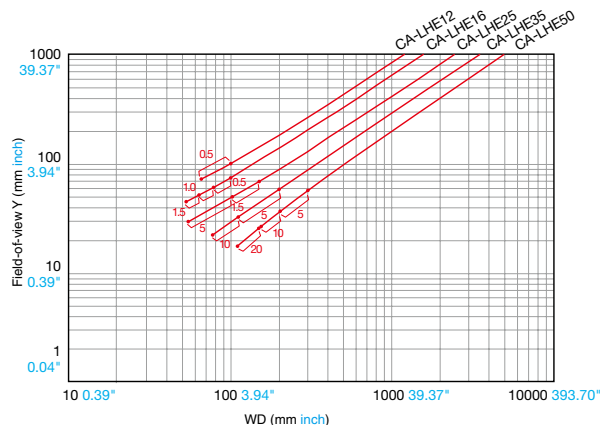


1" image sensor size: 2432 × 2040

■ **XG-H500C/M** (When the CA-LHR Series is attached)

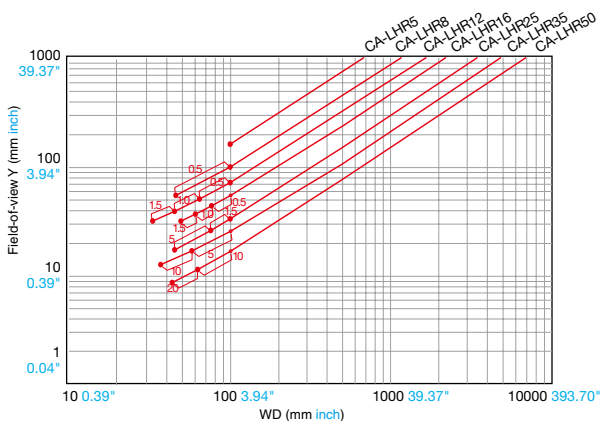


2/3" image sensor size: 2432 × 2050

■ **CA-HX200C/M** (When the CA-LHR Series is attached)

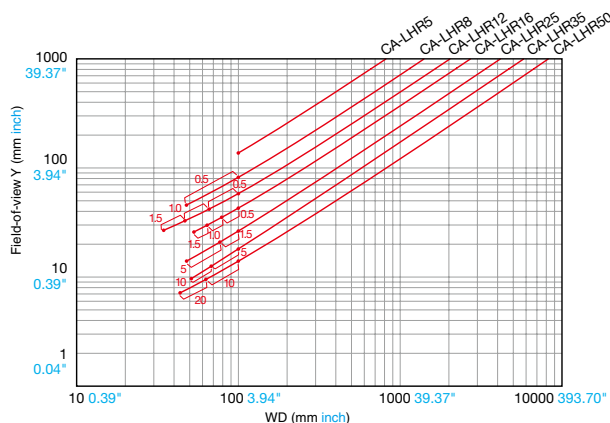


2/3" image sensor size: 1600 × 1200

■ **CA-HX200C/M** (When the CA-LH/LHxG Series is attached)

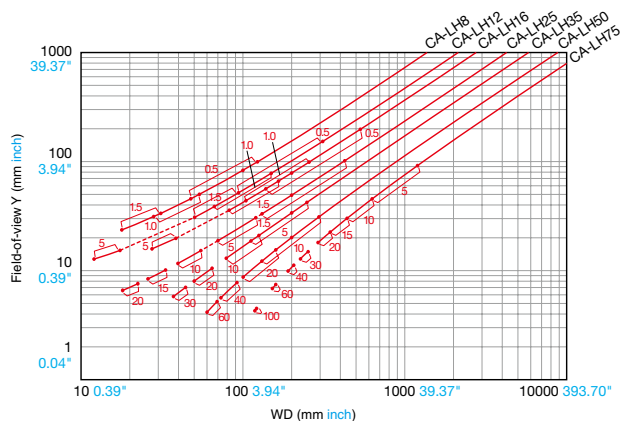


2/3" image sensor size: 1600 × 1200

■ **XG-200C/M-XG-H200C/M** (When the CA-LHR Series is attached)

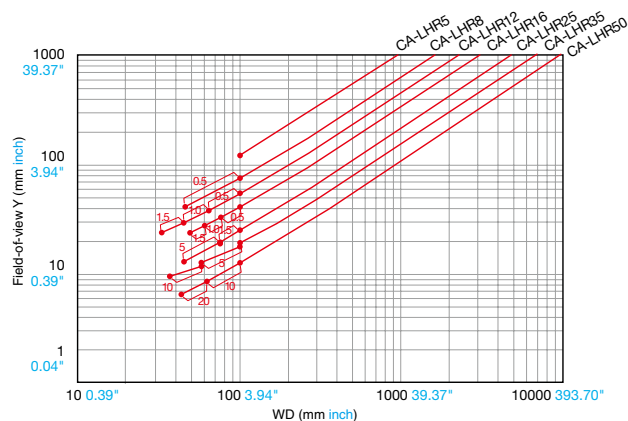


1/1.8" image sensor size: 1600 × 1200


■ CA-HX048C/M (When the CA-LH/LHxG Series is attached)

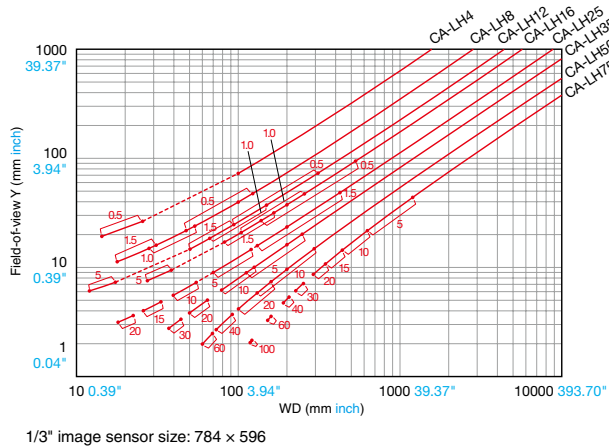


■ XG-035C/M·XG-H035C/M (When the CA-LH/LHxG Series is attached)

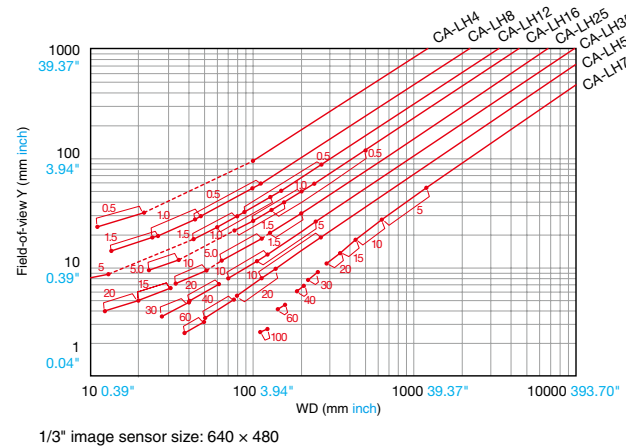


■ XG-S200C/M (When the CA-LHS Series is attached)

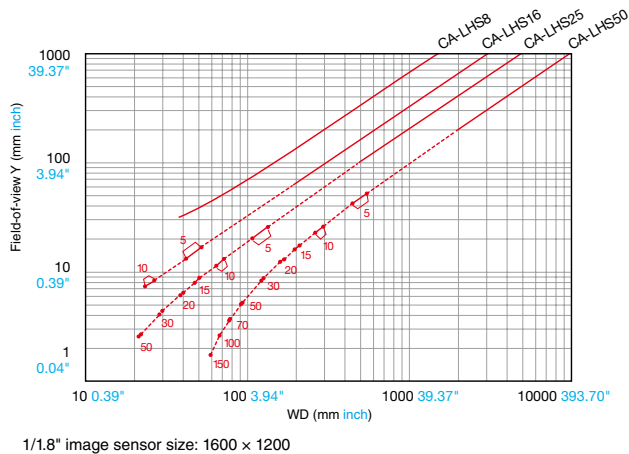


■ XG-S035C/M (When the CA-LS Series is attached)

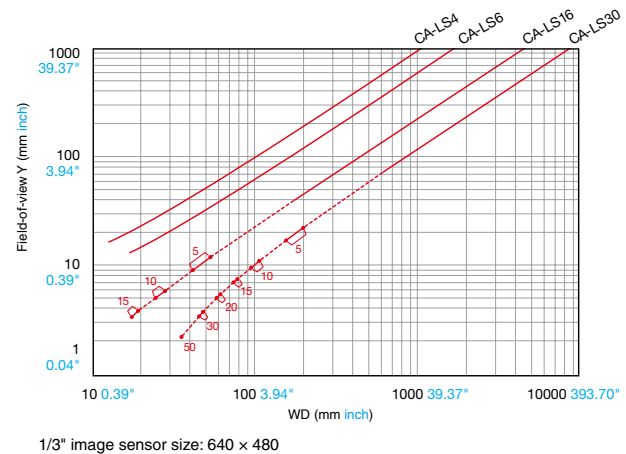

■ XG-HL02M/XG-HL04M (When the CA-LHW Series is attached)

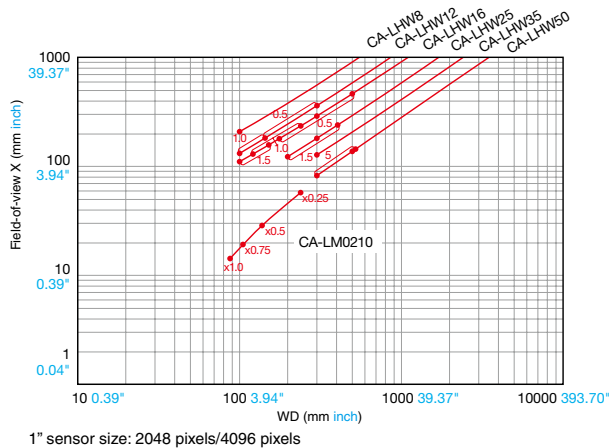



■ XG-HL08M (When the CA-LHL Series is attached)

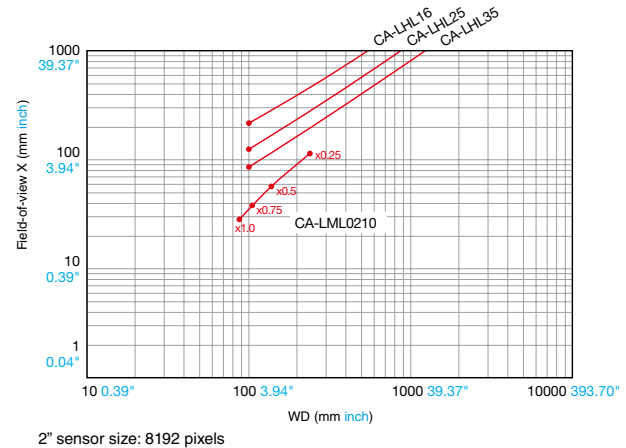


* Using close up rings may result in distortion and lower resolution around the edges of the image area/CCD.
For the other field-of-view graphs, refer to the user's manual.

SYSTEM CONFIGURATION

■ XG system configuration diagram

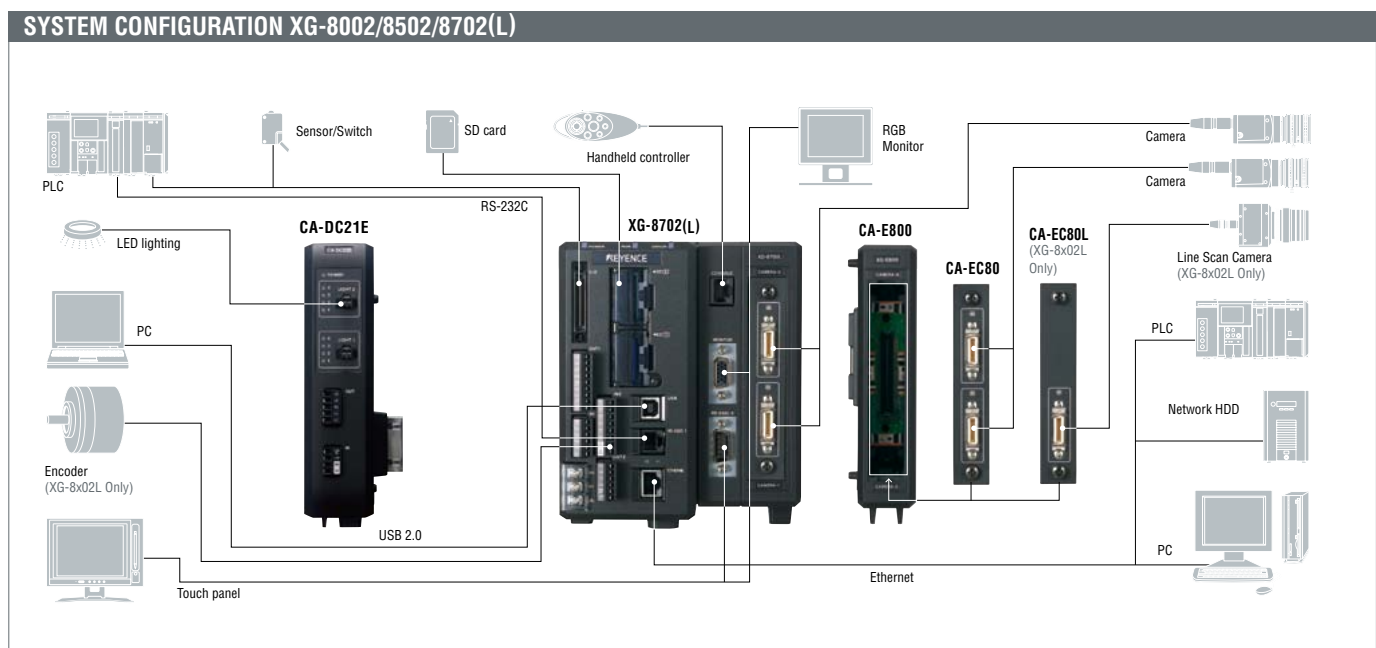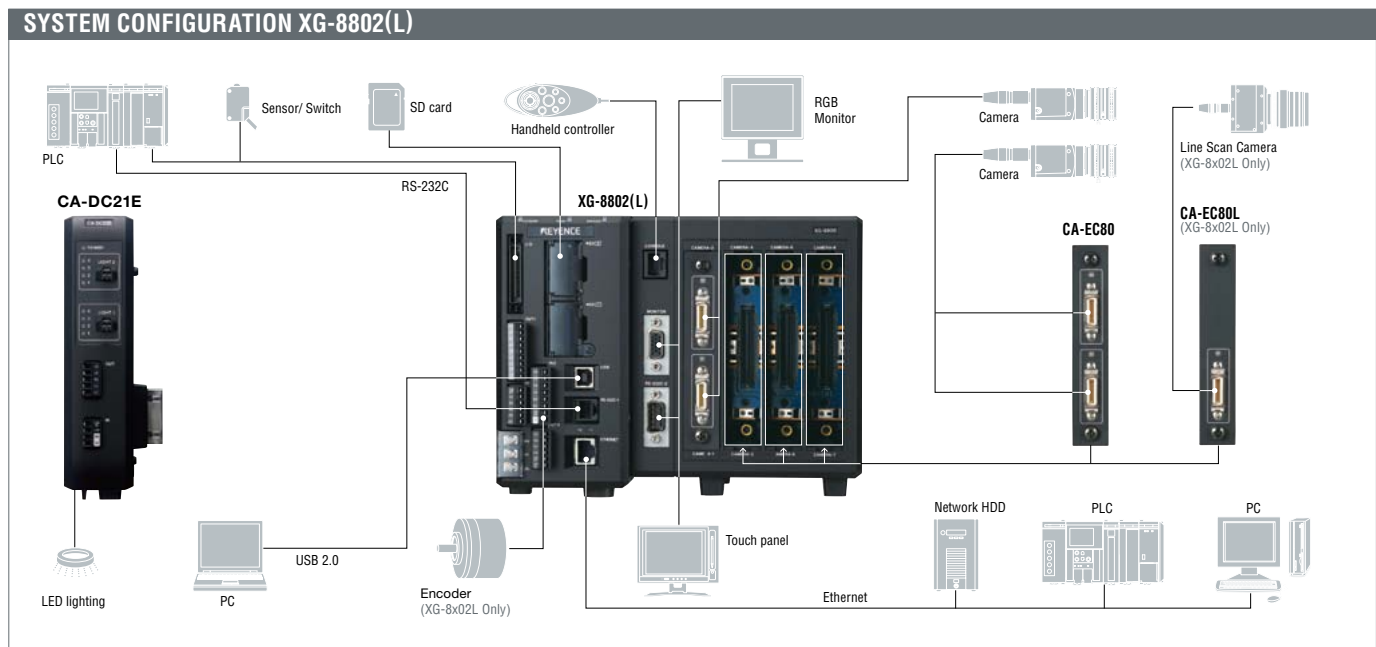


SYSTEM CONFIGURATION XG-7000 SERIES

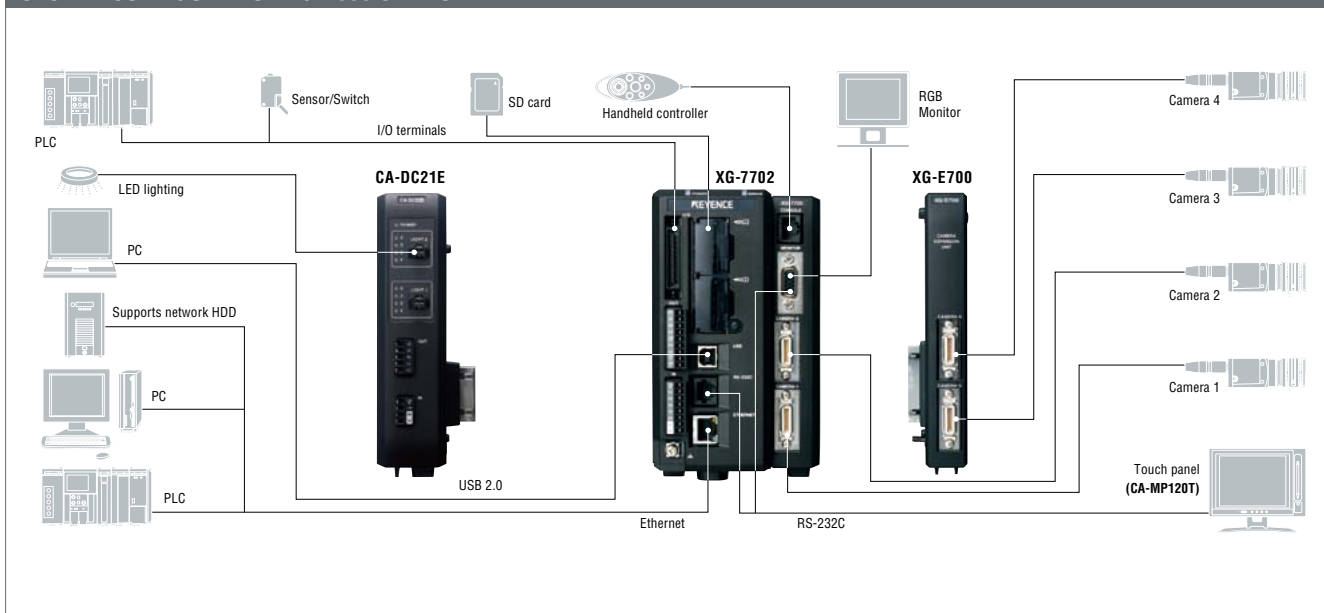

XG system configuration diagram (when LumiTrax™ is used)

SYSTEM CONFIGURATION XG-8000/8500/8700(L)

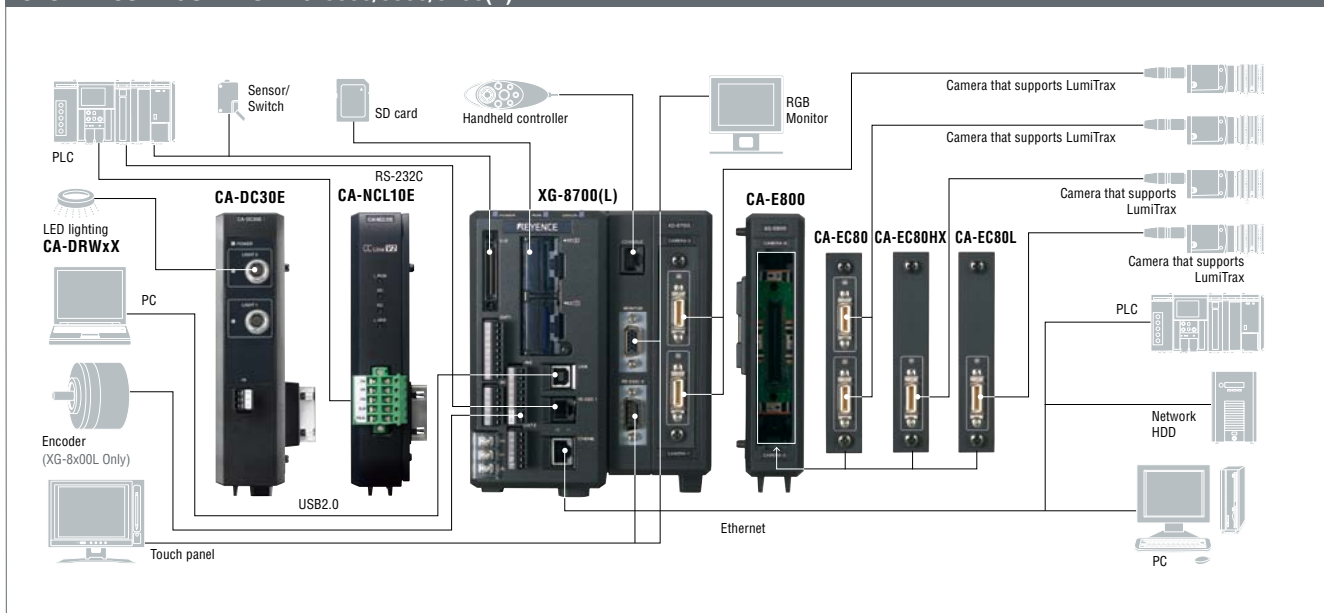

PRODUCT LINEUP

Controllers



High-speed, high-capacity controller
(supports all area cameras up to 5 megapixel)

XG-7702(P)

High-speed controller
(supports all area cameras up to 2 megapixel)

XG-7502(P)

Standard controller
(supports all area cameras up to 310K)

XG-7002(P)



High-speed, high-capacity controller
(supports all area cameras up to 5 megapixel)

XG-8702(P)

High-speed controller
(supports all area cameras up to 2 megapixel)

XG-8502(P)

Standard controller
(supports all area cameras up to 310K)

XG-8002(P)



High-speed, high-capacity
line scan controller
(supports all line scan cameras up to 8K and area
cameras up to 5 megapixel)

XG-8702L

High-speed, line scan controller
(supports 2K line scan cameras and area
cameras up to 2 megapixel)

XG-8502L



Multi-camera, high-speed,
high-capacity controller
(supports all area cameras)

XG-8802(P)

includes 1 area camera unit



Multi-camera, high-speed,
high-capacity controller
(supports 2K line scan cameras and all area cameras)

XG-8802L(P)

includes 1 line scan camera unit

Expansion unit



Camera expansion module

XG-E700

XG-7000 Series only



Camera expansion
module

CA-E800

XG-8000 Series only



Area camera unit

CA-EC80



Line scan camera unit

CA-EC80L



CA-HX Series input unit

CA-EC80HX



LED light control
expansion module

CA-DC21E



LumiTrax™
supporting, light
control expansion
module

CA-DC30E

Area Camera



16x high-speed,
21 megapixel camera
CA-H2100C (Color)
CA-H2100M (Monochrome)



16x high-speed,
5 megapixel camera
CA-HX500C (Color)
CA-HX500M (Monochrome)



16x high-speed,
470,000 pixel camera
CA-HX048C (Color)
CA-HX048M (Monochrome)



11x high-speed, 5 megapixel camera
XG-H500C (Color)
XG-H500M (Monochrome)

7x high-speed, 310,000 pixel camera
XG-H035C (Color)
XG-H035M (Monochrome)

2 megapixel camera
XG-200C (Color)
XG-200M (Monochrome)



Ultra-compact,
2 megapixel camera
XG-S200C (Color)
XG-S200M (Monochrome)

7x high-speed, 2 megapixel camera
XG-H200C (Color)
XG-H200M (Monochrome)

310,000 pixel camera
XG-035C (Color)
XG-035M (Monochrome)

Ultra-compact,
310,000 pixel camera
XG-S035C (Color)
XG-S035M (Monochrome)

Line scan cameras



8x high-speed, 2048 pixels
Line scan camera
XG-HL02M
(Monochrome)



16x high-speed, 4096 pixels
Line scan camera
XG-HL04M
(Monochrome)



16x high-speed, 8192 pixels
Line scan camera
XG-HL08M
(Monochrome)

Camera Cables

Camera cable



L-type connector

Amplifier for extension cables

CA-CNX10U
(for standard-speed cameras)

CA-CHX10U

(for high-speed cameras)

Camera cables

Cable type	Connector shape	Cable length						Extension cable
		1 m 3.3'	3 m 9.8'	5 m 16.4'	10 m 32.8'	17 m 55.8'		
Standard-speed camera cable	Straight	CA-CN1	CA-CN3	CA-CN5	CA-CN10	CA-CN17		—
	L-type	—	CA-CN3L	CA-CN5L	CA-CN10L	CA-CN17L		—
Standard high flex robot cable	Straight	—	CA-CN3R	CA-CN5R	CA-CN10R	CA-CN17R	CA-CN7RE (7 m 23.0')	—
High-speed camera cable	Straight	—	CA-CH3	CA-CH5	CA-CH10	—	—	—
	L-type	—	CA-CH3L	CA-CH5L	CA-CH10L	—	—	—
High-speed high flex robot cable	Straight	—	CA-CH3R	CA-CH5R	CA-CH10R	—	—	—
Extension cables (Must be used with amplifier)								
Standard-speed extension cable	Straight	—	CA-CN3X	—	CA-CN10X	CA-CN17X	—	—
	L-type	—	CA-CN3LX	—	CA-CN10LX	CA-CN17LX	—	—
Standard high flex robot extension cable	—	—	CA-CN3RX	—	CA-CN10RX	CA-CN17RX	—	—
High-speed extension cable	Straight	—	CA-CH3X	—	CA-CH10X	—	—	—
High-speed high flex robot extension cable	—	—	CA-CH3RX	—	CA-CH10RX	—	—	—

List of supported connection of camera cables

Number of pixels of camera the cables can be connected to		Area camera			Line scan camera		
		5,000,000 pixels	2,000,000 pixels	310,000 pixels	8,192 pixels	4,098 pixels	2,048 pixels
For high-speed camera	CA-CH10	○	○	○	○	○	○
	CA-CH5	○	○	○	○	○	○
	CA-CH3	○	○	○	○	○	○
For standard camera	CA-CN17	—	—	○	—	—	—
	CA-CN10	—	○	○	—	—	—
	CA-CN5	—	○	○	—	—	—
	CA-CN3	—	○	○	—	—	—
Maximum length	CA-CN1	—	○	○	—	—	—
	CA-CNX10U x1	20 m 65.6'	34 m 111.6'	—	—	—	—
	CA-CNX10U x2	30 m 98.4'	51 m 167.3'	—	—	—	—
	CA-CHX10U x1	20 m 65.6'	20 m 65.6'	20 m 65.6'	20 m 65.6'	20 m 65.6'	20 m 65.6'
	CA-CHX10U x2	—	30 m 98.4'	30 m 98.4'	30 m 98.4'	30 m 98.4'	30 m 98.4'
		—	—	—	—	—	—

Monitor/Touch panel



Touch screen
CA-MP120T



CA-MP120T stand
OP-87262



CA-MP120T protective film
OP-87263

CA-MP120T Accessories

XG-7000: **OP-87264** (3 m 9.8' touch panel modular RS-232C cable)
OP-87265 (10 m 32.8' touch panel modular RS-232C cable)
XG-8000: **OP-87258** (3 m 9.8' touch panel RS-232C cable)
OP-87259 (10 m 32.8' touch panel RS-232C cable)

Monitor cable

OP-66842 (3 m 9.8')
OP-87055 (10 m 32.8')



*A RGB monitor cable and touch panel RS-232C cable are required when using the CA-MP120T.

Handheld controller junction cable

OP-87260 (3 m 9.8')
OP-87261 (10 m 32.8')

*Junction cables are required when plugging a handheld controller into the CA-MP120T of CA-MP120T.



8.4" LCD color monitor
CA-MP81



CA-MP81 stand
OP-42278



Pole-mounting bracket
OP-42279

Communication cable

Parallel I/O cable

OP-51657 (3 m 9.8')



Communication cable conversion connector

OP-26486: 9 pins
OP-26485: 25 pins
For 9-pin SYSMAC: **OP-84384**
For 9-pin MELSEC: **OP-86930**



RS-232C communication cable

OP-26487 (2.5 m 8.2')



1Gbps Ethernet cable

OP-66843 (3 m 9.8')



USB cable

OP-66844 (2 m 6.6')



Others



Image processing system integration software

XG-H8NE2
XG-H7NE2



Handheld controller
OP-84231
OP-84236 (no labels)



Dedicated 24 VDC power supply
CA-U4




Industrial SD card
CA-SD4G: 4 GB (SDHC)
CA-SD1G: 1 GB
OP-87133: 512 MB




Camera XY adjustment stage
CA-S2040

Hardcopy user manuals are not included with the controller or integration software. PDF versions are supplied on a CD that is included with the controller and with the XG-H*NE2 integrated development environment software. If hardcopy manuals are required, please contact your local KEYENCE representative for more information.


Controller XG-7702(P)/XG-7502(P)/XG-7002(P)

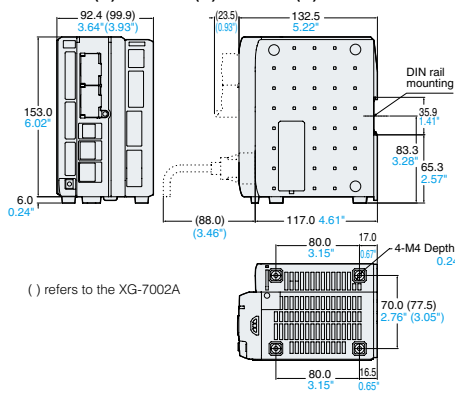


When mounting camera expansion module XG-E700

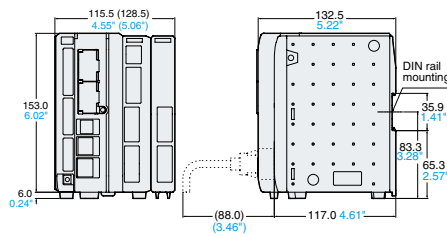


When mounting light expansion module CA-DC21E

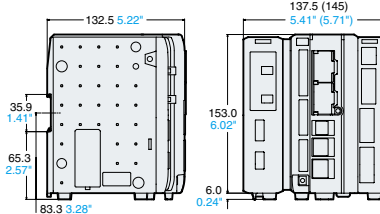


When mounting light expansion module CA-DC30E

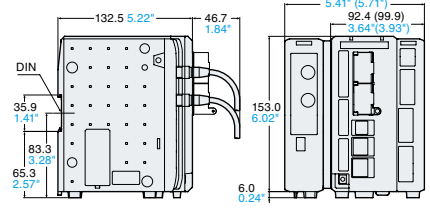


Controller XG-8702(P)/XG-8502(P)/XG-8002(P)

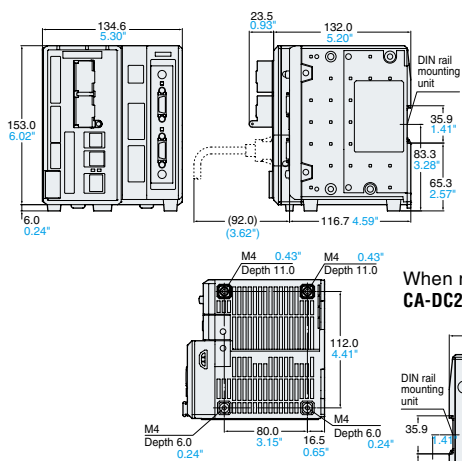


When mounting camera expansion module CA-E800

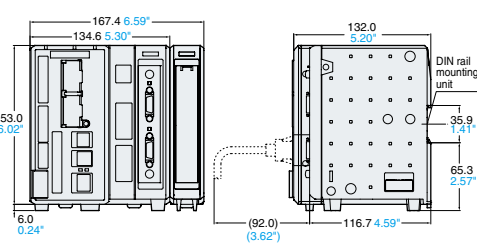


When mounting light expansion module CA-DC21E

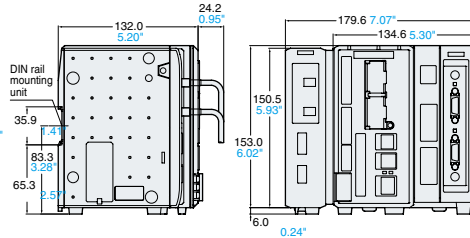


When mounting light expansion module CA-DC30E

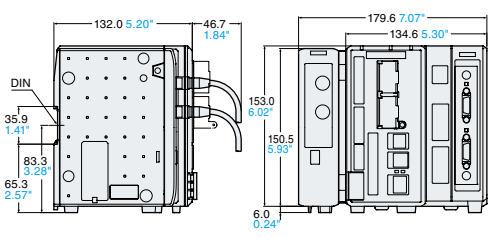


Controller XG-8502L(P)/XG-8702L(P)

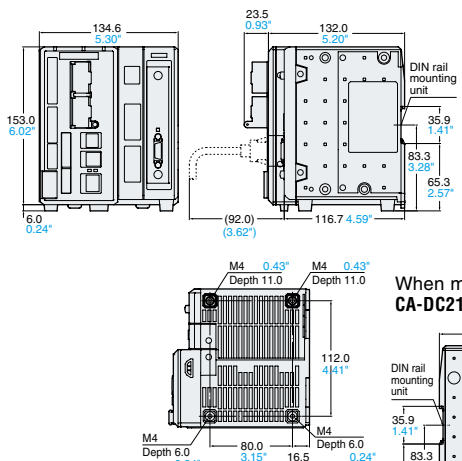


When mounting camera expansion module CA-E800

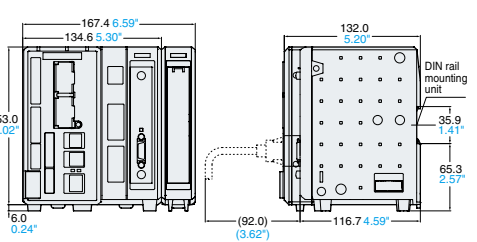



When mounting light expansion module CA-DC21E

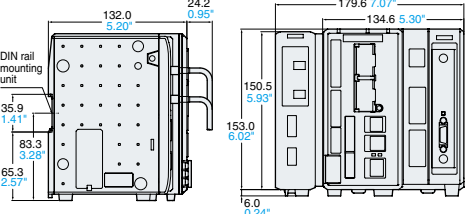

When mounting light expansion module CA-DC30E

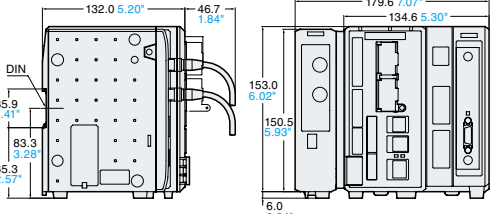


Controller **XG-8802(P)** + When mounting camera expansion module **CA-EC80**

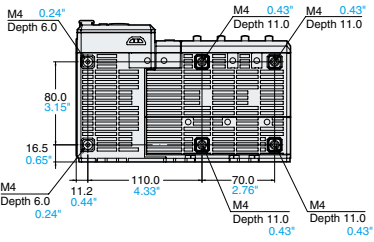
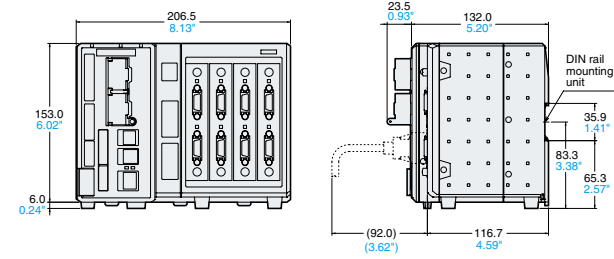


When mounting light expansion module **CA-DC21E**


Unit: mm inch

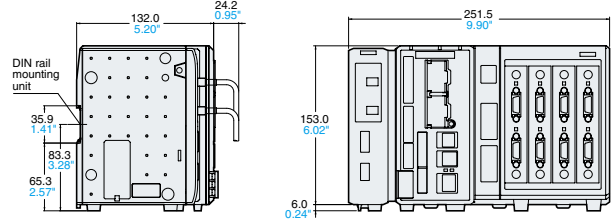

Controller **XG-8802L(P)** + When mounting camera expansion module **CA-EC80L**

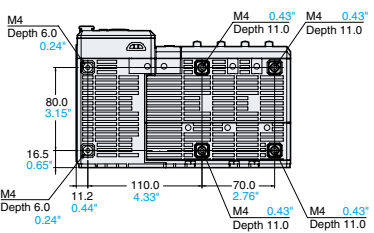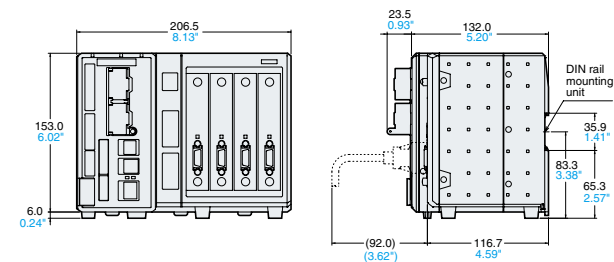

When mounting light expansion module **CA-DC21E**

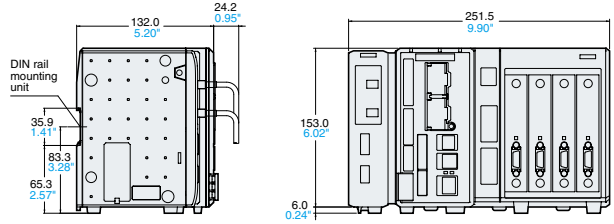

INDUSTRIES

HARDWARE

IMAGE
OPTIMIZATION

PROGRAM
CREATION

DEFECT
INSPECTION

UTILITIES/
USER INTERFACE

CONNECTIVITY

DEVELOPMENT
VISION EDITOR

LENS CHART


SYSTEM
CONFIGURATION

PRODUCT
LINEUP


DIMENSIONS

SUPPORT


Camera
XG-035C/XG-035M

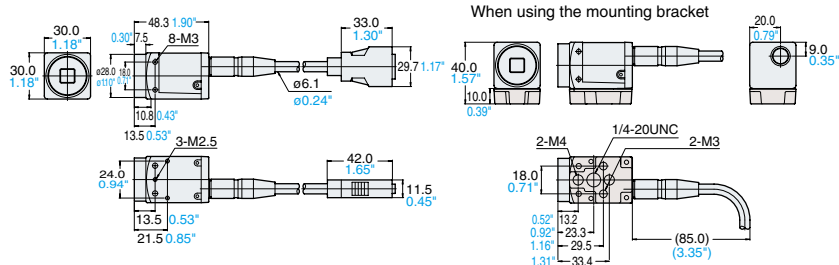


Camera
XG-S035CH/XG-S035MH

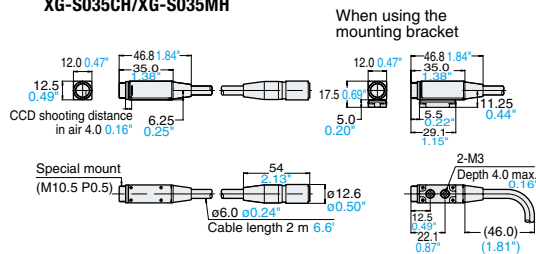


Camera
XG-H500C/XG-H500M/XG-H200C/XG-H200M/XG-200C/XG-200M/XG-H035C/XG-H035M

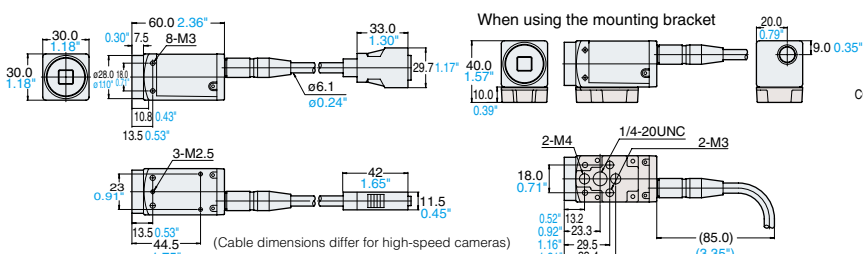


Camera
XG-S200CH/XG-S200MH

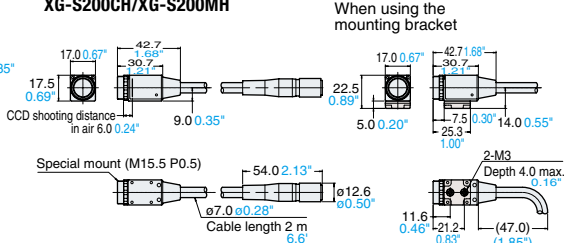


Camera
XG-HL02M/XG-HL04M

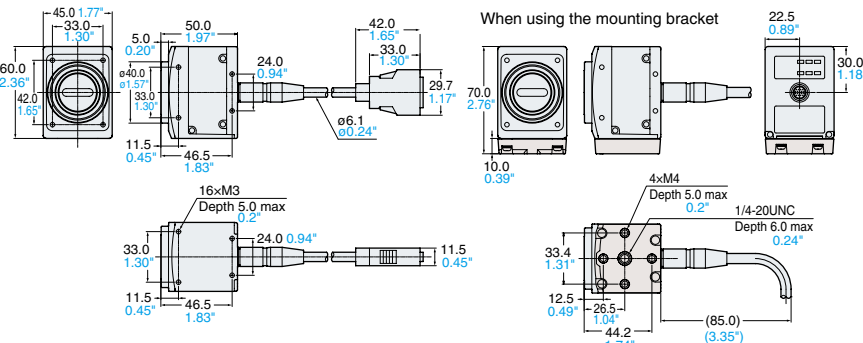

Camera control unit
XG-S200CU/XG-S200MU/XG-S035CU/XG-S035MU

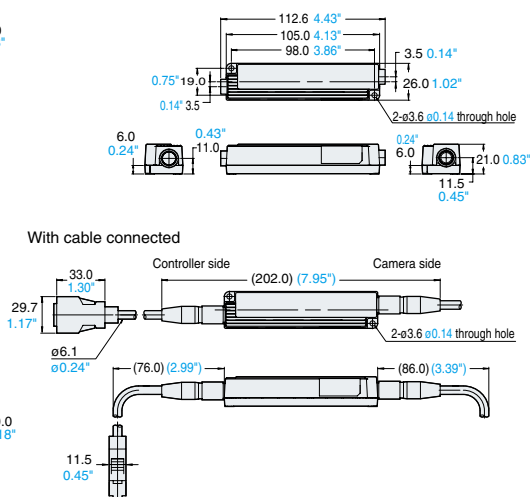

Camera
XG-HL08M

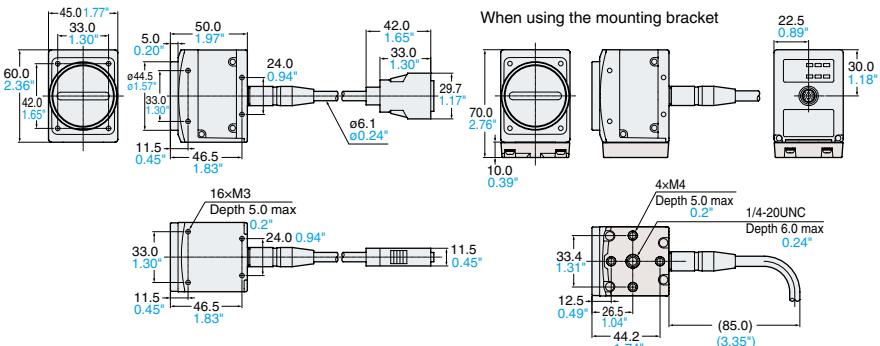

Camera cable
CA-CN1 (1 m) 3.3' / CA-CN3 (3 m) 9.8' / CA-CN5 (5 m) 16.4' / CA-CN10 (10 m) 32.8' / CA-CN17 (17 m) 55.8'

High-flex camera cable
CA-CH3R (3 m) 9.8' / CA-CH5R (5 m) 16.4' / CA-CH10R (10 m) 32.8' / CA-CH17R (17 m) 55.8'



Cable dedicated for high-speed cameras
CA-CH3 (3 m) 9.8' / CA-CH5 (5 m) 16.4' / CA-CH10 (10 m) 32.8'

High-flex cable dedicated for high-speed cameras
CA-CH3R (3 m) 9.8' / CA-CH5R (5 m) 16.4' / CA-CH10R (10 m) 32.8'

L-shaped connector camera cable
CA-CN3L (3 m) 9.8' / CA-CN5L (5 m) 16.4' / CA-CN10L (10 m) 32.8' / CA-CN17L (17 m) 55.8'


L-shaped connector cable for high-speed cameras
CA-CH3L (3 m) 9.8' / CA-CH5L (5 m) 16.4' / CA-CH10L (10 m) 32.8'

	A	B	C	D	E	F	G
L-shaped connector camera cable CA-CNxL	14 0.55"	38 1.50"	30 1.18"	6.1 0.24"	42 1.65"	33 1.30"	29.7 1.17"
L-shaped connector cable for high-speed cameras CA-CHxL	14 0.55"	38 1.50"	30 1.18"	7.2 0.28"	41 1.61"	31 1.22"	31.4 1.24"

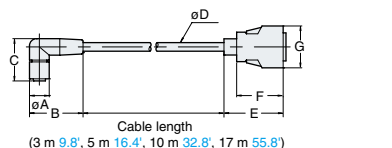


	A	B	C	D	E	F
CA-CNx	12.5 0.49"	43 1.69"	6.1 0.24"	42 1.65"	33 1.30"	29.7 1.17"
CA-CNxR	14.0 0.55"	54 2.13"	6.6 0.26"	42 1.65"	33 1.30"	29.7 1.17"
CA-CHx	12.5 0.49"	43 1.69"	7.2 0.28"	41 1.61"	31 1.22"	31.4 1.24"
CA-CHxR	14.0 0.55"	54 2.13"	7.6 0.30"	41 1.61"	31 1.22"	31.4 1.24"


Camera CA-H2100C/CA-H2100M

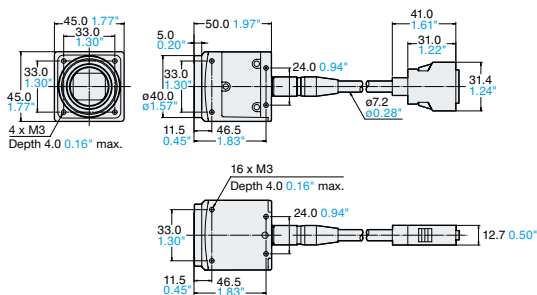


When using the mounting bracket

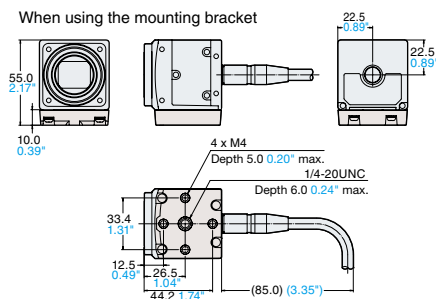


Camera CA-HX500C/CA-HX500M/CA-HX200C/CA-HX200M

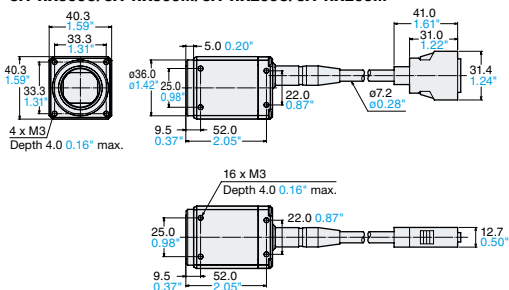


When using the mounting bracket

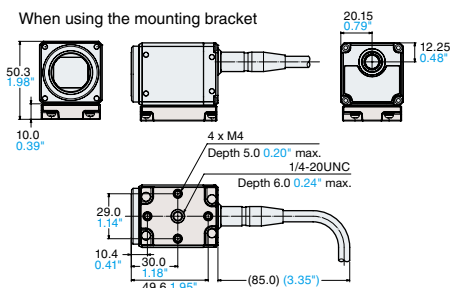


Camera CA-HX048C/CA-HX048M

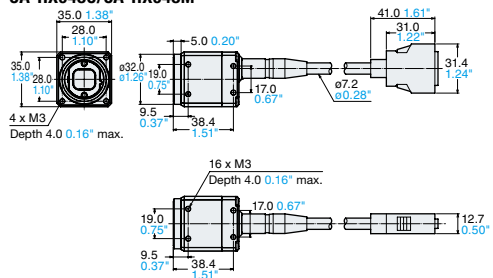


When using the mounting bracket

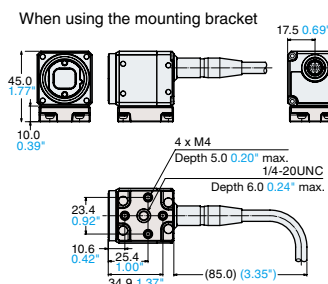


Touch panel LCD monitor CA-MP120T

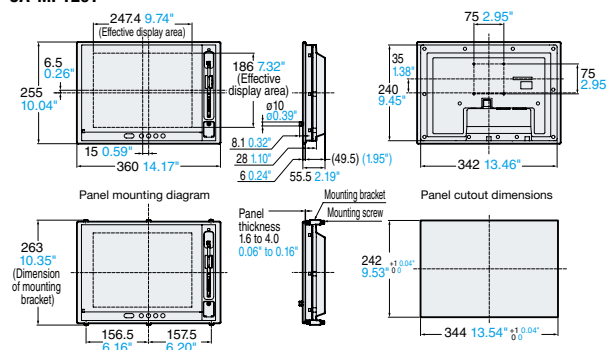


LCD monitor CA-MP120

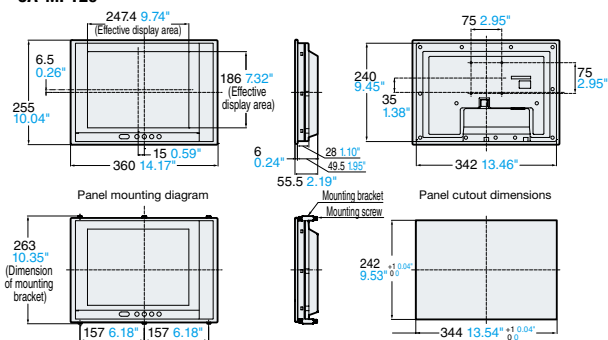

Monitor stand OP-87262

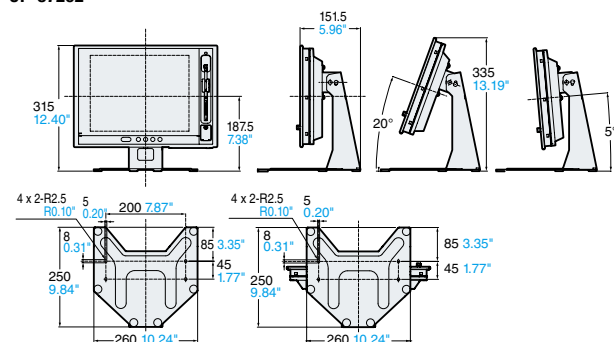

Dedicated 24 VDC power supply CA-U4

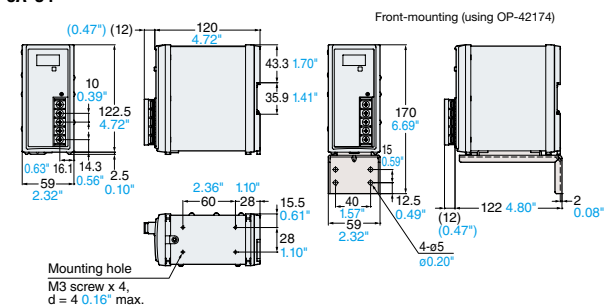

PRE-SALES SUPPORT

When looking for a vision system to solve your application needs, we understand it can be stressful and risky. This is why we offer different ways to make sure your application is solved and implemented properly.

Direct Sales



KEYENCE's philosophy is to work closely with the customer to provide the best satisfaction available. This is why we do not sell through distributors, but instead work with the customers directly. Each of our sales engineers are fully trained on our vision systems and are experts at what they are selling. This means they can provide a complete solution to you before the sale and support it after the sale. This is the advantage of Direct Sales.

Vision Testing



Let us prove that we can provide you with a complete solution. Our sales engineers will do testing on your application to fully understand the details of the project. We also have a team of application engineers for those tough applications where they can provide even further expertise to solve the application.

Trial Units

Take our vision systems on a test drive! We offer trial units to our customers at no cost. This will allow us to prove to you that our vision system will provide you a stable solution and peace of mind when you decide to use KEYENCE vision systems for your application.

System Integrator Program



We have a list of preferred system integrators who have been specifically trained on KEYENCE vision systems. They are fully capable of integrating our vision systems in a wide range of facilities and have experience doing so. We can recommend their service if the application is complex or if you need to implement the solution rapidly.

AFTER SALES SUPPORT


Here at KEYENCE we pride ourselves on the quality of our after sales support on all our products and the XG Series is no exception. We offer many different types of support to assist with using KEYENCE's range of machine vision systems. In addition to our technically trained workforce, support services include: free training workshops, free software upgrades, example programs, technical guides, online resources and dedicated technical support.

XG User Support Webpage www.visionsystem.com

In addition to the standard KEYENCE websites, there is a dedicated XG Series support website that is specifically designed for providing answers to questions, example programs and software to assist any XG Series user.


Get Familiar with the XG

Our XG Getting Started movies will help you quickly get accustomed to the XG Series. These videos are informative and easy to follow and cover everything from programming vision tools to setting up I/O!

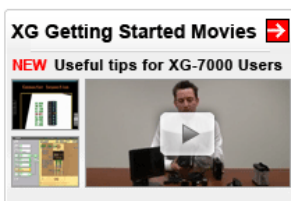

Free remote support and testing with the XG Simulator+

The XG Simulator+ software can be downloaded free of charge from the XG User Support webpage enabling remote testing and support of any XG program. By emailing images and setting files directly to KEYENCE technical support, we can answer any questions you may have concerning your application or program. New applications can also be sent directly to KEYENCE for free testing and evaluation by dedicated application engineers.

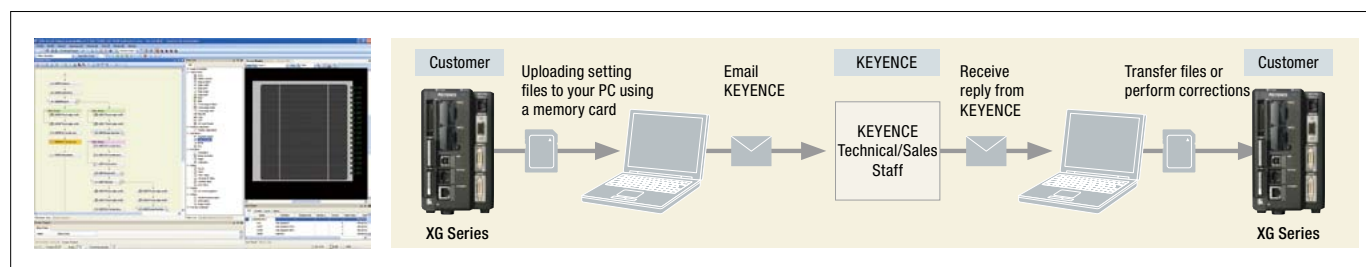

Free XG Series Workshops www.visionsystem.com

KEYENCE offers free training workshops designed to increase the skills and capability of users that would like to implement the XG Series for their vision application needs. Contact KEYENCE directly for more details.



XG Series Training Course

Aimed at experienced vision users wanting to learn how to fully take advantage of the advanced functionality of the XG.

This training course is designed to develop XG machine vision knowledge, allowing users to fully implement the XG for a wide variety of applications.



CALL
TOLL
FREE

TO CONTACT YOUR LOCAL OFFICE
1-888-KEYENCE
1 - 8 8 8 - 5 3 9 - 3 6 2 3

www.keyence.com



SAFETY INFORMATION

Please read the instruction manual carefully in order to safely operate any KEYENCE product.

KEYENCE CORPORATION OF AMERICA

Corporate Office 669 River Drive, Suite 403, Elmwood Park, NJ 07407 PHONE: 888-539-3623 FAX: 855-539-0123 E-mail: keyence@keyence.com

Sales & Marketing Head Office 1100 North Arlington Heights Road, Suite 210, Itasca, IL 60143 PHONE: 888-539-3623 FAX: 855-539-0123

■ Regional offices	CO Denver	IN Indianapolis	MI Detroit	NJ Elmwood Park	OH Cincinnati	PA Pittsburgh	TX Austin	WI Milwaukee
AL Birmingham	FL Tampa	KS Kansas City	MI Grand Rapids	NY Rochester	OH Cleveland	SC Greenville	TX Dallas	
CA N. California	GA Atlanta	KY Louisville	MN Minneapolis	NC Charlotte	OR Portland	TN Knoxville	VA Richmond	
CA Los Angeles	IL Chicago	MA Boston	MO St. Louis	NC Raleigh	PA Philadelphia	TN Nashville	WA Seattle	

KEYENCE CANADA INC.

Head Office PHONE: 905-366-7655 FAX: 905-366-1122 E-mail: keyencecanada@keyence.com
Montreal PHONE: 514-694-4740 FAX: 514-694-3206 **Windsor** PHONE: 905-366-7655 FAX: 905-366-1122

KEYENCE MEXICO S.A. DE C.V.

PHONE: +52-81-8220-7900 FAX: +52-81-8220-9097
E-mail: keyencemexico@keyence.com

KA1-1094

The information in this publication is based on KEYENCE's internal research/evaluation at the time of release and is subject to change without notice.
Copyright (c) 2014 KEYENCE CORPORATION. All rights reserved. XG-KA-GC3-US 1104-1 [611770] Printed in Japan

